

Marine Installation Manual

X52DF-2.1

Issue **2025-11**

© 2025 WinGD Ltd. — All rights reserved

No part of this publication may be reproduced or copied in any form or by any means (electronic, mechanical, graphic, photocopying, recording, taping or other information retrieval systems) without the prior written permission of the copyright holder. WinGD Ltd. makes no representation, warranty (express or implied) in this publication and assumes no responsibility for the correctness, errors or omissions of information contained herein. Information in this publication is subject to change without notice.

NO LIABILITY, WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL, IS ASSUMED WITH RESPECT TO THE INFORMATION CONTAINED HEREIN. THIS PUBLICATION IS INTENDED FOR INFORMATION PURPOSES ONLY.

List of Changes

The following tables reflect the changes and updates to the contents of this document. Minor changes in layout or language are not taken into consideration.

Revision:	06	Date of issue:	2025-11	
Location of change				Subject
1 Engine Summary				Sulphur limit for HFO specified
1.3 Fuel operating modes				Section updated, Figure 1-1, Figure 1-2 and Table 1-7 updated The iCER system updated
1.3.3 Operation in mixed fuel modes				Combustion Stability Mode updated Figure 1-6 updated
1.3.4 Changeover between operating modes				Section updated
2.5 Power range limits				Speed limits
2.6 Power range limits with PTO installation for an FPP				Methods of the PTO incorporation updated
3.4 Engine foundation and seating				Sub-chapter structure reworked
3.10 Twin-engine propulsion				Note updated
4.2 The iCER technology				Section reworked and updated
4.5.5 Cylinder Lubricating Oil system				Cylinder lubricating oil supply updated
4.5.6 Maintenance and treatment of Lubricating Oil				Section updated
4.8 Fuel oil system				Figures and table updated with sulphur limit for HFO
4.10 Leakage collection system and washing devices				Bottom-drained sludge oil trap solutions are removed
4.11 Exhaust gas system				Explosion relief devices removed
4.12.2 Ventilation arrangement				Direct engine ventilation system layout updated

Revision:	05	Date of issue:	2023-03	
Location of change				Subject
1.2.1 Engine rating field - rating points				Performance data removed from Table 1-4 (provided by GTD)
3 Engine Installation				Whole chapter restructured
3.1.1 Drawings and 3D CAD model availability				New design groups added from the 3D engine outline and yard connection concept
3.10 Twin-engine propulsion				New section added
4.2.3 The iCER drainage system				iCER drainage figures simplified with the removal of standby pumps
4.4 Lubricating oil systems				Section updated Removal of iCAT as an option
4.4.7 Drain tank Inclination angles				Tables 4-5, 4-6, 4-7 updated
4.13.5 PTO application				New section added

Revision:	05	Date of issue:	2023-03	
Location of change			Subject	
5.8 The intelligent combustion control			New section added	
6.1.2 Countermeasures for second order vertical mass moments			Further information on second order moment balancing added	
6.2.2 Reduction of lateral vibration Electrically-driven compensator(s)			Section updated	
9.2 List of acronyms			Table 9-2 updated	

Revision:	04	Date of issue:	2022-12	
Location of change			Subject	
1 Engine Summary			All relevant iCER technology content updated Principle engine dimensions and weights removed (shown in Chapter 3)	
3.1.2 Crane requirements			Crane hoisting speed updated and horizontal speed added	
3.2.3 Ancillary systems design parameters			Exhaust gas back pressure specifications updated	
3.4.2 Minimum requirements for escape routes			Minimum requirements for escape routes on the platforms updated	
4.2.4 The SAC wetting system			New section added	
4.9.5 The SAC washing system			New section added	

Revision:	03	Date of issue:	2022-09	
Location of change			Subject	
1 Engine Summary			Pilot fuel energy share updated Transfer between operating modes updated	
1.2.2 Principal engine dimensions and weights			Figure 1-2 updated	
1.3.3 Operation in a mixed fuel mode Combustion stability mode			Emission standard for NO _x certification updated to Tier III for CSM	
3.1 Engine dimensions and masses			Figure 3-1 updated	
3.2.3 Ancillary systems design parameters			Section update of exhaust gas back pressure requirements	
4.2.3 The iCER drainage system			Section updated to include iCER sludge amount and handling	
4.2.4 The iCER exhaust gas system			Section updated to include further details for the purge line	

Revision:	02	Date of issue:	2022-06	
Location of change			Subject	
1 Engine Summary			Restructured to include the iCER diesel Tier III mode option. The two turbocharger iCER arrangement and the 8-cylinder execution added. All relevant iCER technology content updated.	
3.2.4 Electrical power requirement			Table 3-2 updated	
3.5 Engine foundation and seating			Whole section restructured and content updated	
4.1 Twin-engine installation			Table 4-1 updated	

Revision:	02	Date of issue:	2022-06	
Location of change				Subject
4.2 The iCER technology				The iCER diesel Tier III mode option added. The two turbocharger iCER arrangement and the 8-cylinder execution added. Whole section restructured and content updated.
4.4.5 Cylinder lubricating oil system				Heating cable specification in Table 4-4 updated
4.4.7 Drain tank Inclination angles				Tables 4-5, 4-6, 4-7 updated
4.5.8 Fuel gas venting Ventilation of double-wall fuel gas piping				Rules for the installation of the ventilation fan have been refined and updated
4.10 Exhaust gas system Explosion relief devices Single turbocharger exhaust gas pipe arrangement				Section updated to align with current regulations. Bypass arrangement for single turbocharger application omitted.
4.12.2 Fluid velocities and flow rates				Further information added
4.13.5 PTO testing				PTO testing information added
5.7 WinGD Integrated Digital Expert (WiDE)				General update of the product description and customers' benefits. Figure 5-8 updated.
7 Engine Emissions				Exhaust gas emissions comparisons and calculations criteria added. Regulations re-fined and updated.
7.1.5 iCER diesel Tier III mode				The iCER diesel Tier III mode option added
9.2 List of acronyms				Table 9-2 updated

Revision:	01	Date of issue:	2021-11	
Location of change				Subject
1.1 Engine capability and features				Table 1-3 added to list the iCER system features and components
1.3.1 Operation in gas mode Shaft power meter requirements				Subsection retitled and content added
3.1.2 Crane requirements				Crane speed information updated
3.2.4 Electrical power requirement				Table 3-2 updated: A smaller electric motor for the pilot fuel pump applied
4 Ancillary Systems				Whole chapter restructured
4.9.4 The iCER drainage system				Content updated
4.13 PTO, PTI, PTH and primary generator applications				PTI option on free end removed
4.13.2 Arrangements for PTO, PTI, PTH and primary generator				Figure 4-61 and Table 4-17 updated
5.4.2 Recommended manoeuvring characteristics FPP manoeuvring steps and warm-up times				Correction to note: Acceleration above FULL SEA 2 speed included
6.2.2 Reduction of lateral vibration				Section restructured and content updated

Revision:	--	Date of issue:	2021-07	
Location of change				Subject
--				First edition

Table of Contents

List of Changes	0-1
0 Preface	0-1
Marine Installation Manual Introduction	0-1
Explanation of symbols in the Marine Installation Manual	0-2
Marine Installation Drawing Set	0-3
General Technical Data	0-4
Instruction Manual	0-4
1 Engine Summary	1-1
1.1 Engine capability and features	1-2
Special engine features	1-3
1.2 Primary engine data	1-5
1.2.1 Engine rating field: rating points	1-6
1.3 Fuel operating modes	1-7
1.3.1 Operation in gas mode	1-9
Shaft power meter requirements	1-10
The iCER system	1-10
1.3.2 Operation in diesel mode	1-11
The Flex system	1-11
iCER diesel Tier III mode	1-12
1.3.3 Operation in mixed fuel modes	1-13
Combustion Stability Mode	1-13
Fuel Sharing Mode	1-14
1.3.4 Changeover between operating modes	1-15
Transfers and gas trips	1-16
2 Engine Power and Speed	2-1
2.1 Introduction to power and speed	2-1
2.2 Engine rating field	2-2
Rating points	2-2
2.3 Influence of propeller diameter and revolutions	2-3
2.4 Power range	2-4
Propeller curves and operational points	2-4
Sea trial power	2-5
Sea Margin	2-5
Light Running margin	2-5
Continuous Service Rating	2-5
Engine Margin	2-6
Contracted Maximum Continuous Rating	2-6
2.5 Power range limits	2-7
2.6 Power range limits with PTO installation for an FPP	2-11
Method 1 of the PTO incorporation	2-11
Method 2 of the PTO incorporation	2-14
2.7 Prohibited operation area	2-15
Prohibited operation area for different speed rated engines	2-17
2.8 CPP requirements for the Propulsion Control System	2-20
3 Engine Installation	3-1
3.1 Engine dimensions and masses	3-1
3.1.1 Drawings and 3D CAD model availability	3-3

3.1.2	Dismantling dimensions	3-3
3.1.3	Crane requirements	3-3
3.1.4	Thermal expansion between turbocharger and exhaust gas piping	3-4
3.1.5	Content of fluids in the engine	3-5
3.2	Engine outline views	3-6
3.3	Platform outline views	3-6
3.3.1	Minimum requirements for escape routes	3-6
3.4	Engine foundation and seating	3-7
3.4.1	Engine load and force transmission	3-7
3.4.2	Engine installation and fixation	3-8
3.5	Assembly	3-10
3.5.1	Assembly of subassemblies	3-10
3.5.2	Installation of a complete engine	3-11
3.5.3	Installation of an engine from assembled subassemblies	3-11
3.5.4	Installation of an engine in ship on slipway	3-11
3.6	Engine and shaft alignment	3-12
3.6.1	Instructions and limits	3-12
3.6.2	Tools	3-12
3.7	Engine coupling	3-13
3.7.1	Design	3-13
3.7.2	Machining and fitting of coupling bolts	3-13
3.7.3	Tightening	3-13
3.7.4	Installation drawing	3-13
3.8	Engine stays	3-14
3.9	Propulsion shaft earthing	3-15
3.9.1	Preventive action	3-15
3.9.2	Earthing device	3-15
3.10	Twin-engine propulsion	3-18
3.11	Fire protection	3-19
3.12	Conditions and requirements	3-20
3.12.1	Pressure and temperature ranges	3-20
3.12.2	Operating conditions	3-20
	Reference conditions	3-20
	Design conditions	3-20
3.12.3	Ancillary systems design parameters	3-21
3.12.4	Description of the back pressure specifications	3-22
3.12.5	Electrical power requirement	3-23
4	Ancillary Systems	4-1
4.1	Twin-engine installation	4-2
4.2	The iCER technology	4-4
4.2.1	The iCER description	4-6
4.2.2	The EGC circulation water system	4-8
4.2.3	The iCER drainage system	4-9
	Unified arrangements of the iCER drainage system valid for all iCER operating mode options	4-10
4.2.4	The SAC wetting system	4-13
4.2.5	The iCER exhaust gas system	4-14
4.2.6	Heat recovery (economiser)	4-17
	Different routing concepts	4-17
	Additional economiser (optional)	4-19
4.3	Cooling water system	4-20
4.3.1	Low-temperature circuit	4-21
	Arrangement 1	4-22

	Arrangement 2	4-22
	Arrangement 3	4-23
	Low-temperature circuit components	4-24
4.3.2	High-temperature circuit	4-25
	High-temperature circuit components	4-26
4.3.3	Pre-heating	4-28
	Pre-heating from cooling water systems	4-28
	Pre-heating by direct water circulation	4-28
4.3.4	Freshwater generator	4-29
4.3.5	Cooling water treatment	4-30
4.3.6	General recommendations for the cooling water system design	4-31
4.3.7	EGC circulation water system	4-31
4.4	Lubricating Oil systems	4-32
4.4.1	Lubricating Oil requirements	4-32
4.4.2	Main Lubricating Oil system	4-32
	Main Lubricating Oil system components	4-33
	System oil	4-35
4.4.3	Flushing the Lubricating Oil system	4-35
4.4.4	Lubrication for turbochargers	4-35
4.4.5	Cylinder Lubricating Oil system	4-36
	Service tank and storage tank	4-38
	Electrical trace heating for ship side cylinder LO piping	4-39
4.4.6	Maintenance and treatment of Lubricating Oil	4-40
4.4.7	Drain tank	4-41
4.5	Fuel gas system	4-46
4.5.1	Safety considerations	4-46
4.5.2	Operating principles	4-47
	The lean-burn concept	4-47
4.5.3	Gas specifications	4-49
	Methane Number dependent engine output	4-50
	MN calculation	4-50
4.5.4	Fuel Gas Supply System	4-51
	Master gas fuel engine valve	4-51
	Tank type	4-51
	Supplying fuel gas	4-54
	Re-liquefaction process	4-58
4.5.5	Fuel gas supply pressure	4-60
4.5.6	On-engine integrated gas pressure regulation unit	4-65
4.5.7	Off-engine Gas Valve Unit	4-67
4.5.8	Fuel gas venting	4-69
	Ventilation of double-wall fuel gas piping	4-69
4.5.9	Purging by inert gas	4-70
4.5.10	Fuel gas leak test	4-72
4.6	Pilot fuel oil system	4-73
4.7	Fuel oil system	4-76
4.7.1	Fuel oil system components	4-76
	Feed pump: Low-pressure fuel oil	4-77
	Pressure regulating valve	4-78
	Mixing unit	4-78
	Booster pump: High-pressure fuel oil	4-80
	End-heater	4-80
	Viscometer	4-81
	MDO/MGO heat exchanger	4-81
	Fuel oil filters: Arrangement 'A'	4-82

	Fuel oil filter: Arrangement 'B'	4-87
4.7.2	Fuel oil system with only MDO/MGO or MGO	4-88
	Fuel oil feed pump	4-89
	Fuel oil heat exchanger	4-89
	Fuel oil filter	4-89
4.7.3	Flushing the fuel oil system	4-89
4.7.4	Fuel oil treatment	4-89
	Settling tanks	4-89
	Service tanks	4-90
	Centrifugal fuel oil separators	4-90
4.7.5	Pressurised fuel oil system	4-91
4.7.6	Fuel oil specification.	4-92
4.7.7	Fuel oil viscosity-temperature dependency	4-92
4.8	Air supply system	4-93
4.8.1	Capacities of air compressor and receiver.	4-94
4.8.2	System specification	4-94
	Starting air compressors	4-94
	Starting air receivers	4-94
4.8.3	Control air	4-95
4.8.4	Service and working air	4-95
4.9	Leakage collection system and washing devices	4-96
4.9.1	Sludge oil trap	4-96
	Constantly-drained sludge oil trap with separate sludge accumulation	4-97
4.9.2	Draining of exhaust uptakes	4-99
4.9.3	Air vents.	4-99
4.9.4	iCER drainage system.	4-99
4.9.5	SAC washing system.	4-100
	Offline SAC washing system (external system).	4-100
4.10	Exhaust gas system	4-101
4.10.1	The iCER exhaust gas system.	4-101
4.10.2	Heat recovery (economiser).	4-101
4.11	Engine room ventilation	4-102
4.11.1	Ventilation requirements	4-102
4.11.2	Ventilation arrangement.	4-103
	Arrangement 1: Engine room ventilation system	4-104
	Arrangement 2: Direct engine ventilation system	4-105
4.11.3	Air intake quality.	4-106
4.11.4	Outside ambient air temperature	4-107
4.12	Piping	4-108
4.12.1	Pipe connections	4-108
4.12.2	Fluid velocities and flow rates	4-108
4.13	PTO, PTI, PTH and primary generator applications	4-109
4.13.1	Requirements.	4-109
4.13.2	Arrangements for PTO, PTI, PTH and primary generator	4-110
4.13.3	Application constraints.	4-111
4.13.4	Service conditions	4-113
4.13.5	PTO application	4-115
	Further services for evaluation of engine performance and X-EL advisory services	4-116
4.13.6	PTO testing	4-117
5	Engine Automation	5-1
5.1	DENIS	5-1
5.2	DENIS concept	5-2

5.2.1	Interface definition	5-2
5.2.2	Approved Propulsion Control Systems	5-2
5.3	DENIS specification	5-3
5.3.1	DENIS interface specification	5-3
5.3.2	DENIS propulsion control specification	5-3
5.4	Propulsion Control Systems	5-4
5.4.1	Functions of the Propulsion Control System	5-6
	Remote Control System (RCS)	5-6
	Safety system	5-6
	Telegraph system	5-6
	Local manual control	5-6
	ECR manual control panel	5-6
	Options	5-6
5.4.2	Recommended manoeuvring characteristics	5-8
5.5	Alarm and Monitoring System	5-11
5.5.1	Integrated solution	5-11
5.5.2	Split solution	5-11
5.6	Alarm sensors and safety functions	5-12
5.6.1	Signal processing	5-12
5.6.2	Requirements of WinGD and classification societies	5-12
5.7	WinGD Integrated Digital Expert (WiDE)	5-13
5.7.1	Data collection	5-13
5.7.2	Engine diagnostic module	5-14
5.7.3	WiDE installation process	5-15
5.8	Intelligent Combustion Control	5-16
5.8.1	ICC control functions	5-16
5.8.2	ICC activation modes	5-16
5.8.3	ICC data	5-17
6	Engine Dynamics	6-1
6.1	External mass forces and moments	6-2
6.1.1	Balancing of mass forces and moments	6-2
6.1.2	Countermeasures for 2nd order vertical mass moments	6-3
	Integrated ELectrical BALancer (iELBA)	6-4
	Electrically-driven compensator (external compensator)	6-5
	Power Related Unbalance	6-6
6.2	External lateral forces and moments	6-7
6.2.1	Lateral vibration types	6-8
	H-type vibration	6-8
	X-type vibration	6-8
6.2.2	Reduction of lateral vibration	6-9
	Lateral stays	6-9
	Determining the minimum number of required lateral stays	6-11
	Electrically-driven compensator(s)	6-14
6.3	Longitudinal vibration (pitching)	6-15
	Reduction of longitudinal vibration (5-cylinder engines)	6-15
6.4	Torsional vibration	6-17
6.4.1	Reduction of torsional vibration	6-18
	Low-energy vibrations	6-18
	High-energy vibrations	6-18
6.4.2	PTO/PTI systems effect on torsional vibration	6-19
6.5	Axial vibration	6-20
	Reduction of axial vibration	6-20
6.6	Whirling vibration	6-21

6.7	Hull vibration	6-22
6.8	Countermeasures for dynamic effects	6-23
6.8.1	External mass moments and vibrations	6-23
6.8.2	Synchro-Phasing System in twin engines	6-23
	Concept	6-24
	Components and control	6-25
	Operating modes and restrictions	6-25
6.9	Order forms for vibration calculation and simulation	6-27
7	Engine Emissions	7-1
7.1	Exhaust gas emissions	7-1
7.1.1	Regulation and calculation criteria for NO _x emissions	7-2
7.1.2	Regulation and calculation criteria for SO _x emissions	7-3
7.1.3	Regulation and calculation criteria for CO ₂ emissions	7-4
7.1.4	PM emissions	7-5
7.1.5	iCER diesel Tier III mode	7-5
7.2	Engine noise	7-6
7.2.1	Air-borne noise	7-6
7.2.2	Exhaust noise	7-8
7.2.3	Structure-borne noise	7-10
8	Engine Dispatch	8-1
8.1	Transportation of engines as part assemblies	8-1
8.2	Protection of disassembled engines	8-1
8.3	Removal of rust preventing oils after transportation	8-1
8.3.1	Internal parts	8-1
8.3.2	External parts	8-1
9	Appendix	9-1
9.1	Classification societies	9-1
9.2	List of abbreviations	9-2
9.3	SI dimensions for internal combustion engines	9-4
9.4	Approximate conversion factors	9-6

List of Tables

1-1	Engine summary values for Maximum Continuous Rating	1-1
1-2	Principal engine features and technologies	1-3
1-3	The iCER technology	1-4
1-4	Rating points	1-6
1-5	Overview of the available operating modes and technologies	1-7
1-6	Approximate fuel split (energy-based) for different operating modes over load range	1-8
1-7	Shaft power meter parameters	1-10
2-1	Line 5 coefficients	2-9
2-2	Speed limits	2-9
2-3	Line 6 coefficients	2-10
2-4	Line 10 coefficients	2-13
3-1	Engine dimensions and masses	3-1
3-2	Design groups of shipyard drawings and 3D CAD models	3-3
3-3	Recommended quantities of fire extinguishing medium	3-19
3-4	Electrical power requirement	3-23
4-1	Common and independent systems in twin-engine installations	4-2
4-2	Recommended specifications for raw water	4-30
4-3	Heating cable specification	4-39
4-4	Minimum inclination angles for full operability of the engine (1)	4-43
4-5	Minimum inclination angles for full operability of the engine (2)	4-44
4-6	Minimum inclination angles for full operability of the engine (3)	4-45
4-7	Gas specifications	4-49
4-8	Purity of inert gas (engines with iGPR)	4-70
4-9	Purity of inert gas (engines with GVU)	4-70
4-10	Specification of the pilot fuel oil filter on the system side	4-75
4-11	Specification of automatic self-cleaning filter in feed system	4-84
4-12	Specification of automatic self-cleaning filter in booster system	4-85

4-13	Specification of duplex filter in booster system	4-86
4-14	Control air flow capacities	4-95
4-15	Guidance for air filtration	4-106
4-16	PTO/PTI/PTH arrangements	4-111
4-17	Possible options	4-111
4-18	Influence of options on engineering	4-112
5-1	Suppliers of Remote Control Systems	5-4
5-2	Recommended manoeuvring steps and warm-up times for FPP	5-9
5-3	Recommended manoeuvring steps and warm-up times for CPP	5-10
5-4	Additional class requirements for alarm sensors and safety functions	5-12
6-1	Countermeasures for external mass moments	6-23
6-2	Countermeasures for lateral and longitudinal vibrations	6-23
6-3	Countermeasures for torsional and axial vibrations of the shafting	6-23
9-1	List of classification societies	9-1
9-2	List of abbreviations	9-2
9-3	SI dimensions	9-4
9-4	Conversion factors	9-6

List of Figures

1-1	Power/speed range	1-5
1-2	Operating modes (as per ISO conditions)	1-8
1-3	Gas mode	1-9
1-4	The Flex system parts	1-11
1-5	Example of diesel fuel ratio during active CSM	1-13
1-6	FSM: Available operating window	1-14
1-7	FSM: Energy amount of different ratios of fuel	1-15
1-8	The fuel transfers and gas trips	1-16
2-1	Rating field	2-2
2-2	Propeller curves and operational points	2-4
2-3	Power range limits	2-7
2-4	Power range diagram of an engine with a PTO	2-11
2-5	Power range limits for PTO operation: Method 1	2-12
2-6	Power range limits for the PTO operation: Method 2	2-14
2-7	The prohibited operation area (CMCR speed = $R1-R2$)	2-15
2-8	Calculating the prohibited operation area for the CMCR speed	2-17
2-9	The prohibited operation area (CMCR speed = 85% of $R1-R2$)	2-18
2-10	The prohibited operation area (CMCR speed = $R3-R4$)	2-19
3-1	Engine dimensions	3-1
3-2	Thermal expansion, dim. X, Y, Z	3-4
3-3	Minimum requirements for headroom	3-6
3-4	Force transmission to the engine foundation	3-7
3-5	Foundation bolting	3-8
3-6	Welded type	3-8
3-7	Proposed designs for water-tight bolting	3-9
3-8	Typical shaft earthing arrangement	3-16
3-9	Typical shaft earthing with condition monitoring facility	3-17
3-10	Example of a shaft-locking device	3-18

4-1	LT cooling water system for twin-engine installation	4-3
4-2	Overview of the components for the iCER system with one turbo-charger	4-4
4-3	Overview of the components for the iCER system with two turbo-chargers	4-5
4-4	Overview of the components for the compact arrangement of the iCER system with one turbocharger	4-5
4-5	The iCER system with one turbocharger and the exhaust gas return pipe routed to the turbocharger connection from above	4-6
4-6	The iCER system with two turbochargers and the exhaust gas return pipe routed to the turbocharger connection from below	4-6
4-7	The EGC circulation water system (off-engine option)	4-8
4-8	The iCER drainage system valid for all iCER operating mode options	4-10
4-9	The SAC wetting system with the wetting water tank arrangement	4-13
4-10	iCER exhaust gas system principle	4-14
4-11	Example of an exhaust gas piping arrangement with one turbocharger	4-15
4-12	Example of an exhaust gas piping arrangement with two turbochargers	4-16
4-13	Example of an exhaust gas piping arrangement for the compact arrangement with one turbocharger	4-16
4-14	The short route arrangement	4-17
4-15	The long route arrangement	4-18
4-16	Arrangement of the additional economiser	4-19
4-17	Separate HT cooling water circuit	4-20
4-18	LT cooling water circuit: single set-point temperature	4-22
4-19	LT cooling water circuit: dual set-point temperatures	4-22
4-20	Separate SAC and LT cooling circuits	4-23
4-21	HT cooling water circuit	4-25
4-22	Pre-heating power requirement per cylinder	4-29
4-23	LO system	4-32
4-24	Dual cylinder LO installation, enabling independent gas and liquid fuel (max. 0.5% m/m sulphur) operation with a manual changeover valve	4-37
4-25	Single grade cylinder LO installation	4-38
4-26	Trace heating cable arrangement	4-39

4-27	Dimensioning and filling process of LO drain tank	4-41
4-28	Arrangement of vertical LO drains for 6-cylinder engines	4-42
4-29	Inclination angles	4-42
4-30	Lean burn with pilot ignition	4-48
4-31	Lean-burn operation window	4-48
4-32	Maximum achievable power	4-50
4-33	Section view of an integrated membrane tank	4-51
4-34	Section view of a free-standing Type A tank	4-52
4-35	Section view of a free-standing Type B tank of moss design	4-52
4-36	Section view of different free-standing Type C tanks installed below the deck	4-53
4-37	Type C tank on the deck of a vessel	4-53
4-38	Pressurised Type C tank solution with NBOG handling by the gensets	4-55
4-39	Pressurised Type C tank solution with NBOG handling by the gensets and the main engine	4-56
4-40	Non-pressurised tank solution, drawn for an LNGC	4-57
4-41	An LNG sub-cooler within an integrated tank	4-59
4-42	Design fuel gas supply pressure requirements	4-60
4-43	Fuel gas supply pressure control at the engine inlet (engines with iGPR)	4-63
4-44	Fuel gas supply pressure control at the GVU inlet (engines with GVU)	4-63
4-45	Fuel gas pressure level definitions	4-64
4-46	FGSS with the iGPR	4-65
4-47	The GVU-OD™ from Wärtsilä	4-67
4-48	The GVU-ED™ from Wärtsilä	4-68
4-49	Gas leak test sequence (engines with iGPR)	4-72
4-50	Gas leak test sequence (engines with GVU)	4-72
4-51	Pilot fuel oil system	4-73
4-52	Pilot fuel high-pressure system	4-74
4-53	Fuel oil system	4-76
4-54	Mixing unit	4-79
4-55	MDO/MGO heat exchanger	4-81

4-56	Mesh size difference between absolute and nominal	4-82
4-57	Fuel oil filter arrangement 'A'	4-83
4-58	Fuel oil filter arrangement 'B'	4-87
4-59	Fuel oil system — Arrangement with only MDO/MGO or MGO	4-88
4-60	Fuel oil viscosity-temperature diagram	4-92
4-61	Air supply system	4-93
4-62	Design proposal of the WinGD sludge oil trap	4-98
4-63	Arrangement of automatic water drain	4-99
4-64	Offline SAC washing system (external system)	4-100
4-65	Determination of exhaust pipe diameter	4-101
4-66	Ventilation system arrangement 1: Engine room ventilation system	4-104
4-67	Ventilation system arrangement 2: Direct engine ventilation system	4-105
4-68	Air filter size (example for 8-cylinder engine)	4-107
4-69	Arrangements for PTO, PTI, PTH	4-110
4-70	FPP with mandatory frequency converter	4-113
4-71	CPP in combination with an optional frequency converter	4-113
4-72	CPP in constant speed operation without frequency converter	4-114
4-73	CPP with two fixed operation speeds without frequency converter	4-114
4-74	Maximum power increase rate for PTO application in gas mode	4-115
4-75	Maximum power decrease rate for PTO application in gas mode	4-116
5-1	Engine automation architecture	5-1
5-2	Engine management and automation concept	5-2
5-3	Remote Control System	5-5
5-4	Propulsion control	5-7
5-5	Manoeuvring speed/power settings for FPP/ CPP installations	5-8
5-6	Full sea load steps in FPP load-up program	5-9
5-7	Full sea load steps in CPP load-up program	5-10
5-8	WiDE data collection and analysis process	5-13
5-9	WiDE installation process	5-15
5-10	ICC system	5-17

6-1	External mass forces and moments	6-2
6-2	Major components and details of the iELBA	6-4
6-3	Location of an electrically-driven compensator	6-5
6-4	Forces through the engine	6-7
6-5	Lateral vibration: X-type and H-type	6-8
6-6	Lateral stays shifting the resonance frequency above nominal speed	6-9
6-7	General arrangement of hydraulic type stays for one-side installation	6-10
6-8	General arrangement of hydraulic type stays for both-side installation	6-10
6-9	Twin-engine installations with two standard engines	6-12
6-10	Variants of twin-engine installations with a standard and a left engine	6-12
6-11	Engine stays arrangement on the exhaust side	6-13
6-12	Engine stays arrangement on the engine fuel side	6-13
6-13	Engine stays arrangement on both engine sides	6-14
6-14	Arrangement of longitudinal stays	6-15
6-15	Vibration dampers (spring type and viscous type).	6-19
6-16	Example of axial vibration damper	6-20
6-17	Resulting vibration from SPS combinations	6-24
6-18	Synchro-Phasing System	6-25
7-1	Emissions comparison between the X-DF2.0, X-DF and diesel engines	7-1
7-2	Speed dependent maximum allowable average of NO _x emissions.	7-2
7-3	Sulphur limits introduced by IMO according to MARPOL Annex VI.	7-3
7-4	Sound pressure level at 1 m distance from the engine.	7-7
7-5	Exhaust noise reference point	7-8
7-6	Sound pressure level at funnel top of exhaust gas system.	7-9
7-7	Structure-borne noise level at engine feet vertical.	7-10

0 Preface

WinGD provides a range of manuals and tools to help its customers at all stages of a project. From engine design to installation and maintenance, WinGD provides extensive help and support.

This manual is the initial guide to the installation process for this specific engine, providing an overview of different topics which need to be considered in the project and the engine installation phase. In parallel with this manual the drawing sets and software tools provide detailed values and ranges to help finalise the installation process. Each engine also has its own range of operation and maintenance manuals to support the complete life cycle of the engine, following the design and installation phases.

Marine Installation Manual Introduction

The Marine Installation Manual (MIM) contains all information that is necessary in the engine design and installation phases. The MIM provides an essential overview for project and design personnel. Each chapter contains detailed information for design engineers and naval architects, enabling them to optimise plant components and machinery space, and to carry out installation design work.

The MIM must not be considered as a specification. The build specification is subject to the laws of the country of registration and the rules of the classification society selected by the owners. Guidelines for the installation and operation from the maker's side must also be observed. The same applies to the engine requirements and any third-party maker's requirements, they must be fulfilled. System components are not the responsibility of WinGD.

WinGD has prepared the data and information in this document carefully and to the best of knowledge. However, the data and information herein is subject to revision without notice. WinGD does not assume any liability with regard to unforeseen variations in accuracy thereof or for any consequences arising therefrom.

Reference to compliance

All data related to the engines comply with the regulations of:

- revised MARPOL Annex VI
- NO_x Technical code 2008.

Reference information

Specific values and design recommendations are given in the Marine Installation Drawing Set (MIDS), the engine performance data are provided by the General Technical Data (GTD). This chapter explains both tools.

*Explanation of symbols in the Marine Installation Manual***Cross references**

Cross references are written in blue. They lead to another section, table or figure in the MIM and can be activated by a mouse click. Cross references comprise the number of the respective figure or table, the number and title of the respective section, followed by the page symbol introducing the page number.

Example: [Table 4-4](#),  [4-43](#)

Notes

Notes provide additional information which is considered important and/or draw the reader's attention to it.

Example:

NOTE

The illustration does not necessarily represent the actual configuration or the stage of development of the engine concerned.

Web links

Web links are written in blue italics. They are used with the following symbols and refer to:



- drawings of the Marine Installation Drawing Set (MIDS) available on WinGD web page.
Example: [*MIDS*](#)



- General Technical Data (GTD) application available on WinGD web page.
Example: [*GTD*](#).

Marine Installation Drawing Set

The Marine Installation Drawing Set (MIDS) is part of the documentation provided for licensees, shipyards and operators. The MIDS must be referred to in parallel with the MIM during the engine installation and operation.

Normative hierarchy of MIDS documentation

The MIDS documentation includes drawings and guidelines that provide the following:

- **Engine-ship interface specifications**
The specifications define the engine requirements which must be fulfilled for safe and reliable engine operation.
- **Installation / system arrangement recommendations**
The recommendations provide arrangements which ensure safe and reliable engine operation. Deviation from the arrangements requires exceptional care and can put safe and reliable engine operation at risk, because fulfilling the engine interface specification by alternative design can be challenging.
- **General installation / system proposals**
The proposals provide examples of arrangements to support the design process. Project-specific arrangements are possible as long as the specifications at the engine interface are fulfilled.

Engine Design Groups

The MIDS covers Design Groups (DG) **97xx**:

9707	Engine Alignment Record Sheets
9709	Engine Alignment
9710	Engine Seating / Foundation
9710-01	Tool Engine Alignment
9715	Engine Stays
9721	Cooling Water Systems
9722	Lubricating Oil Systems
9723	Fuel Oil System
9724	Leakage Collection / Washing System
9725	Air Supply System
9726	Exhaust System
9727	Fuel Gas System
9730	Various Installation Items ¹⁾

Links to complete drawing packages

The latest versions of the drawing packages which are relevant for this MIM are available on WinGD web pages:

- Marine Installation Drawings:
[*MIDS - complete package.*](#)

1) A key for MIDS *Piping Symbols* is included in the MIDS “DG 9730 Various Installation Items” for reference.

General Technical Data

The General Technical Date (GTD) is an application used to calculate the engine performance data, such as temperatures, flow rates and consumption figures based on the selected engine rating and tuning options. The output generated by the GTD is used to design the marine propulsion plant. The GTD can be used for all engines within WinGD portfolio.

GTD output

In addition to the output of characteristic parameters in the whole rating field of the engine, the GTD also delivers data on capacities of coolers, pumps, starting air bottles and air compressors. It provides additional information on the engine radiation, power requirement for ancillary systems, and output data for estimating ancillary equipment size. The GTD can generate data like available components and options for specification and engine rating. In addition to the standard output for ISO reference and design conditions, further operating conditions for which information is required can be defined.



The GTD is accessible on WinGD Customer Portal or on WinGD web page using the following link: [GTD](#).

Instruction Manual

After the successful completion of the engine design and installation phases, additional documents are available to support the complete lifecycle of each engine. This additional documentation is available on WinGD Customer Portal and this includes the following documents:

- Instruction Manual
- Spare Parts Catalogue.

1 Engine Summary

This engine is a camshaftless, low-speed, reversible and rigidly direct-coupled two-stroke engine. It features a low-pressure gas operation and a common-rail injection system combined with the Intelligent Control by Exhaust Recycling (iCER) system.

iCER operating mode options

This engine is available in two variants:

- iCER gas mode
- iCER gas and iCER diesel Tier III mode¹⁾.

The iCER gas mode improves the gas mode performance to significantly reduce the emissions, especially methane emissions. Alternatively, the iCER diesel Tier III mode¹⁾ additionally provides Tier III compliance while operating with diesel fuel.

Table 1-1 Engine summary values for Maximum Continuous Rating

Bore	520 mm
Stroke	2,315 mm
Number of cylinders	5 to 8
Power (MCR)	1,490 kW/cyl
Speed (MCR)	105 rpm
Mean effective pressure	17.3 bar
Stroke/bore ratio	4.45

Engine dimensions and masses

The details about sizing, specific dimensions and masses are provided in section [3.1 Engine dimensions and masses](#),  [3-1](#).

This chapter introduces the engine. It focuses on all aspects of the engine that may be different from other engines. This chapter also highlights the suitability of the engine.

1.1 Engine capability and features

This engine type is designed to run on gas fuel or on liquid fuel. The gas fuel is evaporated Liquefied Natural Gas (LNG). The liquid fuel comprises a wide range of marine fuels, such as Marine Gas Oil (MGO) and Heavy Fuel Oil (HFO) of varying qualities with maximum 0.5% m/m sulphur content. Such fuel flexibility is made possible by the WinGD low-pressure technology. The operating mode can be changed, while the engine is running, without any loss of power.

Gas mode: certified Tier III

In gas mode, the main fuel is natural gas. The natural gas is injected into the engine at low pressure. The gas fuel is ignited by injecting pilot fuel. The amount of injected pilot fuel is approximately 1% of the total energy consumption of the engine at 100% Contracted Maximum Continuous Rating (CMCR) engine power. The project-specific values are available in the *GTD*. Gas fuel injection is hydraulically actuated and electronically controlled. Independent micro-injectors and the pilot fuel system inject the pilot fuel. The pilot fuel can be Marine Diesel Oil (MDO) or MGO. The gas mode of the X-DF2.0 engine uses the iCER system which operates above 20%–30% CMCR engine power.

Diesel mode: certified Tier II

The main fuel injectors inject the main fuel (HFO¹⁾, MDO or MGO) in diesel mode. To prevent clogging of the nozzles, the pilot fuel micro-injectors remain in operation at a reduced injection rate. The project-specific values are available in the *GTD*. The X-DF engine operates in diesel mode with either residual marine fuel (HFO¹⁾) or with marine distillate fuel (MDO or MGO) which must be in accordance with the ISO 8217:2017 specification. The HFO can have maximum 0.5% m/m sulphur content and maximum viscosity of 700cSt. The MDO comprises either DMB or DFB, while the MGO comprises either DMA, DFA, DMZ or DFZ, according to the category definitions in the ISO 8217:2017 specification.

iCER diesel Tier III mode: certified Tier III

The engine can be selected with the iCER diesel Tier III mode²⁾ option. While the engine is operating in *iCER diesel Tier III mode*, 1-12, the main fuel (MGO only) is used in the same way as in the normal diesel mode. However, with the iCER (see section 4.2 The iCER technology, 4-4) active, the engine reaches Tier III compliance without any additional exhaust gas treatment system, such as Selective Catalytic Reduction (SCR).

Control system

The WinGD Engine Control System (ECS) manages the key engine functions, such as gas admission, exhaust valve drives, engine starting and cylinder lubrication. The ECS also ensures control of the fuel injection.

1) HFO can have maximum 0.5% m/m sulphur content.

2) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

Special engine features

WinGD constantly advances its engine portfolio and develops new technologies (see [Table 1-2](#), [1-3](#) and [Table 1-3](#), [1-4](#)).

Table 1-2 Principal engine features and technologies

Engine features and technologies	MIM section
If contracted, iCER diesel Tier III mode ^{a)} is available for this engine (see Figure 1-2 , 1-8). Table 1-3 , 1-4 provides a summary of the iCER system features and components.	1.3
Improved engine performance with reduced environmental footprint is made possible with the iCER system.	4.2
In gas mode, low-load engine operation is possible.	1.3.1
If contracted, Fuel Sharing Mode ^{a)} (FSM) is available for this engine (see Fuel Sharing Mode , 1-14).	1.3.3
Efficiently cooled piston crown is made possible by jet-shaker cooling.	4.5.2
A high-efficiency cylinder lubrication with optimised cylinder Lubricating Oil (LO) consumption is available and made possible by the Pulse Lubricating System (PLS).	4.5.5
The engine has a low-pressure gas admission that is made possible through unique cylinder liners.	4.5.2
Effective gas pressure handling is made possible by the Integrated Gas Pressure Regulation (iGPR) unit.	4.5.6
The whole engine can be controlled and operated electronically that is made possible by the Flex system (see The Flex system , 1-11).	5
Standard data collection and monitoring system is known as the WinGD Integrated Digital Expert (WiDE).	5.7
An engine integrated second order longitudinal vibration compensator is available and is known as the Integrated ELectrical BALancer (iELBA).	6.1.2
If contracted and if there is a twin-engine installation, the Synchro-Phasing System ^{a)} (SPS) is available.	6.8.2

a) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

Table 1-3 The iCER technology

The iCER system features and components	MIM section
The iCER technology has different operating modes (see Figure 1-2, 1-8): • gas mode • iCER diesel Tier III mode^{a)} (optional). The iCER diesel Tier III mode, 1-12 can replace an exhaust gas aftertreatment system, such as SCR.	1.3
With the Combustion Stability Mode (CSM) the engine can be operated with gas fuel when the iCER system is not operating. By adding a small part of the liquid fuel, the combustion can be stabilised.	1.3.3
For the twin-engine installations the EGC circulation water system and its treatment can be shared between both engines (see Table 4-1 , 4-2).	4.1
Simple and reliable iCER technology improves engine performance while reducing Greenhouse Gas (GHG) emissions. An additional economiser (see Figure 4-16 , 4-19) can also be installed to recover thermal energy from the hot exhaust gases.	4.2
The EGC circulation water system cools the recirculated exhaust gas to the required temperature (see Figure 4-7 , 4-8).	4.2.2
The iCER drainage system is used to discharge the excessive water which is produced from the water condensation out of the exhaust gases.	4.2.3
The iCER exhaust gas system is designed to recirculate exhaust gas. The required amount of returned exhaust gas is regulated by a closed loop control system (see Figure 4-11 , 4-15 and Figure 4-12 , 4-16).	4.2.5

a) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

1.2 Primary engine data

The engine rating field for this specific engine is shown in [Figure 1-1](#), [1-5](#). For the detailed engine data, see [Table 1-4](#), [1-6](#).

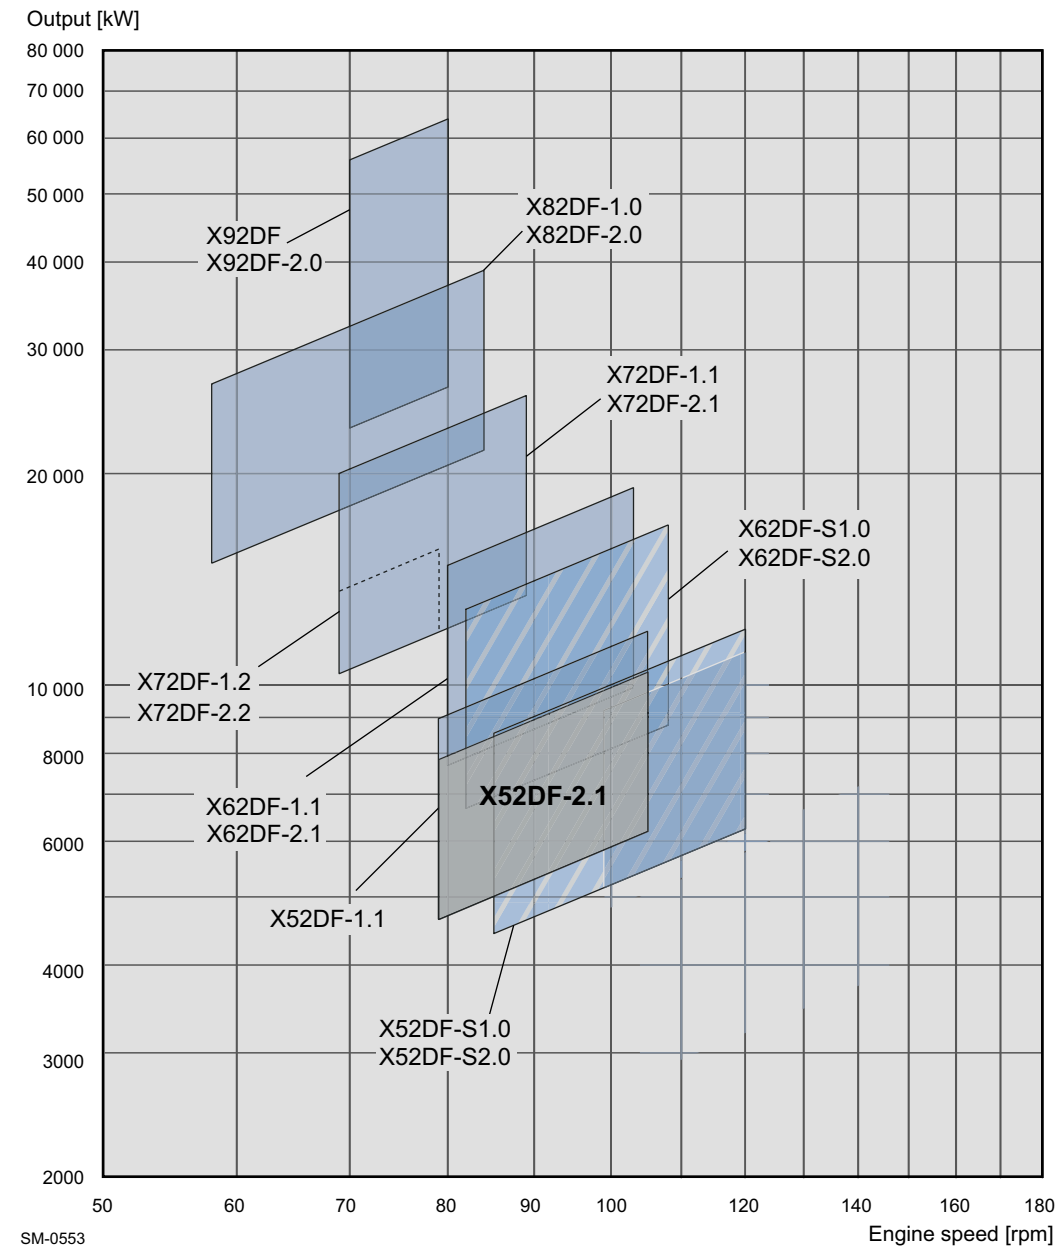


Figure 1-1 Power/speed range

1.2.1 Engine rating field: rating points

The specific values for the four corners of the rating field are called rating points (see [Table 1-4](#), [Fig 1-6](#)). The values provided in the below table are not binding and can be updated without notice. For the prevailing data, please refer to the [GTD](#).

Table 1-4 Rating points

Bore x stroke: 520 x 2,315 [mm]				
No. of cyl.	R1	R2	R3	R4
	Power [kW]			
5	7,450	6,200	5,600	4,650
6	8,940	7,440	6,720	5,580
7	10,430	8,680	7,840	6,510
8	11,920	9,920	8,960	7,440
Speed [rpm]				
All	105	105	79	79
Mean Effective Pressure (MEP) [bar]				
All	17.3	14.4	17.3	14.4
Lubricating oil consumption (for fully run-in engines under normal operating conditions)				
System oil	approximately 6 kg/cyl per day			
Cylinder oil	guide feed rate 0.6 g/kWh			

1.3 Fuel operating modes

The engine is designed for continuous service on gas fuel with oil fuel as a backup fuel. Depending on the selected option, different operating modes are available within specific engine power ranges (see [Figure 1-2](#), [Figure 1-8](#)). The fuel split ranges are shown in [Table 1-6](#), [Figure 1-8](#).

The following list includes the operating modes of the engine:

- gas mode
- Combustion Stability Mode (CSM)
- diesel mode
- if contracted, Fuel Sharing Mode¹⁾ (FSM)
- if contracted, iCER diesel Tier III mode¹⁾.

Table 1-5 Overview of the available operating modes and technologies

Operating modes	iCER	Compliance	Notes
Gas mode	on	Tier III	
CSM	off	Tier III	
Diesel mode	off	Tier II	
FSM ^{a)}	off	Tier II	if contracted
iCER diesel Tier III mode ^{a)}	on	Tier III	if contracted

a) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

NOTE

To have either or all, the FSM and/or the iCER diesel Tier III mode available, they must be requested and included in the contract.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

Changeovers between the operating modes:

- transfer (automatically active for changeover to or between modes with gas operation)
- gas trip (immediate action, always available while a mode with gas operation is selected).

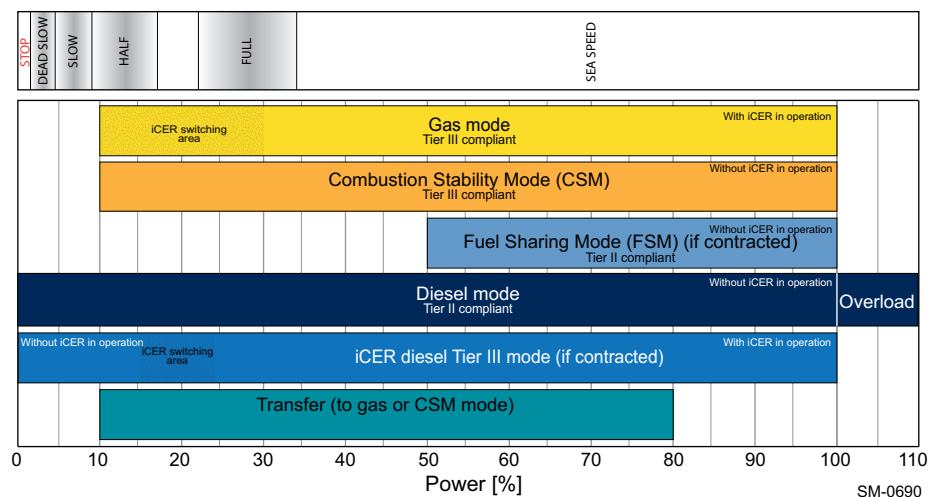


Figure 1-2 Operating modes (as per ISO conditions)

Table 1-6 Approximate fuel split (energy-based) for different operating modes over load range

Gas mode	1%–2% MGO/MDO pilot fuel 98%–99% gas
CSM	1%–2% MGO/MDO pilot fuel 0%–35% MGO/MDO/HFO ^{a)} 64%–98% gas fuel
FSM ^{b)}	1%–2% MGO/MDO pilot fuel 13%–49% MGO/MDO/HFO ^{a)} 50%–85% gas
Diesel mode	1% MGO/MDO pilot fuel 99% MGO/MDO/HFO ^{a)}
iCER diesel Tier III mode ^{b)}	1% MGO/MDO pilot fuel 99% MGO (ultra low sulphur content - maximum 0.10% m/m sulphur, as per IMO compliance conditions) ^{c)}

a) HFO can have maximum 0.5% m/m sulphur content.

b) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

c) Fuel sulphur content is limited to ensure IMO compliance in ECA zones.

NOTE

It is strongly recommended that transfer and operation in gas mode is initiated above the Barred Speed Range. As a result, this may increase the lower limit value above 10%.

1.3.1 Operation in gas mode

The engine operates in gas mode according to the Otto cycle with a pre-mixed lean fuel gas to air mixture which is ignited by a small amount of pilot fuel. The amount of used injected pilot fuel is approximately the same across the entire engine power range. It is equivalent to approximately 1% of the total energy consumption of the engine at 100% CMC engine power (for the energy distribution during gas mode, see [Figure 1-3](#), [Fig 1-9](#)).

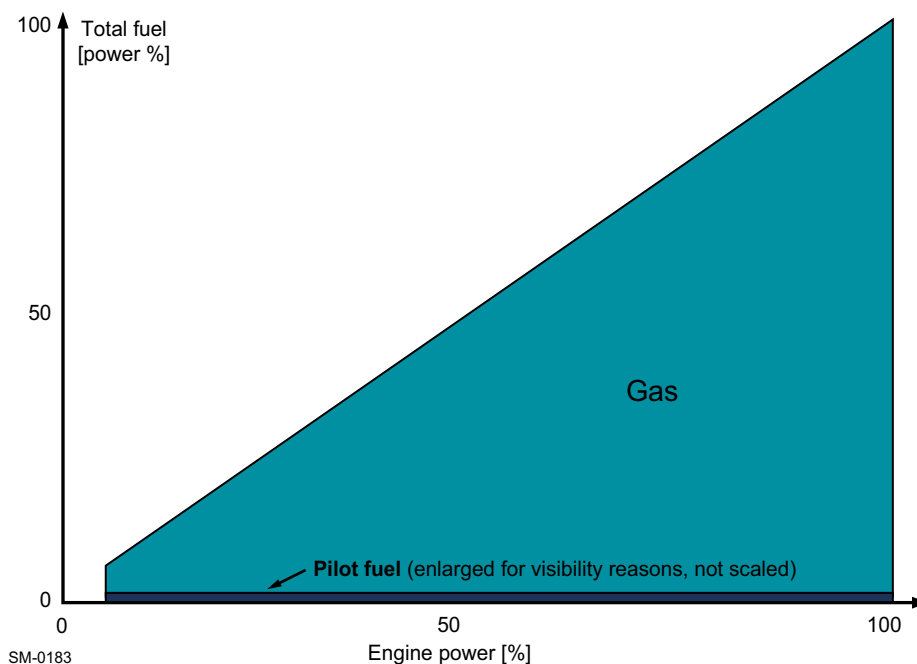


Figure 1-3 Gas mode

NOTE

At any time the gas operation can be stopped immediately by initiating a gas trip.

Shaft power meter requirements

For all WinGD X-DF engines, the ECS requires the installation of a power meter in the shaft line. The measurement accuracy must fulfil the requirements, as defined in [Table 1-7](#), [▮ 1-10](#). The position of the shaft power meter is usually as close as possible to the main engine flywheel. In case of a PTO/PTI/PTH installation on the driving end side, this means that the shaft power meter is usually installed between the PTO/PTI/PTH and the main engine flywheel (see [Figure 4-69](#), [▮ 4-110](#)). Alternatively, the mechanical power of the PTO must be calculated and transferred to the ECS through the Propulsion Control System (PCS). This enables the ECS to determine the total mechanical power output of the engine which is required for the engine operation (see [Figure 5-1](#), [▮ 5-1](#)). The same calculation method must be applied to a PTO installation on the free end.

Table 1-7 Shaft power meter parameters

Abbreviation	Value	Parameter
A	±0.5%	Sensor accuracy
U	≤1.0 s	Update rate
D	≤0.5 s	Delay
S	≥ 10 Hz	Sampling rate
ES	4-20 mA	Electrical signal

The iCER system

As part of the X-DF2.0 technology, this engine is equipped with the Intelligent Control by Exhaust Recycling (iCER) system. In gas mode or diesel Tier III mode¹⁾ (if contracted), this allows the recirculation of part of the exhaust gas back to the engine. This replaces the oxygen in the scavenge air inlet with CO₂ resulting in an enhanced combustion process.

The iCER system offers the following customer benefits:

- reduced methane slip by up to 50%
- reduced energy consumption in gas mode
- improved fuel consumption in diesel mode
- Tier III compliance in diesel mode.

The introduction of the iCER system, as part of the X-DF2.0 portfolio, increases the engine competitiveness with increased fuel efficiency and reduced environmental impact.

For further information on the iCER system, as well as links to the associated system information and drawings, see section [4.2 The iCER technology](#), [▮ 4-4](#).

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

1.3.2 Operation in diesel mode

In general, diesel mode is always available. If the gas system fails or the engine output in gas mode is insufficient, the diesel mode provides operational flexibility and a fail-safe.


The main fuel injectors inject the main fuel, while the pilot fuel micro-injectors remain in operation at a reduced injection rate to avoid clogging of the nozzles. The main fuel can be changed over from either MDO or MGO to HFO¹⁾. Before changing back to gas mode, the main fuel must be changed back to MDO or MGO (see section 1.3.4 [Changeover between operating modes](#), 1-15).



For further information on the engine operation on fuels, please refer to the document “Fuels” available on WinGD web page: [Fuels](#).

The Flex system

The engine is equipped with the WinGD Flex system. It is a common-rail injection system which enables flexible fuel injection.

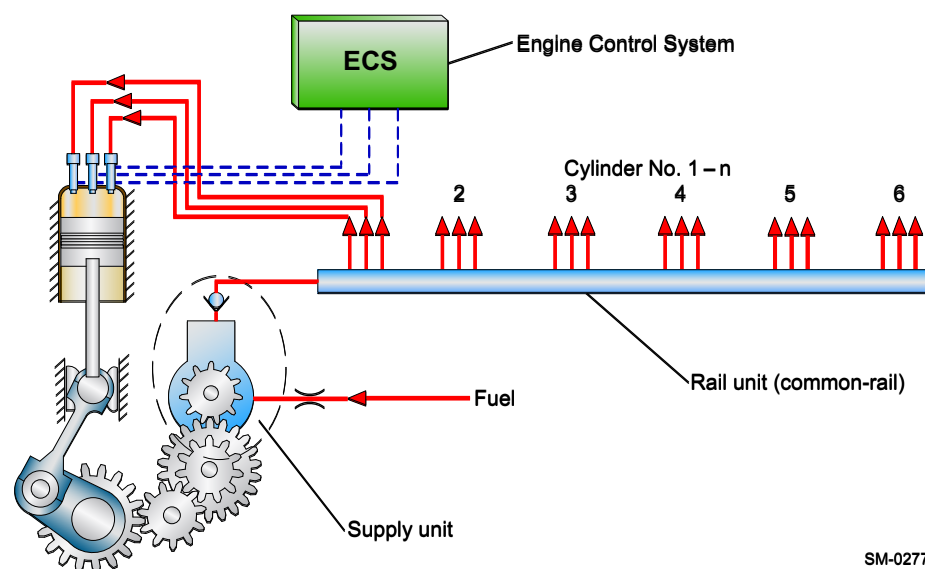

SM-0277

Figure 1-4 The Flex system parts

Major benefits

The major benefits of the Flex system include the following:

- adapted for different operating modes
- adapted for different fuels
- optimised part load operation
- optimised fuel consumption
- precise speed regulation, especially at very low speed operation
- smokeless operation across the entire engine power range
- benefits in terms of operating costs, maintenance requirements and compliance with emissions regulations.

1) HFO can have maximum 0.5% m/m sulphur content.

iCER diesel Tier III mode

The iCER diesel Tier III mode¹⁾ is available from 0% to 100% engine power and the iCER is active from approximately 20% to 100% engine power. This engine operation mode uses MGO fuel (with maximum 0.10% m/m sulphur, as per IMO SO_x compliance in ECA zones), and meets Tier III compliance.

The iCER system (see section [4.2 The iCER technology](#), [4-4](#)) requires the activation of the EGC circulation water treatment system. For further information, please see section [4.2.3 The iCER drainage system](#), [4-9](#).

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

1.3.3 Operation in mixed fuel modes

A mixed fuel mode runs on both gas and liquid fuel at the same time. The power available and the diesel fuel ratio is dependent on the selected mixed fuel mode.


Combustion Stability Mode

The Combustion Stability Mode (CSM) technology is specific to the engines of the X-DF2.0 portfolio and can be selected as an operating mode across the same engine power range as gas mode (see [Figure 1-2](#), [1-8](#)). When the CSM is selected, the engine runs mainly on gas fuel, however, without the iCER.

NOTE

While the CSM is active, the engine is Tier III compliant. The liquid fuel sulphur content must be limited to maximum 0.10% m/m for compliance to the SO_x limit which applies in Tier III areas.

The CSM can be active above 10% CMCR power. A part of the gas fuel is replaced with liquid fuel to ensure stable combustion. The maximum gas-only power range can vary depending on the engine rating.

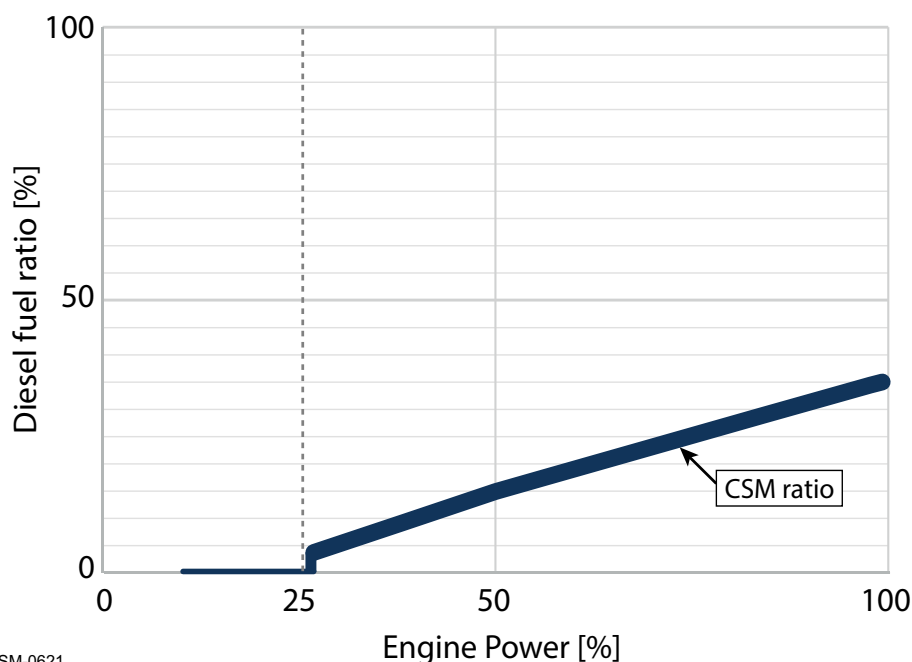

SM-0621

Figure 1-5 Example of diesel fuel ratio during active CSM

The CSM, like the FSM¹⁾, injects liquid fuel by the main injectors, in addition to the gas fuel. However, unlike FSM¹⁾, the diesel fuel ratio is set by the CSM, as shown in [Figure 1-5](#), [1-13](#).

[Figure 1-5](#), [1-13](#) provides rough indication of the expected diesel amount. However, the amount (or ratio) of the injected diesel is adjusted automatically to stabilise the combustion. It can vary accordingly depending on the engine rating and operating conditions.


The CSM comes as a standard technology with engines that have the iCER.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

*Fuel Sharing Mode***NOTE**

Fuel Sharing Mode is an option. It can be contracted at additional cost.

The FSM¹⁾ is initiated only by the operator and can be used for reaching the balance between an LNG carrier boil-off and the desired ship speed. This can be done by adjusting the ratio of the liquid fuel to gas fuel.

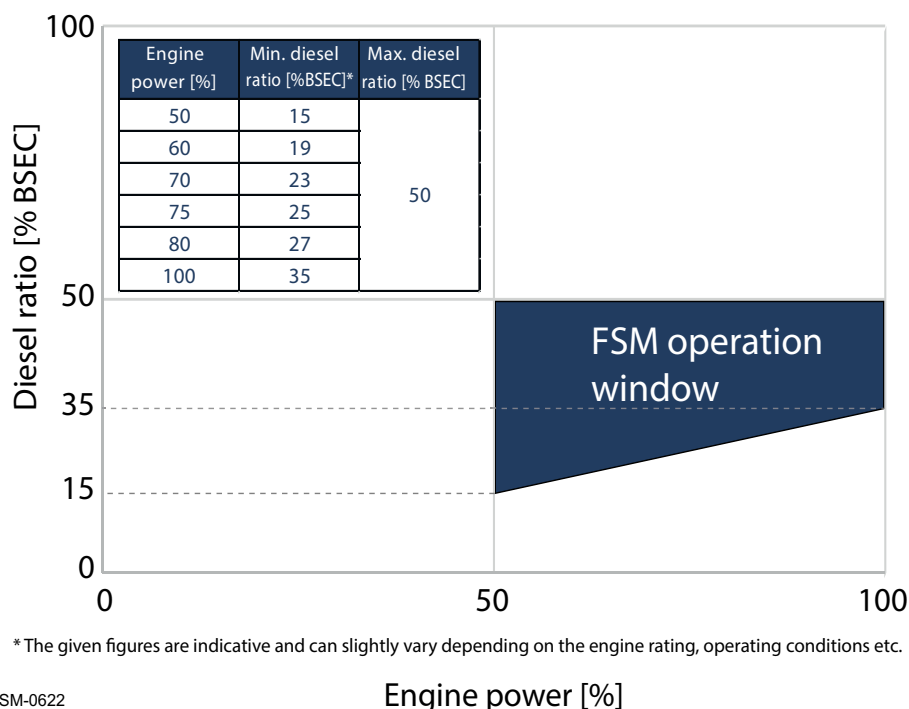

SM-0622

Figure 1-6 FSM: Available operating window

The FSM¹⁾ is available in a defined working window (see [Figure 1-6](#), [1-14](#)). Like CSM activation (see the subsection [Combustion Stability Mode](#), [1-13](#)), the minimum amount of liquid fuel is dependent on the engine power and is limited by the ECS. In FSM¹⁾ the engine is Tier II compliant.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

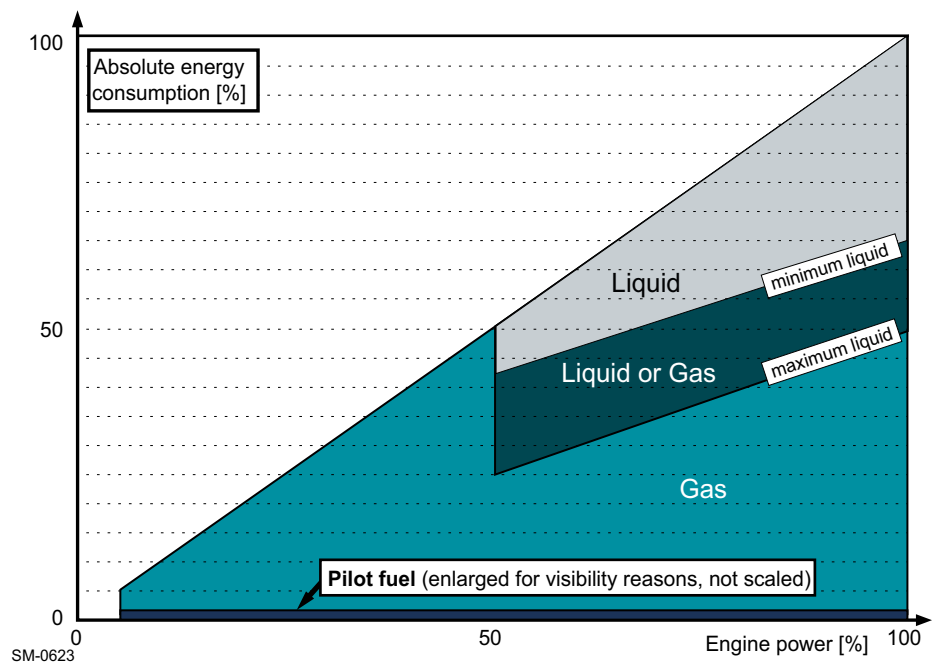


Figure 1-7 FSM: Energy amount of different ratios of fuel

The liquid fuel to gas fuel ratio can be selected by the Remote Control System (RCS). The automatic control of the ratio of liquid fuel is based on the LNG carrier tank pressure. The automatic control is also possible through the PCS. Depending on the liquid fuel sulphur content, it is possible that the Base Number (BN) of the cylinder LO needs to be changed.

1.3.4 Changeover between operating modes

The changeover between operating modes is the process of the engine changing between different fuel operating modes (see section 1.3 Fuel operating modes, 1-7).

Diesel mode	An overload of 110% is permitted in emergency conditions (SOLAS Regulations II-1/3.6)
Gas mode CSM FSM ^{a)} iCER diesel Tier III mode ^{a)}	No overload is available, as the maximum continuous output is 100% of rated power


a) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

Depending on the type of changeover between operating modes, the required time varies. In general, a changeover of operation mode from gas fuel to liquid fuel is executed immediately. However, the introduction of gas takes a few minutes, depending on the operating modes.

All changeovers are restricted by the engine power availability of each operating mode and the transfer power range (see Figure 1-2, 1-8).

Transfers and gas trips

The changeover between operating modes can be categorised in two ways. If the changeover introduces or continues to use gas fuel, it is called a transfer. If the changeover between operating modes stops the use of gas fuel, thus, defaulting to diesel mode, then the changeover is called a gas trip (or just a trip). Often a gas trip is associated with automatic initiation as part of the system safety procedure, but it can also be intentionally initiated by the operator. In comparison to the gas trip, the changeover between operating modes can only be initiated by the operator.

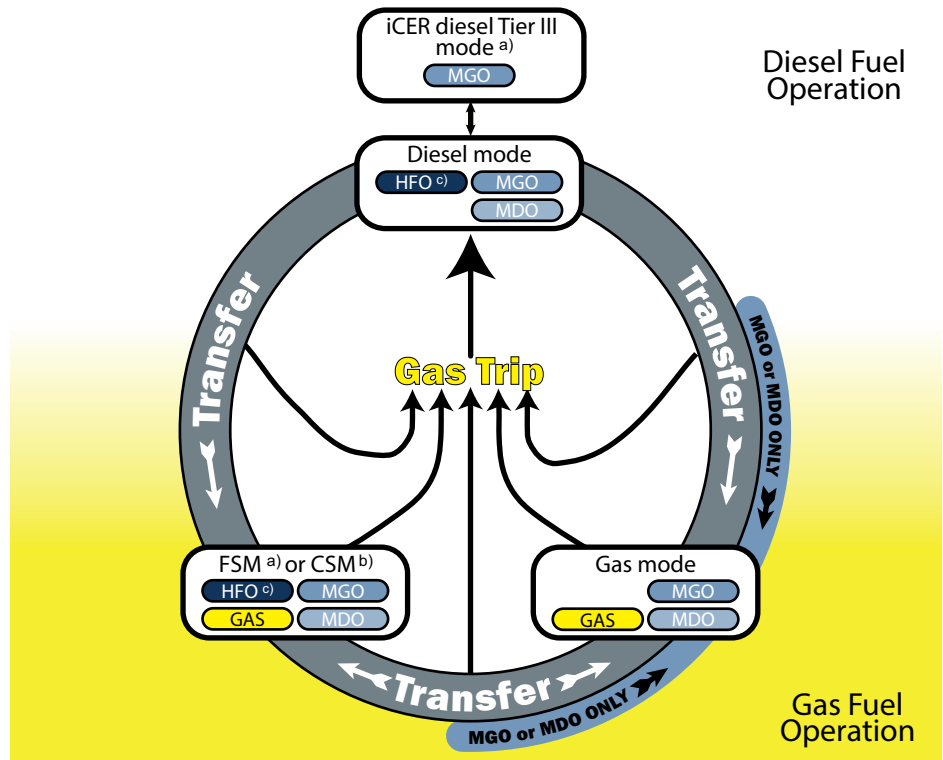

a) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.
b) HFO is available for CMCR power $\geq 26\%$.
c) HFO can have maximum 0.5% m/m sulphur content.

SM-0924

Figure 1-8 The fuel transfers and gas trips

Gas trip

A gas trip always stops the gas fuel operation and results in diesel mode. The gas trip is completed within half a revolution of the engine and can occur at any engine power and any operating mode when gas fuel is in use. This includes any point of changeover between operating modes.

While the engine runs in gas mode, the liquid fuel backup system is always on standby with MGO or MDO. This is different to FSM¹⁾ which is backed up by the selected fuel type (see Table 1-6, 1-8).

Although the operator can initiate a gas trip to diesel mode, if the ECS initiates an automatic gas trip, it is a result of either an unacceptable operating condition, a detected failure or a command received from an external system (e.g. the engine safety system). If an automatically initiated gas trip occurs, then the cause must be investigated. Thus, transferring to an operation mode with gas is prohibited and disabled until the problem is resolved and the alarm is reset.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.



For further information on failures causing a gas trip, please refer to the Safety Concept: *2-Stroke Dual-Fuel Safety Concept*.

**Transfer
introducing gas fuel**

The transfer from diesel mode to either gas mode or FSM¹⁾ introduces gas fuel. Both the Gas Valve Unit (GVU) and the iGPR must complete a system safety test before this gradual changeover can take place.

Gas mode

The transfer to gas mode is prohibited (and, thus, disabled) when the engine is running on HFO¹⁾. Before changing to gas mode, the engine must operate in diesel mode (Tier II) with MGO or MDO, until the fuel system is fully flushed of HFO¹⁾. This prevents clogging by HFO¹⁾ during standby in gas mode. For transfer to gas mode, the iCER system must be ready for operation. It only operates above 20%–30% CMCR engine power.

CSM

If the engine is running in diesel mode (Tier II) above approximately 10% CMCR engine power, the transfer to CSM is possible. MDO and MGO can be used as liquid fuel. HFO¹⁾ can also be used above 20%–30% CMCR engine power. If FSM²⁾ is contracted, a direct transfer from gas mode to CSM is available. When the engine power is reduced below the CSM operating range, an alarm message is released. If the engine power is not increased within the required time period, a gas trip is initiated.

FSM

FSM²⁾ is only available if contracted. If the engine is running above approximately 50% CMCR engine power, transfer from either diesel mode (Tier II) or gas mode to FSM²⁾ is possible. HFO¹⁾, MDO and MGO can be used as liquid fuel. When the engine power is reduced below the FSM²⁾ operating range, an alarm message is released. If the engine power is not increased within the required time period, a gas trip is initiated.

NOTE

Fuel Sharing Mode is an available option. It can be contracted at additional cost.

**Changeover
between liquid fuels**

Similar to the WinGD diesel engines, changing the fuel input from HFO¹⁾ to either MGO or MDO and vice versa can be done at any time (assuming, HFO¹⁾ is permitted in the operating mode) without interruption of the engine operation. The fuel oil changeovers are managed by external systems.

**Changeover to
iCER diesel Tier III mode**

Before changing to iCER diesel Tier III mode²⁾, the engine must be in diesel mode and fully flushed with MGO (with maximum 0.10% m/m sulphur). The iCER system must be ready for operation. It only operates above approximately 20% CMCR engine power.

1) HFO can have maximum 0.5% m/m sulphur content.

2) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

2 Engine Power and Speed


Selecting a suitable main engine to meet the power demands of a given project involves proper tuning with respect to load range and influence of operating conditions which are likely to prevail throughout the entire life of the ship. This chapter explains the main principles in selecting a WinGD 2-stroke marine diesel and gas engine.

2.1 Introduction to power and speed

It is critical that a ship propulsion system correctly matches the main engine characteristics to ensure reliable operation under a variety of conditions including design and off-design conditions. The sections below outline the specifics to aid in this process.

2.2 Engine rating field

The rating field shown in Figure 2-1, 2-2 is the area of selectable engine design power and engine design speed. In this area, the Contracted Maximum Continuous Rating (CMCR) of an engine can be positioned individually to give the desired combination of propulsive power and rotational speed. Engines within this layout field are tuned for maximum firing pressure and best efficiency at the selected rating.

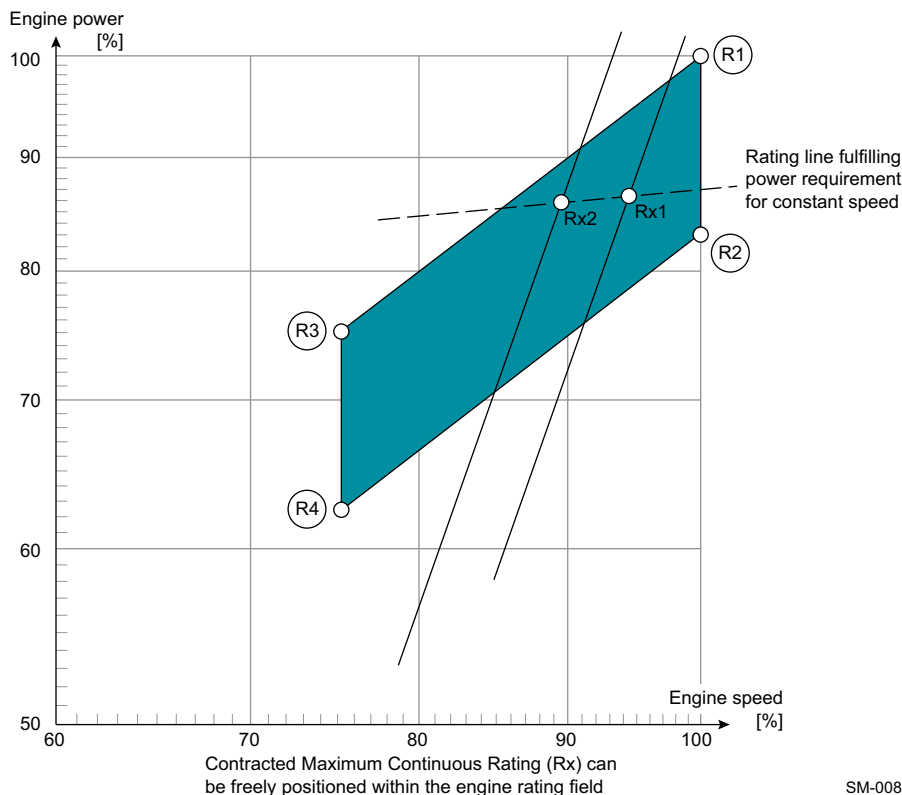

SM-0083

Figure 2-1 Rating field

The rating field serves to determine the specific fuel and fuel gas consumption, exhaust gas flow and temperature, fuel injection parameters, turbocharger and Scavenge Air Cooler (SAC) specifications at the selected rating.

Percentage values

The engine speed is given on the horizontal axis and the engine power on the vertical axis of the rating field. Both are expressed as a percentage [%] of the respective engine nominal R1 parameters. Percentage values are used in such a way that the same diagram can be applied to various engine arrangements.

Rating points

The rating points (R1, R2, R3, R4) for WinGD engines are the corner points of the engine rating field (see Figure 2-1, 2-2). The rating field is limited by two constant Mean Effective Pressure (MEP) lines R1–R3 and R2–R4 and by two constant engine speed lines R1–R2 and R3–R4.

The point R1 represents the nominal Maximum Continuous Rating (MCR). It is the maximum power/speed combination available for a particular engine.

Any rating point (Rx) can be selected within the entire rating field to meet the requirements of each specific project. Such rating points require specific engine adaptations.

2.3 Influence of propeller diameter and revolutions

Influence of propeller revolutions on the power requirement

At constant ship speed and for a given propeller type, a lower propeller speed combined with a larger propeller diameter increases the total propulsive efficiency. Less power is required to propel the vessel at a given speed.

The relative change of required power as a function of the propeller revolutions can be approximated by the following relation:

$$\frac{PX_2}{PX_1} = \left(\frac{n_2}{n_1} \right)^\alpha$$

Formula 2-1

where:

PX_j = propulsive power for propeller revolution n_j

n_j = propeller speed corresponding with propulsive power PX_j

α = 0.15 for tankers and general cargo ships up to 10,000 dwt, or
= 0.20 for tankers and bulk carriers from 10,000 to 30,000 dwt, or
= 0.25 for tankers and bulk carriers larger than 30,000 dwt, or
= 0.17 for reefers and container ships up to 3,000 TEU, or
= 0.22 for container ships larger than 3,000 TEU.

This relation is used in the engine selection process to compare different engine alternatives and to select an optimum propeller speed within the selected engine rating field. Usually, the number of revolutions depends on the maximum permissible propeller diameter.

Maximum propeller diameter

The maximum propeller diameter is often determined by operational requirements, such as:

- design draught and ballast draught limitations
- class recommendations concerning propeller/hull clearance (pressure impulse induced on the hull by the propeller).

The selection of the main engine in combination with the optimum propeller (efficiency) is an iterative process where also commercial considerations (engine and propeller prices) play an important role.

According to the above approximation, when a required power/speed combination is known (for example, point Rx1 in [Figure 2-1](#), [Figure 2-2](#)), such a CMC line can be drawn which fulfils the ship power requirement for a constant speed. The slope of this line depends on the ship characteristics (see coefficient α in [Formula 2-1](#), [Figure 2-3](#)). Any other point on this line represents a new power/speed combination, e.g. Rx2, and requires a specific propeller adaptation.

2.4 Power range

Propeller curves and operational points

To establish the proper propeller curves, it is necessary to know the ship speed to power response.

Determining power/propeller speed relationships

Normally, the curves can be determined by using full-scale trial results from similar ships, algorithms developed by maritime research institutes or model tank results. With this information and by applying the propeller series, the power/speed relationships can be established and characteristics developed.

The relation between absorbed power and propeller speed for a Fixed Pitch Propeller (FPP) can be approximated by the following cubic relation:

$$\frac{P}{P_{CMCR}} = \left(\frac{n}{n_{CMCR}} \right)^3$$

Formula 2-2

where:

P = propeller power

n = propeller speed.

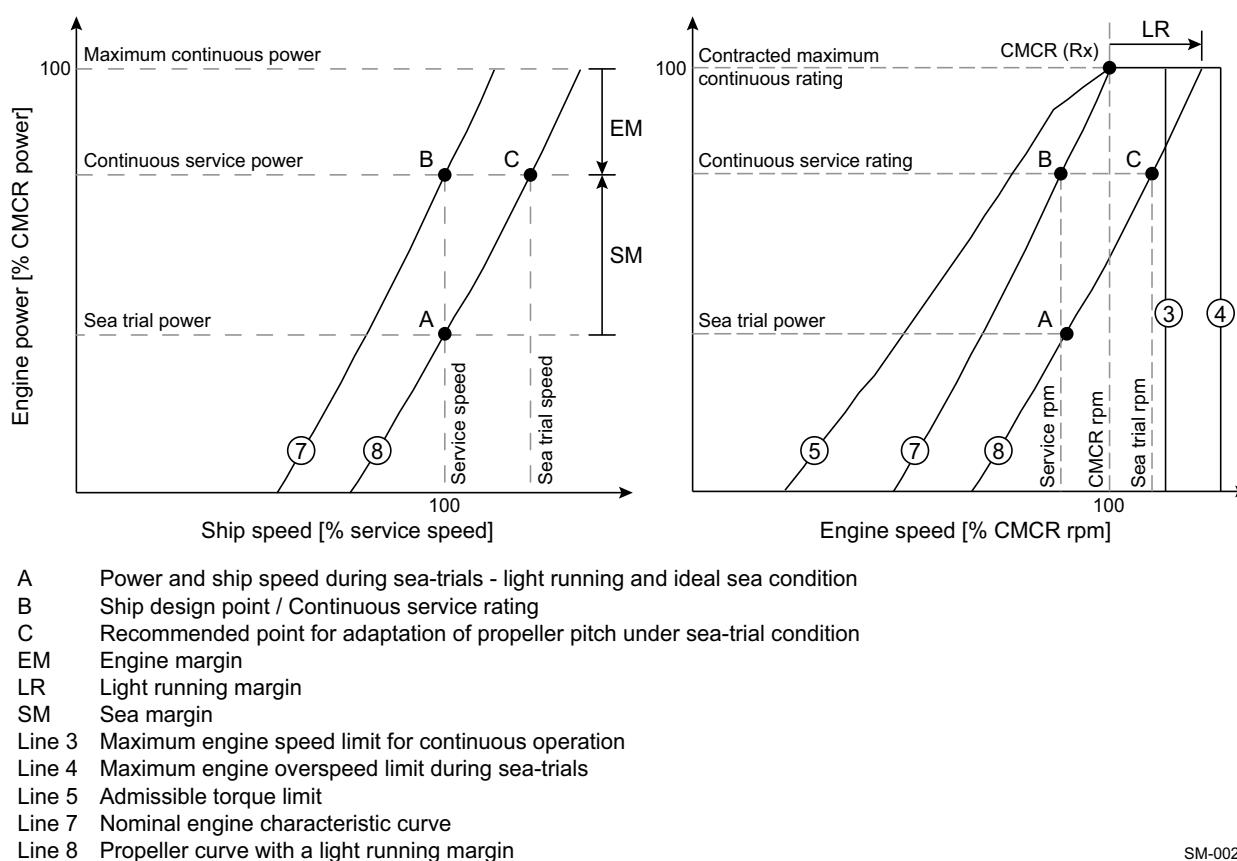


Figure 2-2 Propeller curves and operational points

Figure 2-2, 2-4 outlines the various engine limits, propeller curves and margins required for the engine optimisation. By incorporating the margins listed below, the various operational points and, subsequently, the CMCr point can be determined (see section 2.5 Power range limits, 2-7 for detailed descriptions of the various line limits).

Sea trial power

The sea trial power must be specified. Figure 2-2, 2-4 shows the sea trial power to be the power required for reaching service speed (point A) on the propeller curve with the Light Running (LR) margin (Line 8).

Sea Margin

The Sea Margin (SM) is defined as the increase in power to maintain a given ship speed achieved in calm weather (point A in Figure 2-2, 2-4) under average service condition (point B). This margin can vary depending on expectations of the owner and the charterer, as well as on routes, season and schedules of the ship.

The location of reference point A and the magnitude of the SM are part of the new building contract and are determined between the shipbuilder and the owner. Typically, the SM is specified in the range of 10%–25% of the sea trial power.

Light Running margin

The Light Running (LR) margin (see Figure 2-2, 2-4) is added to compensate for the expected change in speed to relative power, caused by the fouling and the deterioration of the vessel over time. For a given engine power output, the LR propeller (Line 8) operates at a certain percentage of higher propeller speed compared to the nominal engine characteristic (Line 7). The LR margin is agreed upon between the shipyard and the ship owner. The margin depends on the hull and the propeller cleaning interval, as well as the operation route which affects the rate of deterioration (e.g. speed, location, shallow water etc.)

Typically, the LR margin is specified in the range of 4%–7%. However, additional power/engine speed allowance must be provided for the Power Take-Off (PTO) installations (see section 2.6 Power range limits with PTO installation for an FPP, 2-11).

NOTE

The shipbuilder has the responsibility to determine a Light Running margin which must be sufficiently small so that the power range limits on the right side of the nominal propeller characteristic (Line 7) are reached under any service condition (see Figure 2-3, 2-7).

Continuous Service Rating

The Continuous Service Rating (CSR) is also known as the Nominal Operation Rating (NOR) or the Nominal Continuous Rating (NCR). Point A represents the power and propeller speed of a ship operating at contractual service speed in calm seas with a new clean hull and propeller. On the other hand, the same ship at the same speed, under service conditions with aged hull and under average weather conditions, requires a power/speed combination according to point B. In that case, point B is the CSR point.

Engine Margin

The Engine Margin (EM) is the relative power (in percentage) which remains at CSR. Most owners specify the contractual ship loaded service speed at 85%–90% power of the CMCR. Different selections are possible. This remaining power, the EM (e.g. 10%–15%), can then be used to catch up with delays in schedule.

This margin is deducted from the CMCR. Thus, the 100% power line is found by dividing the power at point B by the selected percentage (e.g. 85%–90%) of CSR power. The graphic approach to find the level of CMCR is illustrated in [Figure 2-2](#), [Fig 2-4](#).

Contracted Maximum Continuous Rating

The Contracted Maximum Continuous Rating (CMCR) is also known as the Rx or the Specified Maximum Continuous Rating (SMCR). The CMCR is the point obtained by applying the margins (SM and EM) to the propeller curves. The calculated CMCR point can be selected freely within the entire engine rating field.

2.5 Power range limits

Once an engine is optimised at CMCR (Rx), the working range of the engine is limited by the following border lines, as shown in Figure 2-3, 2-7.

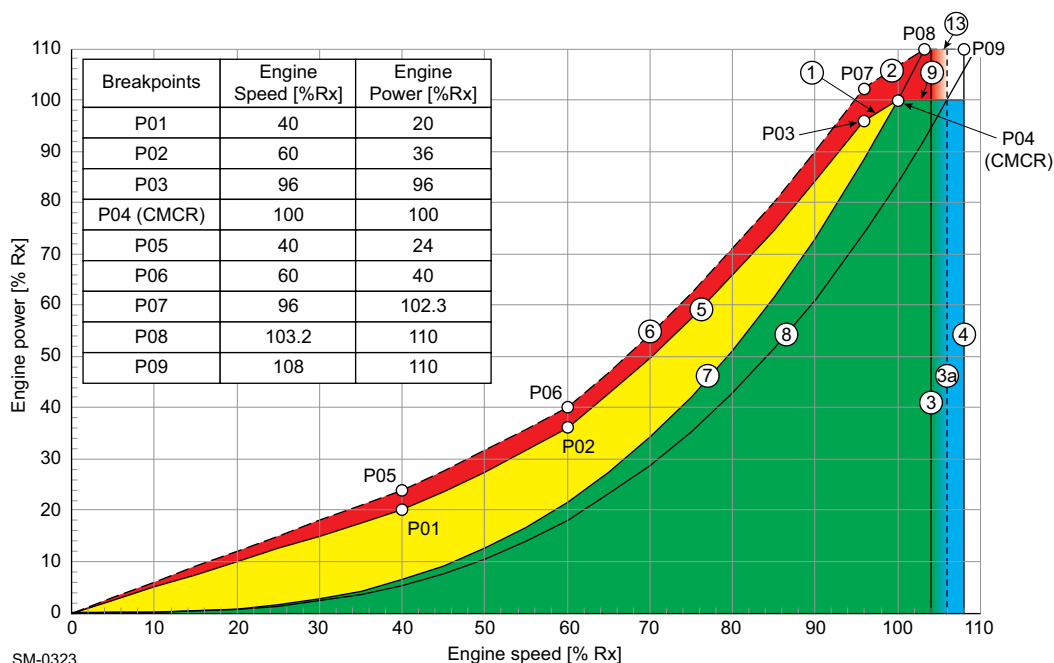


Figure 2-3 Power range limits

Line 1
100% Torque Limit

Constant MEP or torque line through CMCR from 100% (speed and power) down to 96% (speed and power).

Line 2
Overload Limit

Available in diesel mode for testbed operation and emergency operation according to SOLAS Regulation II-1/3.6. It is a constant MEP line connecting point P07 (102.3% power and 96% speed) to point P08 (110% power and 103.2% speed). Point P08 is the point of intersection between Line 7 and 110% power. Overload is not permitted in gas mode. If overload is attempted in gas mode, then the engine safety system automatically initiates a gas trip to diesel mode at 102% power.

Line 3
Speed Limit

Maximum speed limit for continuous engine running is set to 104% of CMCR speed. However, in diesel mode this limit can be extended to 106% (Line 3a) if Rx speed is reduced ($n_{CMCR} \leq 0.98 n_{MCR}$), if the specified torsional vibration limits are not exceeded.

Line 4
Overspeed Limit

The overspeed range is possible only in diesel mode. From Line 3 at 104% or Line 3a at 106% (if applicable) the overspeed range can extend to an upper speed limit of 108%. If needed for demonstration of 100% CMCR power operation during sea trials, operating in this overspeed range is only permissible in the presence of an authorised engine builder representative. However, the specified torsional vibration limits must not be exceeded.

Line 5
Engine Operation Power Limit

Admissible power limit for engine operation. The line is separated by the breakpoints listed in Figure 2-3, 2-7.

Line 6 Transient Operation Power Limit	Maximum power limit for transient operation, available only in diesel mode. The line is separated by the breakpoints listed in Figure 2-3 , Fig 2-7 .
Line 7 Nominal Engine Characteristic	Nominal engine characteristic curve that passes through the CMCR point is defined by the propeller law: $\frac{P}{P_{CMCR}} = \left(\frac{n}{n_{CMCR}} \right)^3$ Formula 2-3
Line 8 LR Propeller Curve	Propeller curve with a LR margin (typically between 4% and 7%). The curve is defined by the propeller law with a constant, governed by the selected LR margin (Formula 2-4, Fig 2-8). $\frac{P_{LR}}{P_{CMCR}} = C \cdot \left(\frac{n}{n_{CMCR}} \right)^3 \qquad C = \left(\frac{1}{1 + LR} \right)^3$ Formula 2-4 where: P_{LR} = propeller power at selected Light Running margin [kW] P_{CMCR} = CMCR engine power [kW] n = selected engine speed [rpm] n_{CMCR} = CMCR engine speed [rpm] C = constant LR = Light Running margin [%].
Line 9 CMCR Power	Line 9 represents maximum power for continuous operation.
Line 13 110% CMCR Power	Line 13 represents constant power overload limit, available for testbed operation and emergency operation according to SOLAS Regulation II-1/3.6.

**Engine Operation
Power Range**

Line 5, Line 1 and Line 9 form the curve for the engine operation power range limit, as defined by [Formula 2-5](#), [Fig 2-9](#). Each component is governed by different coefficients (see [Table 2-1](#), [Fig 2-9](#)).

Table 2-1 Line 5 coefficients

Line no.	Range (n/n_{CMCR})	C2	C1	C0
Line 5	0.00–0.40	0.000	0.500	0.000
	0.40–0.60	0.500	0.300	0.000
	0.60–0.96	1.111	-0.067	0.000
Line 1	0.96–1.00	0.000	1.000	0.000
Line 9	1.00–1.08	0.000	0.000	1.000

$$\frac{P}{P_{CMCR}} = C2 \left(\frac{n}{n_{CMCR}} \right)^2 + C1 \left(\frac{n}{n_{CMCR}} \right) + C0$$

Formula 2-5

where:

P = selected engine power [kW]

P_{CMCR} = CMCR engine power [kW]

n = selected engine speed [rpm]

n_{CMCR} = CMCR engine speed [rpm]

$C2/C1/C0$..= coefficients / constants.

The area formed by Line 1, Line 3, Line 5 and Line 9 is the range within which the engine should be operated.

The area limited by Line 7, Line 9 and Line 3 is recommended for continuous operation.

The area between Line 7 and Line 5 is reserved for acceleration, shallow water and normal operational flexibility. If a PTO is installed, then the operating characteristics of the engine differ (for further details on PTO characteristics, see section [2.6 Power range limits with PTO installation for an FPP](#), [Fig 2-11](#)).

Table 2-2 Speed limits

Speed limits	Diesel mode	Gas mode
Maximum speed setting on the telegraph	100% of CMCR rpm	100% of CMCR rpm
Speed limit CMCR=MCR	104% of CMCR rpm	104% of CMCR rpm
Speed limit, rpm de-rated engine	106% of CMCR rpm	104% of CMCR rpm
Speed limit, sea-trial only	108% of CMCR rpm	104% of CMCR rpm
Over-speed trip	110% of CMCR rpm	106% of CMCR rpm

Overload Power Range

Line 6, Line 2 and Line 13 form the curve for the engine overload power limit, as defined by [Formula 2-5](#), [Figure 2-9](#). Each component is governed by different coefficients (see [Table 2-3](#), [Figure 2-10](#)).

Table 2-3 Line 6 coefficients

Line no.	Range (n/n_{CMCR})	C2	C1	C0
Line 6	0.00–0.40	0.000	0.600	0.000
	0.40–0.60	0.330	0.468	0.000
	0.60–0.96	1.110	0.000	0.000
Line 2	0.96–1.032	0.000	1.066	0.000
Line 13	1.032–1.08	0.000	0.000	1.100

The area above Line 1 and Line 9 is the overload range. It is only permissible to operate engines in this range for a maximum duration of one hour during sea trials and in the presence of an authorised engine builder representative.

The area between Line 1, Line 5 and Line 6 ([Figure 2-3](#), [Figure 2-7](#)), called ‘service range with operational time limit’, is only applicable to transient conditions in diesel mode (i.e. passing through a Barred Speed Range (BSR), sea trial or emergency fast acceleration). The engine can only be operated in this area for limited periods of time, in particular 1 hour per 24 hours.

2.6 Power range limits with PTO installation for an FPP

A main engine-driven generator is named a Power Take-Off (PTO), as its driving power is provided by the main engine. The addition of the PTO installation alters the working range and operating characteristics of the engine. Two methods of incorporating the PTO are outlined in the following sections. WinGD recommends to follow Method 1.

PTO considerations

- PTO is used for generating the navigation electric power.
- PTO is connected with a frequency converter system.
- PTO is not engaged in heavy sea conditions.
- Mechanical power absorption of the PTO must be considered.

Method 1 of the PTO incorporation

CMCR: Method 1

This first method considers the PTO as an addition to the previously defined propeller power requirements, therefore increasing the CMCR of the engine.

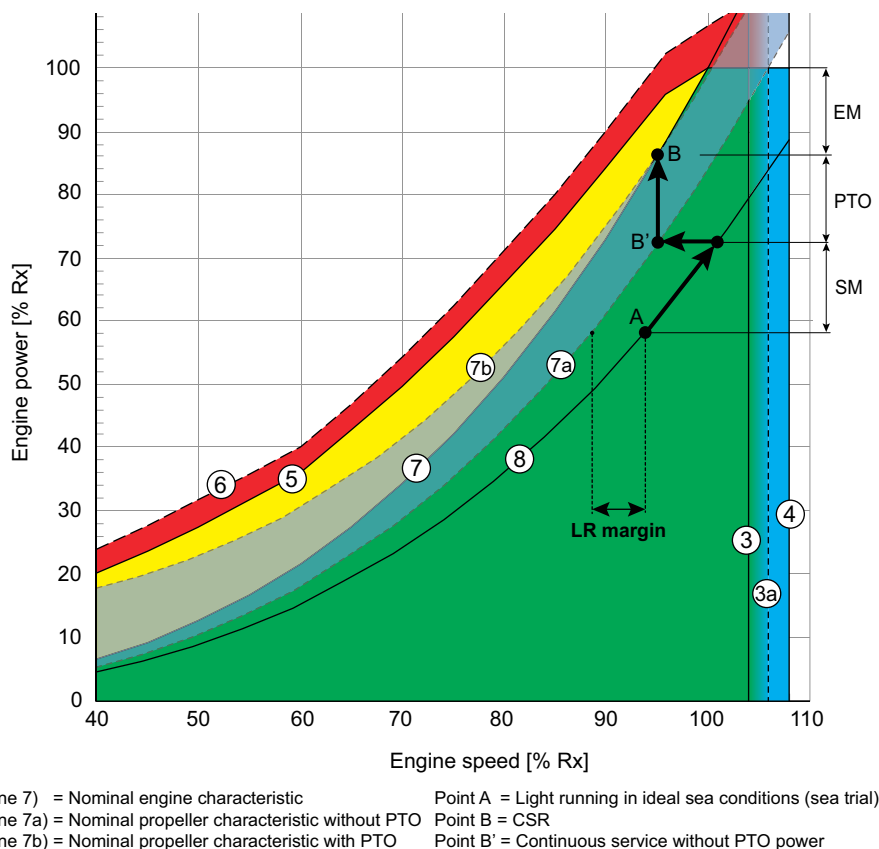


Figure 2-4 Power range diagram of an engine with a PTO

Line 7a in Figure 2-4 shows the power required for the propeller, where Line 7b shows the power needed for the propeller combined with a constant power requirement from the PTO.

With the addition of a constant nominal generator power across the engine power range, the engine curve is changed, so no longer directly related to a propeller characteristic. In Figure 2-4, 2-11, the PTO is assumed to absorb 15% of nominal engine power. The CSR point includes the PTO power demand, this is shown in the same figure between points B' and B. The CMCR point is selected from this propeller curve. This curve defines the nominal engine characteristic.

Method 1 allows for practical and flexible PTO operation, as limitations only occur in the engine lower speed range. At this lower speed range, the PTO is limited by a minimum speed requirement (as defined by the PTO device supplier) and by the PTO layout limit Line 10 (only relevant if the PTO operation is using a significant percentage of engine power).

Line 10
PTO layout power limit

The PTO layout power limit (Line 10 in Figure 2-5, ¶ 2-12) defines the power limit for the resulting combination of the propeller and PTO. Defining Line 10 as the PTO layout power limit provides a margin for normal power load fluctuation and acceleration. In case of sea trial, the PTO layout limit is shifted to line 9.

Line 11
PTO maximum speed limit

The PTO layout maximum speed limit (Line 11 in Figure 2-5, ¶ 2-12) defines maximum speed limit for the engine operating with PTO. Line 11 is defined as 100% rpm of CMCR when the engine CMCR speed is within the range of >98%–100% of R1 rpm.

Line 11a
PTO maximum speed limit

The PTO layout maximum speed limit (Line 11a in Figure 2-5, ¶ 2-12) defines maximum speed limit for the engine operating with PTO. Line 11a is defined as 102% rpm of CMCR when the engine CMCR speed is within the range of $\leq 98\%$ of R1 rpm.

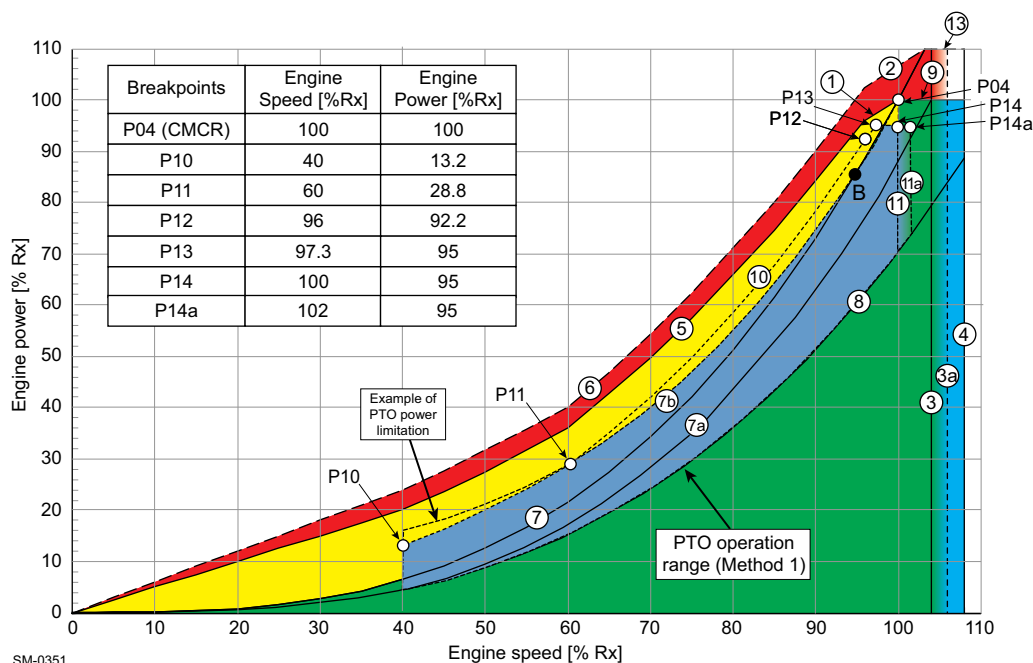


Figure 2-5 Power range limits for PTO operation: Method 1

The breakpoints of Line 10 are listed in [Figure 2-5](#), [Fig 2-12](#). Line 10 is a curve defined by [Formula 2-5](#), [Fig 2-9](#). The different components have a different coefficient, forming the entire curve (see [Table 2-4](#), [Fig 2-13](#) for the individual coefficients).

Table 2-4 Line 10 coefficients

Line no.	Range (n/n_{CMCR})	C2	C1	C0
Line 10	0.40–0.60	0.750	0.030	0.000
	0.60–0.96	1.336	-0.321	0.000
	0.96–0.973	0.000	2.1538	-1.1457
	0.973–1.00/1.02	0.000	0.000	0.95

Method 2 of the PTO incorporation

CMCR: Method 2

With this second method, the engine CMCR is determined by the propeller power only. The PTO uses the available engine power which is not absorbed by the propeller.

As shown in Figure 2-6, 2-14, the available power for the PTO application is between Line 8 and Line 10. Thus, the available PTO power depends on the available LR margin at the current time. The PTO maximum speed limit for the engine operating with PTO is instead defined by lines 11 or 11a. This is depending on the engine rating as defined in Method 1 of the PTO incorporation, 2-11.

When considering this method, a LR margin of approximately 8% is recommended.

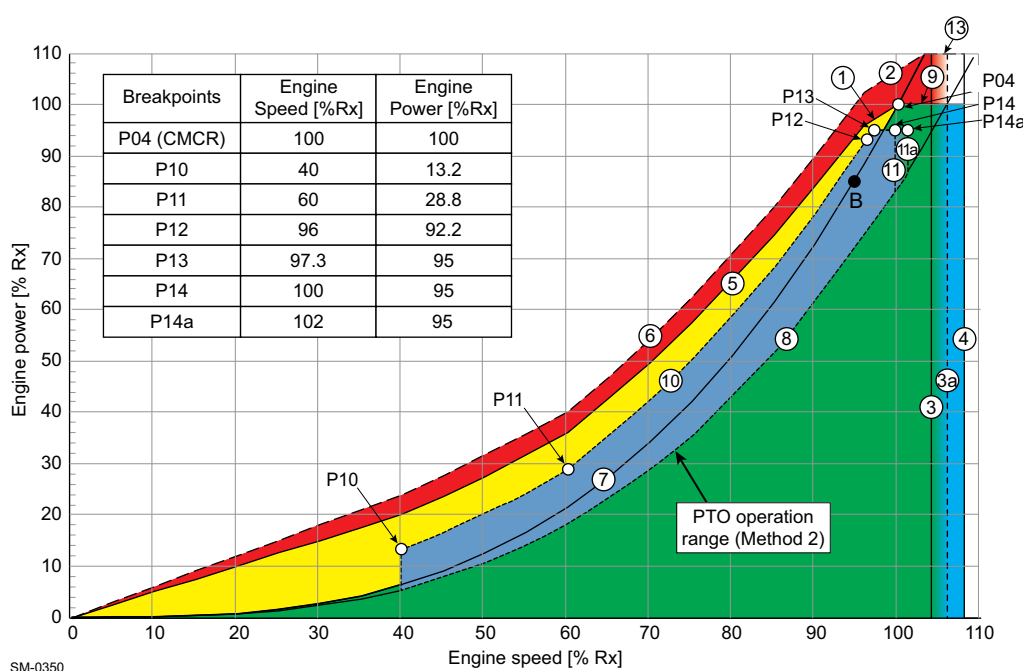


Figure 2-6 Power range limits for the PTO operation: Method 2

The PTO power must be controlled by the ship power management system, which ensures that the engine operating point does not exceed Line 10.

Further information

The following disadvantages must be observed for Method 2:

- With the reduction of the LR margin (as a consequence of the ageing hull and propeller) the available PTO power is reduced and must be limited by the ship power management system.
- The PTO is typically engaged in approximately 40%–100/102% of engine speed. The final lower limit must be defined with the supplier of the generator. The final upper limit must be set to the project-related CMCR engine speed.

If the requested PTO power is higher than the limits defined by Method 2, an increase in CMCR power is necessary.

NOTE

For the X-EL solution, the PTO extension can be investigated project-specifically. Please contact WinGD for further information.

2.7 Prohibited operation area

Within the higher speed range of the engine there is a prohibited operation area defined by a minimum engine power requirement. During normal operation, including Controllable Pitch Propeller (CPP) at zero pitch operation, the engine does not enter this prohibited area. However, if the propeller is disconnected from the engine, the engine would be capable of entering the prohibited operation area, which is strictly forbidden (see section 4.13.6 PTO testing, 4-117).

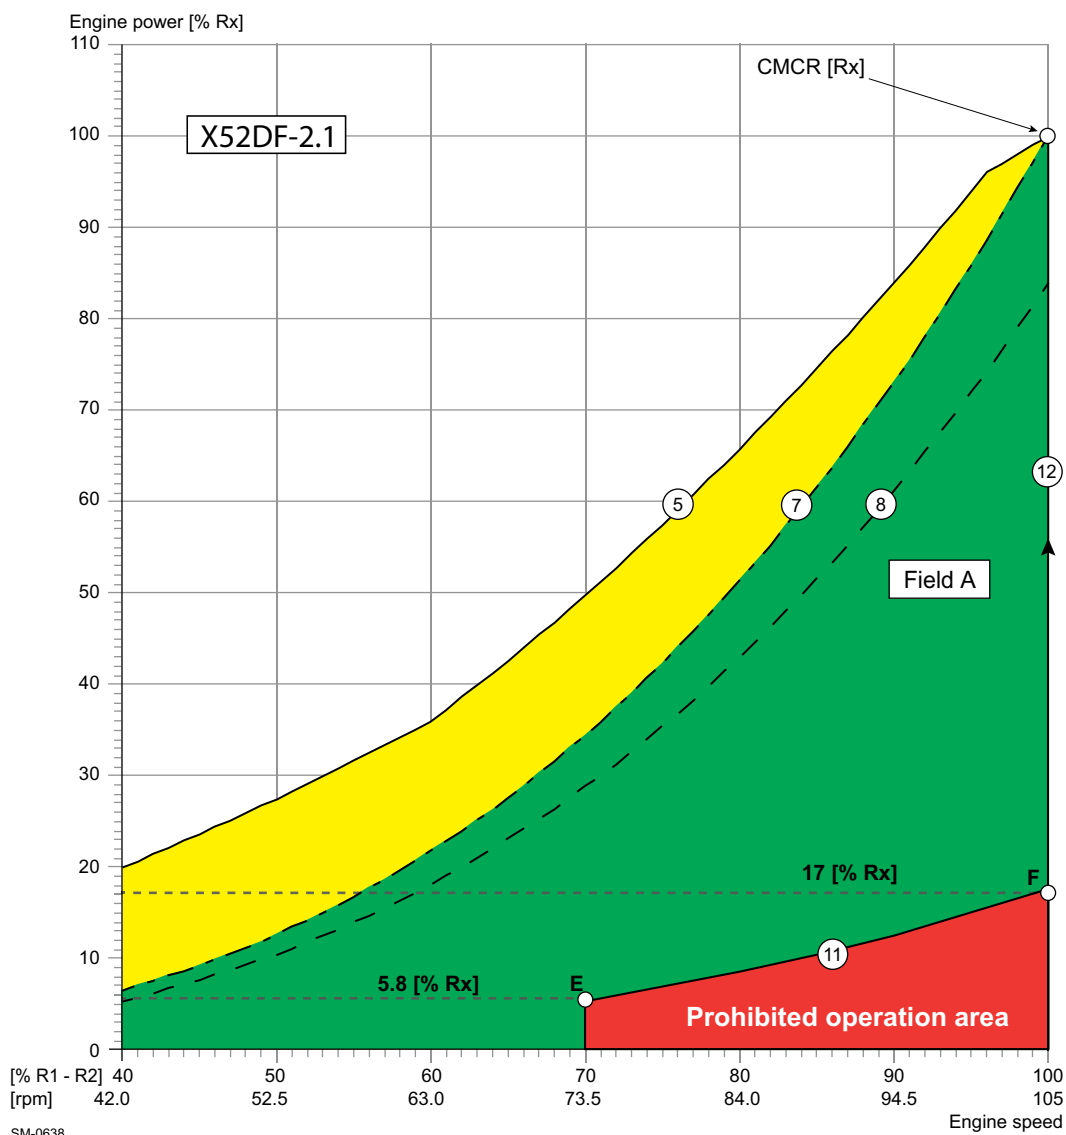


Figure 2-7 The prohibited operation area (CMCR speed = R1-R2)

NOTE

It is strictly forbidden for the engine to enter the prohibited operation area.

As shown in [Figure 2-7](#), [Fig 2-15](#), the prohibited operation area of an engine is defined by an engine tuned to an R1–R2 speed. At this speed rating the restriction exists between 70% and 100% speed, with the required minimum engine power at these points of 5.8% and 17%, respectively. These values are governed by the [Formula 2-6](#), [Fig 2-16](#) for Line 11. If the CMCR speed rating of the engine is less than the R1–R2 speed, the required minimum power at this point is also calculated by the Line 11 equation.

Line 11 The lowest operational power limit, between 70% of R1–R2 speed and 100% CMCR speed, is defined by the following equation:

$$Line11 = 0.17 \times \left(\frac{n}{n_{R1-R2}} \right)^3$$

Formula 2-6

As calculated by this equation and shown in [Figure 2-7](#), [Fig 2-15](#), at 70% of R1–R2 speed the minimum engine power equals approximately 5.8% of the CMCR power (point E). The minimum power requirement at 100% CMCR speed (point F) must be calculated depending on the engine rating. Examples of this calculation are shown further on.

Line 12 While operating at 100% CMCR speed, the allowed engine power can range between the minimum required power (point F) and 100% CMCR power.

Field A The available design range of the engine is defined by Line 7, Line 11 and Line 12.

NOTE


For test purposes, the engine can run within the prohibited operation area for a maximum of 30 minutes during testing and sea trials. This operation is only permissible at low load and in the presence of authorised representatives of the engine builder. Further requests must be agreed upon by WinGD.

NOTE

The operational design range must respect the Barred Speed Range limits from torsional vibration.

Prohibited operation area for different speed rated engines

As the prohibited operation area of the engine is between 70% and 100% of the R1–R2 speed, the prohibited area is smaller when the speed rating of the engine is lowered.

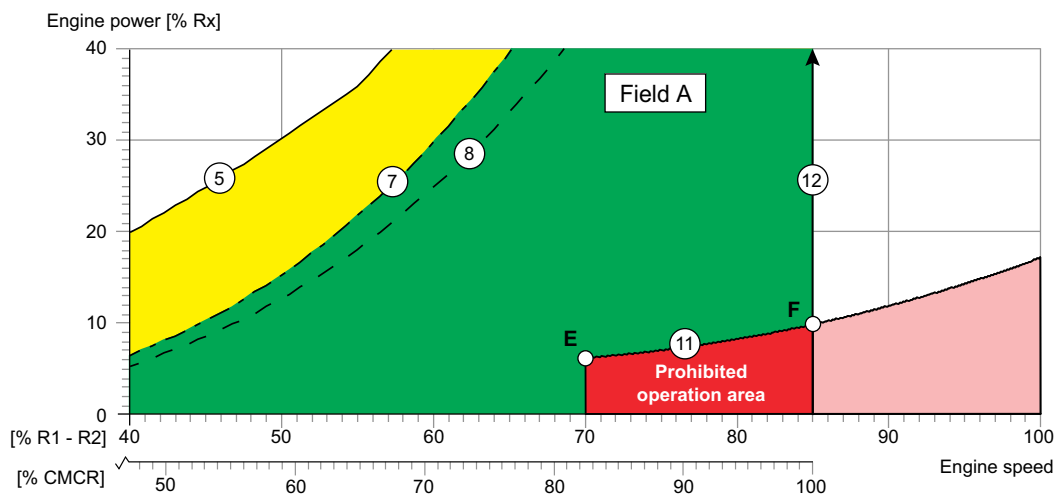

SM-0523

Figure 2-8 Calculating the prohibited operation area for the CMCR speed

Figure 2-8, 2-17 shows an engine with a CMCR speed which is rated at 85% of the R1–R2 speed and, thus, is only affected by a portion of the prohibited area of the R1–R2 speed range. The final graph for a CMCR at this speed is shown in Figure 2-9, 2-18.

**Power / speed range for
CMCR [R_x] =
85% R1-R2 speed**

In [Figure 2-9](#), [2-18](#), the engine CMC_R speed is rated at 85% of the R1–R2 speed. At this speed a minimum engine power (point F) of 10.4% is required. Below this is the prohibited area of operation for the CPP at small (to zero) pitch and disconnected propeller.

Point E is always defined at 70% of the R1–R2 speed and has a minimum power of 5.8%, however, in [Figure 2-9](#), [Figure 2-18](#), this equates to approximately 82% CMC speed.

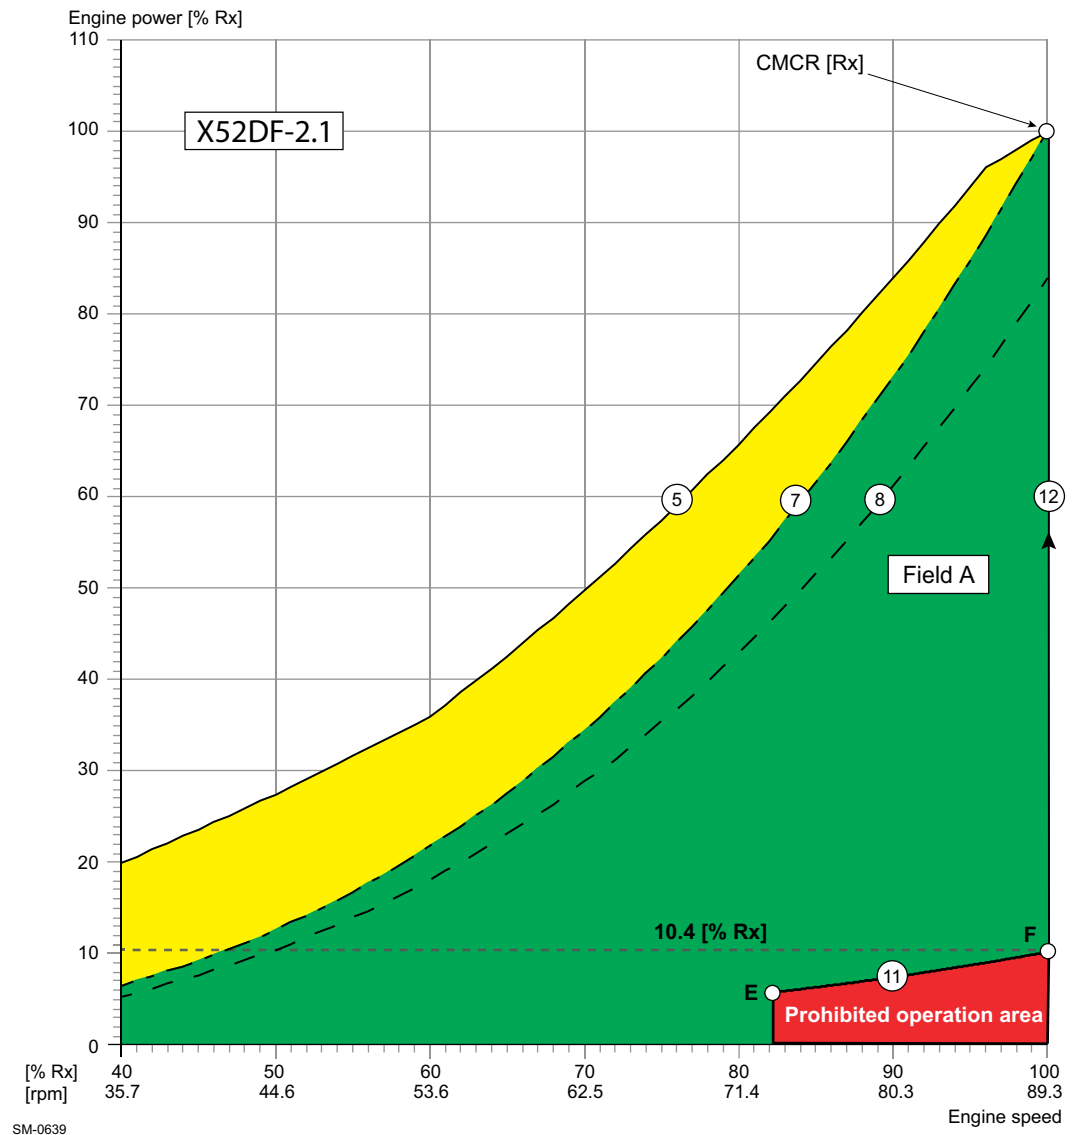


Figure 2-9 The prohibited operation area (CMCR speed = 85% of R1-R2)

Power/speed range for
CMCR [Rx] =
R3–R4 speed

In Figure 2-10, 2-19, the engine CMCR speed is rated at the R3–R4 speed. At this speed a minimum engine power (point F) of 7.2% is required. Below this is the prohibited area of operation for a disconnected propeller.

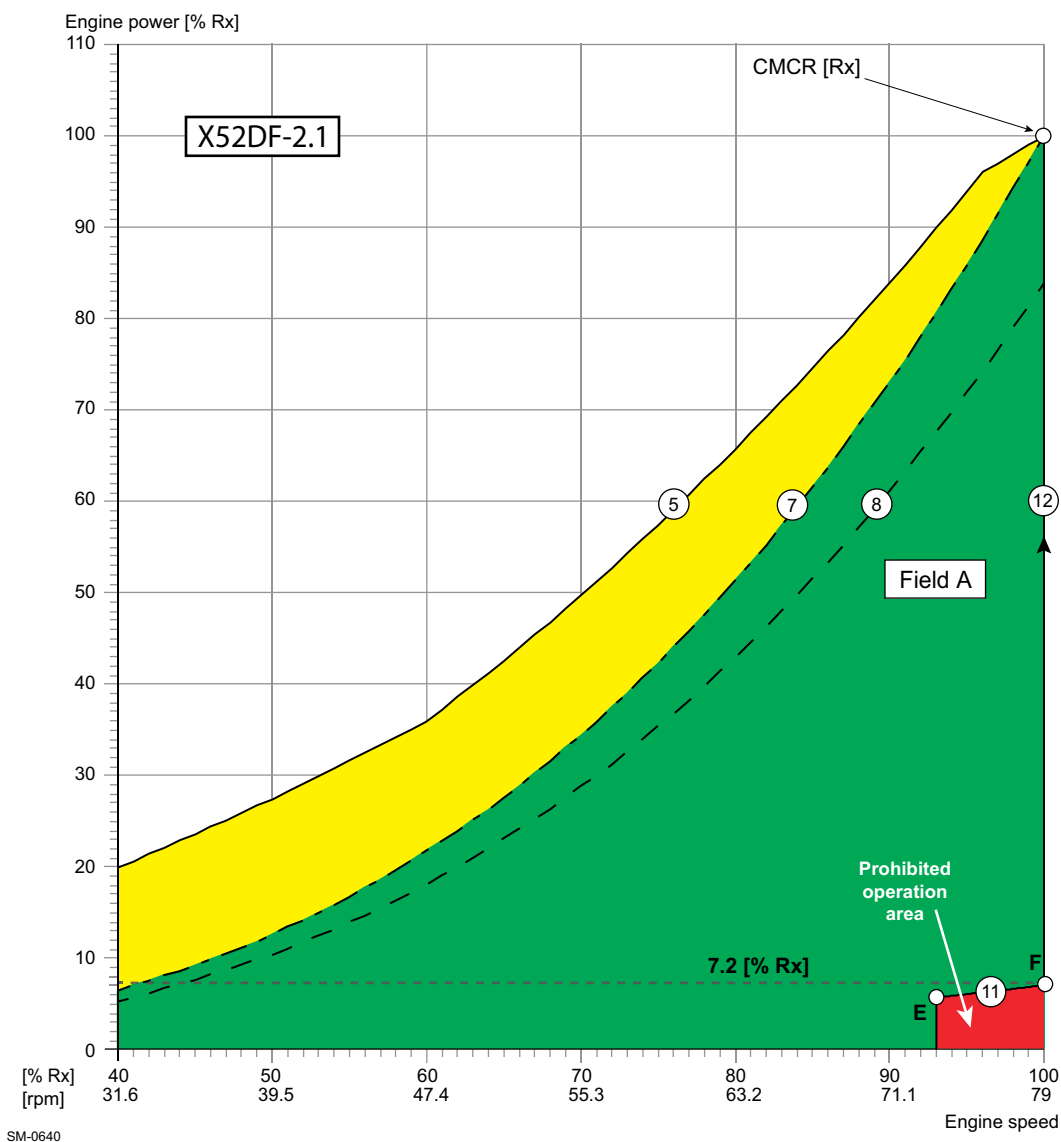


Figure 2-10 The prohibited operation area (CMCR speed = R3–R4)

2.8 CPP requirements for the Propulsion Control System

WinGD recommends including CPP control functions in the engine Remote Control System (RCS) from an approved supplier. This ensures that the requirements of the engine builder are strictly followed.

The following operating modes can be included in the Propulsion Control System (PCS):

- **Combinator mode 1**
Such a combinator mode is used for operation without a shaft generator, or with a shaft generator and frequency control system. Any combinator curve including a suitable LR margin can be set in field A.
- **Combinator mode 2**
Such an optional mode is used in connection with shaft generators. During manoeuvring the combinator curve is freely selected in field A. At sea the engine is operated at constant speed on Line 12, between point F and CMCR.

For manual and emergency operation, separate set-points for speed and pitch are usually provided. At any location allowing such operation, a plate must be placed with the following warning:

Engine must not be operated continuously at a pitch lower than xx% at any speed above 73.5rpm.

The pitch value (xx) is to be defined according to the installation data.

For additional information on the CPP application in the PCS, see the section [5.4.2 Recommended manoeuvring characteristics](#), [5-8](#).

Operation in the prohibited area


In addition, if the engine is operated for more than three minutes in the prohibited operation area, an alarm must be provided in either the main engine safety system or the vessel Alarm and Monitoring System (AMS).

If the engine is operated for more than five minutes in the prohibited operation area, the speed must be reduced below 73.5rpm.

3 Engine Installation

The purpose of this chapter is to provide information to assist in the engine installation. It is for guidance only and does not supersede current instructions.

3.1 Engine dimensions and masses

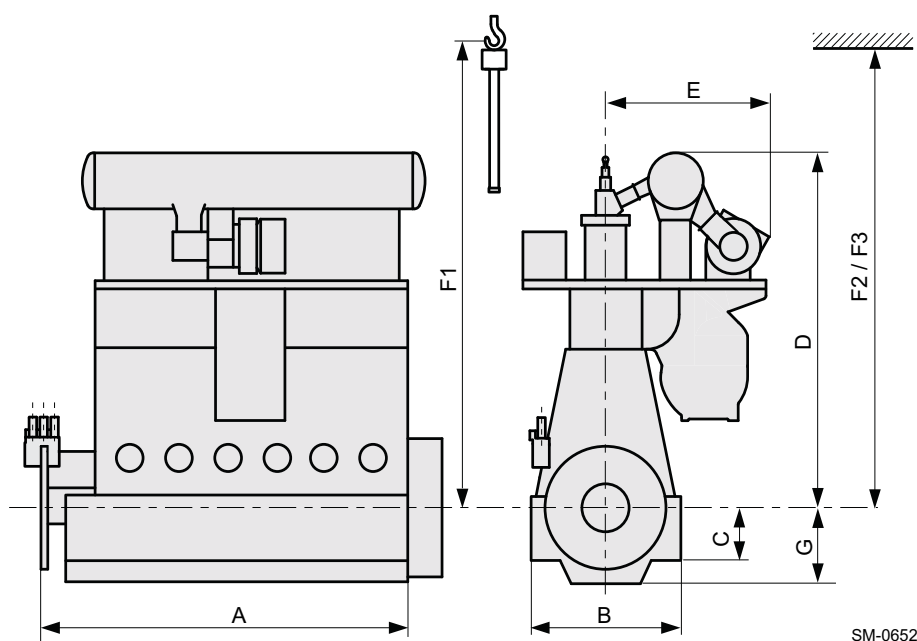

SM-0652

Figure 3-1 Engine dimensions

Table 3-1 Engine dimensions and masses

No. cyl.	Dimension in mm with a tolerance of approx. ±10 mm									Net eng. mass ^{a)}
	A	B	C	D	E	F1 ^{b)}	F2 ^{c)}	F3 ^{d)}	G	[tonnes]
5	5,985	3,514	1,205	8,415	Dim. depending on TC type	10,350	10,400	9,850	1,910	217
6	6,925									251
7	7,865									288
8	8,805									323
Min. capacity of standard crane: 3,950 kg Min. capacity of double-jib crane ^{e)} : 2 x 2,150 kg										

- a) Without oil/water; net engine mass estimated according to nominal dimensions given in drawings, including turbocharger (TC) and Scavenge Air Cooler (SAC), piping and platforms
- b) Min. height for vertical removal of piston with standard crane
- c) Min. height for vertical removal of piston with double-jib crane
- d) Min. height for tilted removal of piston with double-jib crane
- e) In case of double-jib crane application, both hooks are used in parallel; special lifting tools are required. When selecting the double-jib lifting method, it must be considered that maintenance work demands additional time and effort, especially for tilted removal (F3), compared to standard procedure (F1). Availability of the special lifting tools needs to be considered in the project schedule.

The iCER installation data are provided in section [4.2 The iCER technology](#), [4-4](#).

NOTE

The dimensions and masses provided in the above tables are not binding. For the prevailing data, please refer to the relevant drawings, which are updated on a regular basis.

Project-specific dimensions and masses for main components need to be requested from the engine builder.

3.1.1 Drawings and 3D CAD model availability

Over the course of the engine development, Design Groups (DG) become available with improving timeline accuracy. Initial concept DGs available for early engine development stages are updated to final concept DGs at the end stage. Concept design and final DGs can be mixed, however, final DGs contain more accurate data and supersede concept DGs.

In addition to the existing drawings, 3D CAD outline models for specific engines are available on WinGD web page: [Engine page](#).

Table 3-2 Design groups of shipyard drawings and 3D CAD models

Design group	Title	MIM section
0812-01	Engine Outline View – Concept	3.2
0812-02	Engine Outline View	
0816-01	Dismantling Dimensions – Concept	3.1.2
0816-02	Dismantling Dimensions	
7602-01	Platform Outline View – Concept	3.3
7602-02	Platform Outline View	
8020	Pipe Connection Plan	4.12.1
9715	Engine Stays	3.8

3.1.2 Dismantling dimensions

Dimensions F1, F2, F3 in [Figure 3-1](#), [Fig 3-1](#) and the corresponding table are only for guidance and can vary depending on crane dimensions, handling tools or dismantling tolerances. If these values cannot be met or if more detailed information is required, please contact WinGD.



For further information, please refer to “DG 0816-01 Dismantling Dimensions – Concept” and final “DG 0816-02 Dismantling Dimensions” on WinGD web page: [Drawings – Dismantling Dimensions](#).

3.1.3 Crane requirements

- An overhead travelling crane needs to be provided for normal engine maintenance (see [Table 3-1](#), [Fig 3-1](#) for crane capacity).
- The crane must conform to the requirements of the classification society.

NOTE

WinGD recommends the following general guidance for crane speeds:

- two-speed hoist with a low-speed mode of 0.2–0.8 m/minute and a high-speed mode of 2.0–8.0 m/minute
- two-speed horizontal movement with a low-speed mode of 1.0–4.0 m/minute and a high-speed mode of 4.0–8.0 m/minute.

3.1.4 Thermal expansion between turbocharger and exhaust gas piping

Before making expansion pieces enabling connections between the engine and external engine services, thermal expansion of the engine and turbocharger must be taken into account. The engine expansion is defined (from ambient temperature 20°C to service temperature 55°C) as follows (see also Figure 3-2, 3-4):

Expansion	Distance from ...
Transverse expansion (X)	... crankshaft centreline to centre of gas outlet flange
Vertical expansion (Y)	... bottom edge of bedplate to centre of gas outlet flange
Longitudinal expansion (Z)	... engine bedplate aft edge to centre of gas outlet flange

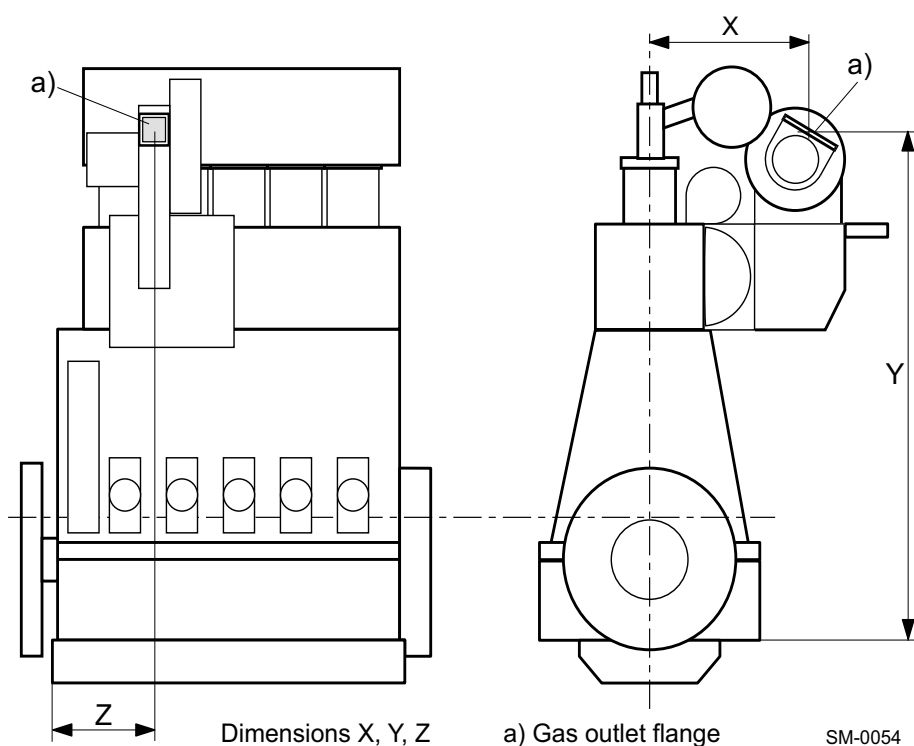


Figure 3-2 Thermal expansion, dim. X, Y, Z

Calculating thermal expansion

$$\Delta x (\Delta y, \Delta z) = X (Y, Z) \cdot \alpha \cdot \Delta T$$

where:

$\Delta x, \Delta y, \Delta z$.. = thermal expansion

X, Y, Z = distance as per relevant pipe connection plan and outline drawing

α = $1.15 \cdot 10^{-5}$ (coefficient of thermal expansion)

ΔT = difference between service temperature and ambient temperature [°C].

NOTE

For thermal expansion values of the turbocharger, please refer to the turbocharger maker's specifications.

3.1.5 Content of fluids in the engine

For the quantity of a specific fluid in the engine, please refer to the relevant MIDS drawings as listed below:

- Fuel oil – *Fuel oil system*
- Lubricating oil – *Lubricating oil system*
- Cylinder cooling water – *Cooling water systems*
- Freshwater in scavenge air cooler – *Cooling water systems*.

3.2 Engine outline views



For the engine outline views, please refer to “DG 0812-01 Engine Outline View–Concept” and final “DG 0812-02 Engine Outline View” on WinGD web page: [Drawings – Engine Outline View](#).


3.3 Platform outline views



For the platform arrangements, please refer to “DG 7602-01 Platform Outline View – Concept” and final “DG 7602-02 Platform Outline View” on WinGD web page: [Drawings – Platform Outline View](#).

3.3.1 Minimum requirements for escape routes

The platforms are arranged in such a way to ensure safe escape routes for the crew according to the minimum requirements of classification societies. Special attention must be paid to ensure the minimum distance (sufficient headroom) between the ship platform and the lower engine platform (see [Figure 3-3](#), [3-6](#)).

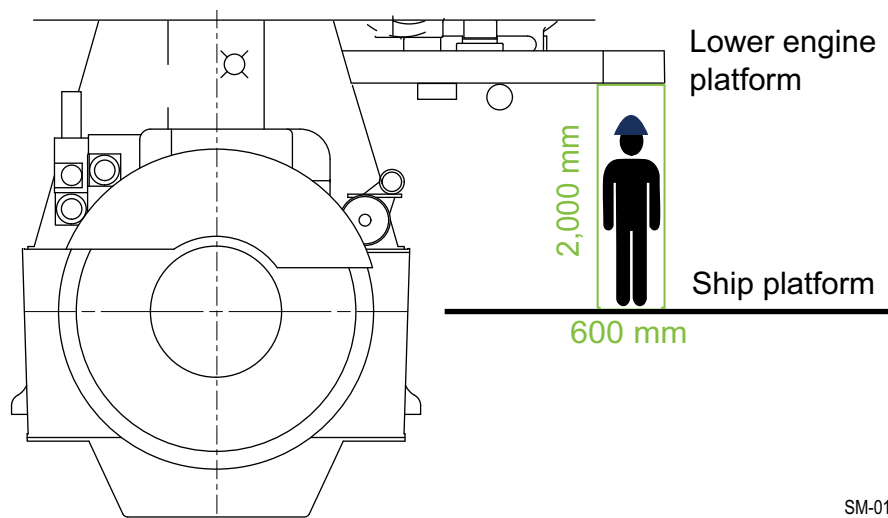

SM-0115

Figure 3-3 Minimum requirements for headroom

NOTE

The dimensions and distance between the ship platform and the lower engine platform must conform to the minimum requirements of classification societies.

No dead ends can be created on the engine platforms by shipboard installations. If a dead end cannot be prevented, then an escape route leading to the ship platform must be made before the dead end. The maximum distance to the escape route must be 2,000 mm.

3.4 Engine foundation and seating

Engine seating is integral with the double-bottom structure. It must be of sufficient strength to do the following:

- to support the engine weight
- to transmit the propeller thrust
- to withstand external couples and stresses related to propeller and engine resonance.

NOTE

Before any seating work can be performed, make sure the engine is aligned with the intermediate propeller shaft.

The longitudinal beams under the engine must protrude from the engine room bulkhead by at least half the engine length, and aft as far as possible. The maximum allowable rake is 3° to the horizontal.



For further details on the engine seating, please refer to the relevant “DG 9710 Engine Seating and Foundation – Fitting Instruction” available on WinGD web page: [Fitting Instruction](#).



The latest version of “DG 9710 Engine Seating and Foundation” is available on WinGD web page: [MIDS](#).

3.4.1 Engine load and force transmission

The engine seating foundation is a structural part of the ship integrated into the double-bottom structure. It must be designed to absorb static and dynamic forces, vibrations and torques from the engine, shaft and propeller.


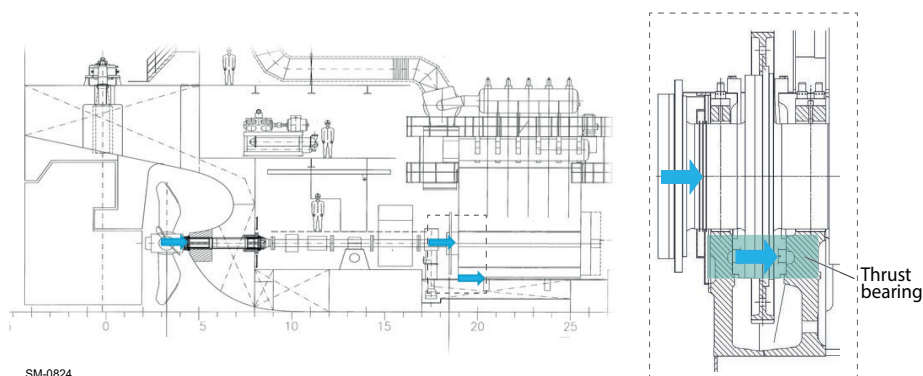


Figure 3-4 Force transmission to the engine foundation

The propulsion thrust is transmitted along the propulsion chain to the engine structure through the thrust bearing. Thrust sleeves are required to absorb the thrust force. In addition, the dynamic behaviour of engine forces requires a stiff engine seating foundation (see the standard bolting in [Figure 3-5](#), [3-8](#)).

3.4.2 Engine installation and fixation


To ensure the engine fixation under all operating conditions, the engine must be effectively and permanently tightened down by foundation bolts. WinGD recommends to use thrust sleeves at the driving end. It has proven to be an easy, quick, and cost-efficient method for force transmission. A thrust sleeve is fitted to the bottom plate of the engine bedplate and to the foundation top plate. It serves as an interface for the transmission of various forces. The holes in the foundation top plate are pre-machined (e.g. flame-cut) with a larger diameter than the thrust sleeve. Then the thrust sleeve in the hole of the foundation top plate is fixed with epoxy resin (see Figure 3-5, 3-8). The foundation bolts are inserted in the thrust sleeve and tightened together with the same torque as the regular foundation bolts. Since thrust is transmitted by the thrust sleeves, no end stoppers are required. For the engine fixation, foundation bolts are installed without the thrust sleeve assembly parts.

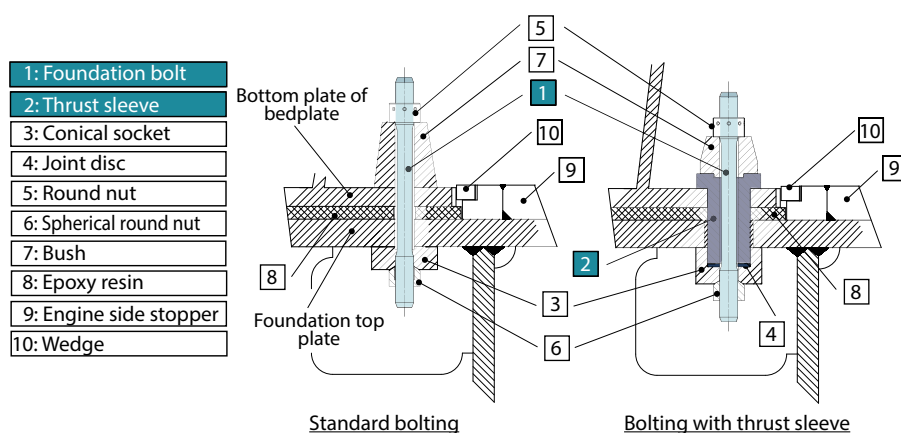

SM-0904

Figure 3-5 Foundation bolting

The classification society requires the use of side stoppers to prevent any lateral movement of the engine in case of collision. Different designs are possible for the side stoppers. WinGD proposes a welded type side stopper design (see Figure 3-6, 3-8).

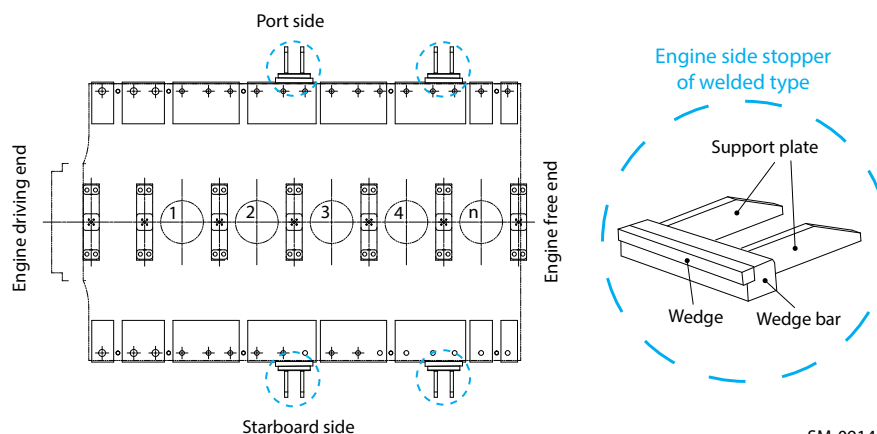

SM-0914

Figure 3-6 Welded type

The welding seam must be continuous over the entire length of the wedge. Specifications for the minimum number of side-stoppers and their positions are defined in the engine seating and foundation drawing. The minimum required contact surface of each wedge to the engine bedplate is also shown in the drawing.



The latest version of “DG 9710 Engine Seating and Foundation” is available on WinGD web page: [MIDS](#).



For further details on the engine seating, please refer to the relevant “DG 9710 Engine Seating and Foundation – Fitting Instruction” available on WinGD web page: [Fitting Instruction](#).

In some specific fitting conditions (e.g. when the foundation is directly connected to the bottom or to the cofferdam), the classification society requires the use of water-tight bolting for the engine fixation. In such cases use of water-tight bolting prevents the risk of flooding in the engine room (see [Figure 3-7](#), [3-9](#)).

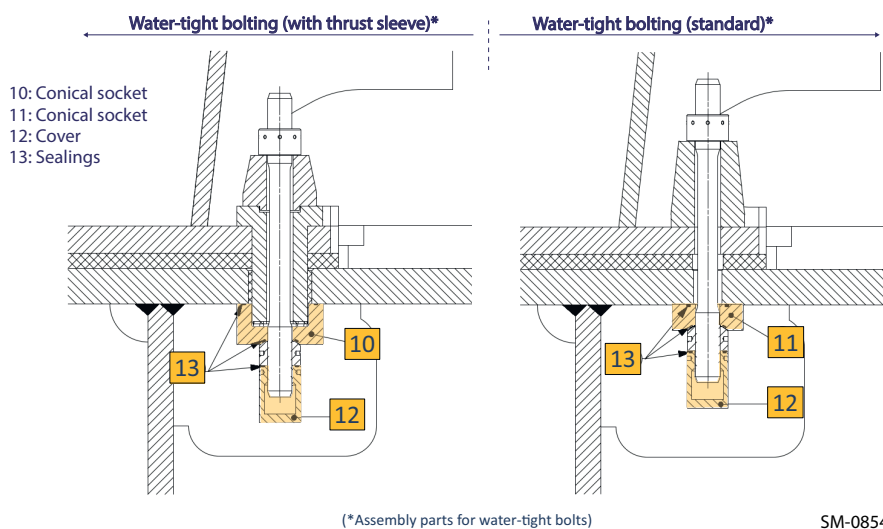


Figure 3-7 Proposed designs for water-tight bolting

3.5 Assembly

Engines can be installed as complete units or assembled from subassemblies in the vessel which can be afloat, in dry dock or on the slipway.

3.5.1 Assembly of subassemblies

When the engine seating has been approved, the bedplate is lowered onto blocks placed between the chocking points. The thickness of the blocks depends on the final alignment of the engine. Engine bedplates comprise fabricated sections with tapped holes for the jacking screws for engine alignment, and drilled holes to allow the passing of the holding-down bolts.

Checking the dimensions

- Proceed with the preliminary alignment of the bedplate using wedges or jacking screws.
- Position the engine coupling flange to the intermediate shaft coupling flange.
- Ensure that the gap between both flanges is close to the calculated figures and that both flanges are exactly parallel on the horizontal plane (max. deviation 0.05 mm).
- In the vertical plane, set the engine coupling flange 0.4-0.6 mm higher than the calculated figures.
- Place the bearing caps in position and install the turning gear.
- Ensure that the crankshaft deflections are as recorded in the "Engine Assembly Records".
- Check the bedplate level in longitudinal and diagonal directions with a taut-wire measuring device provided by the engine builder.
- Compare the readings with those recorded at works.

NOTE

For checking the dimensions, optical devices or lasers can be used.

All final dimensions must be witnessed by the representatives of the engine builder and the classification society, and recorded on appropriate log sheets. Crankshaft deflections at this stage must correspond the values recorded at works.

- Temporarily secure the bedplate against unexpected movement.
- Continue engine assembly by mounting the columns, cylinder blocks, running gear and scavenge air receiver.
- Before tensioning the tie rods ensure that the bearing caps are loose.
- Make periodic checks of the crankshaft deflections to observe and correct any possible engine distortions.
- Carry out careful adjustments of the wedges or the jacking screws to re-establish the preliminary alignment setting.

NOTE

The process of using jacking screws and wedges is defined in [MIDS](#) and must be followed to prevent any damage.

Once the engine assembly is completed, the final alignment and chocking is carried out with the vessel afloat.

3.5.2 Installation of a complete engine

In case the engine is shipped in part deliveries and assembled at the shipyard before installation in the vessel, the shipyard must undertake assembly work according to the demands of the engine builder and the classification society.

NOTE

- Strict attention must be paid to removal of anti-corrosion coatings and subsequent application of rust preventing oil where required.
- The alignment tools must be clean and ready for use.

Please observe the following:

- Engine mounting must be carried out systematically.
- The measurement readings must be recorded on appropriate log sheets and compared for correctness with the data in the “Engine Assembly Records” completed after test run in the manufacturer’s works.
- The engine must be lowered onto blocks between the chocking points.
- The blocks must be set in such a way that the engine is slightly higher than the final position, because less effort is required to lower the engine than to raise it for alignment.
- For movements in the horizontal plane, both in lateral or longitudinal directions, the shipyard must construct appropriate anchor points for the use of hydraulic jacks. Such movements must be carried out with great care to avoid stresses and distortions to the bedplate.
- Regular crankshaft deflection readings must be taken to observe the effects. Any noticed deviation must be rectified immediately.

3.5.3 Installation of an engine from assembled subassemblies

Subassemblies of the engine can be assembled ashore before installation in the ship. Such an assembly can comprise the following components:

- bedplate
- main and thrust bearings
- crankshaft
- turning gear
- flywheel.

The placing on blocks and alignment to shafting is similar to the description in section [3.5.1 Assembly of subassemblies](#), [Fig 3-10](#).

3.5.4 Installation of an engine in ship on slipway

It is possible to install a complete or partially assembled engine in a ship under construction on an inclined slipway if attention is paid to the following:

- large components suspended to take account of the incline
- tie rods centred and exactly perpendicular to the bedplate before tightening
- side, fore and aft arresters temporarily fitted to prevent the engine from moving during launching of the ship
- additional temporary stays attached at upper platform level to steady the engine during launching.

3.6 Engine and shaft alignment

Alignment and chocking of the engine must be carried out in accordance with WinGD recommendations and are subject to test and inspection by the relevant classification society.

Each stage of engine mounting must be checked by qualified personnel and the measurements must be cross-checked with the design figures. In case of discrepancies the responsible parties (e.g. shipyard) must consult with the engine builder or WinGD.

3.6.1 Instructions and limits

Alignment can be done with either jacking screws or wedges.



For detailed alignment procedures, please refer to the latest version of “DG 9709 Engine Alignment” on WinGD web page: [Engine alignment](#).

3.6.2 Tools



For “DG 9710-01 Engine Seating and Foundation – Engine Alignment Tools”, please refer to the latest version of the respective drawings on WinGD web page: [Tool engine alignment](#).

3.7 Engine coupling

3.7.1 Design

The design of coupling bolts and holes for the flange connection of crankshaft / propulsion shafts, as provided by “DG 3114 Connection Crank / Propeller Shaft”, is included in the engine design approval by all major classification societies.

3.7.2 Machining and fitting of coupling bolts

- Before fitting the coupling bolts ensure that the mating flanges are concentric. Close the gap between the flanges completely by means of min. 4 temporary (non-fitted) bolts evenly distributed over the pitch hole diameter.
- Carry out drilling and reaming of the engine and shaft couplings by means of a computer controlled drilling machine or an accurately centred jig.
- In the case of non-matching holes or damaged holes apply joint cylindrical reaming to an oversize hole and then fit an individually machined bolt.
- The bolts must be available for inserting in the holes on completion of reaming. Each bolt must be stamped with its position in the coupling, with the same mark stamped adjacent to the hole. The following tolerances must be met:
 - bolt hole tolerance: H7
 - bolt tolerance: g6 (clearance fit).
- If there is any doubt that a fitted bolt is too slack or too tight, refer to the classification society surveyor and to the engine builder.

3.7.3 Tightening

- When tightening the coupling bolts it is essential to work methodically. Perform crosswise tightening, taking up the threads on opposite bolts to hand-tight, followed by sequential torque tightening. Finally ensure the same proper tightening for all bolts.
- Mark each bolt head in turn (1, 2, 3 etc.) and tighten opposite nuts in turn, according to the Tightening Instructions, making sure that the bolt head is securely held and unable to rotate with the nut.
- Lock castellated nuts, according to the Class requirements, with either locking wires or split pins. Use feeler gauges during the tightening process to ensure that the coupling faces are properly mated with no clearance.

3.7.4 Installation drawing



The latest version of “DG 3114 Connection Crank / Propeller Shaft” is available on WinGD web page: [Connection crank/propeller shaft](#).

3.8 Engine stays

Ship vibrations and engine rocking caused by the engine behaviour (see chapter 6 [Engine Dynamics](#), ¶ 6-1) are reduced by fitting lateral stays (see section 6.2 [External lateral forces and moments](#), ¶ 6-7) and longitudinal stays (see section 6.3 [Longitudinal vibration \(pitching\)](#), ¶ 6-15).



The latest version of “DG 9715 Engine Stays” is available on WinGD web page: [MIDS](#).

3.9 Propulsion shaft earthing

Electric current flows when a potential difference exists between two materials. The creation of a potential difference is associated with:

- *thermoelectric* induction by the application of heat
- *triboelectric* induction between interactive surfaces
- *electrochemical* induction when an electrolytic solution exists
- *electromagnetic* induction when a conducting material passes through a magnetic field.

Tracking or leakage currents are created in machinery by any of the above means and, if they are not adequately directed to earth, can lead to component failures, or in some cases result in fires and interference with control and monitoring instrumentation.

3.9.1 Preventive action

Using earthing brushes in contact with slip rings and bonding the chassis by braided copper wire are common ways of protecting electric machines. If operating loads and voltages are comparatively low, the supply is isolated from the machine by an 'isolating transformer', often with handheld power tools. The building specification dictates that the earthing procedure must be followed and the classification society must approve the final installation. On vessels with star-wound alternators the neutral is considered to be earth, and electrical devices are protected by automatic fuses.

Isolation of instrument wiring

Ensure that instrument wiring meets the building and classification society specifications and that it is shielded and isolated to prevent induced signal errors and short circuits.

In certain cases large items of machinery are isolated from their foundations, and couplings are isolated to prevent current flow, e.g. when electric motors are connected to a common gear box.

Retrospective fitting of earthing devices is not uncommon, but if tracking and leakage currents are expected, at the design stage adequate shielding of control equipment and earthing protection must be considered. Magnetic induction and polarisation must be avoided and degaussing equipment must be incorporated if a problem is possible.

3.9.2 Earthing device

Figure 3-8, 3-16 shows a typical shaft earthing device. The slip ring (1) is supplied as matched halves to suit the shaft. It is secured by two tension bands (2) using clamps (12). The slip ring mating faces are finished flush and butt jointed with solder. The brushes (4) are housed in the twin holder (3) clamped to a stainless steel spindle (6), and there is a monitoring brush (11) in a single holder (10) clamped to an insulated spindle (9). Both spindles are attached to the mounting bracket (8).

**Conducting material
for slip rings**

Different combinations of conducting material are available for the construction of slip rings. However, alloys with a high silver content are considered efficient and hard-wearing.

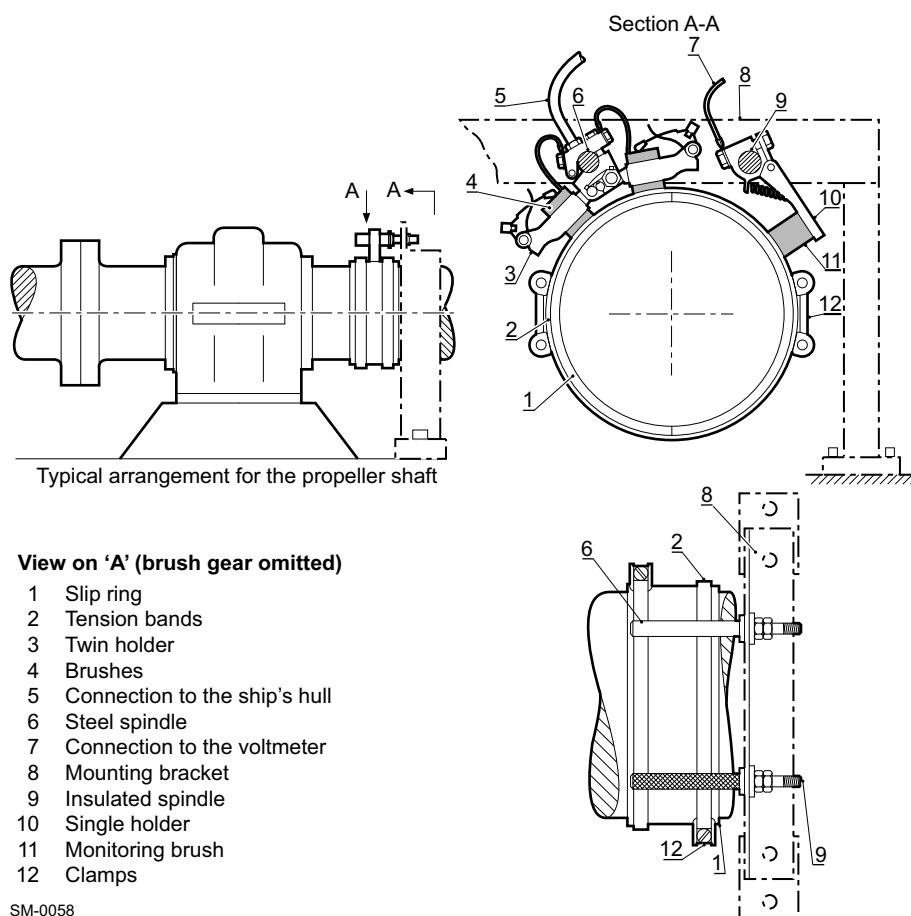


Figure 3-8 Typical shaft earthing arrangement

**Position of earthing
device on shaft**

The earthing device must be as close as possible to the main engine flywheel. For installation of a PTO/PTI/PTH on the driving end side, the earthing device must be placed between the PTO/PTI/PTH and the main engine flywheel.

NOTE

An additional earthing device might be required to protect the shaft bearings and the stern tube bearings. For detailed information, please contact the earthing device supplier.

Connecting electric cables

The electric cables are connected as shown in [Figure 3-9](#), [3-17](#) with the optional voltmeter. This instrument is at the discretion of the owner, but it is useful to observe that the potential to earth does not rise above 100 mV.


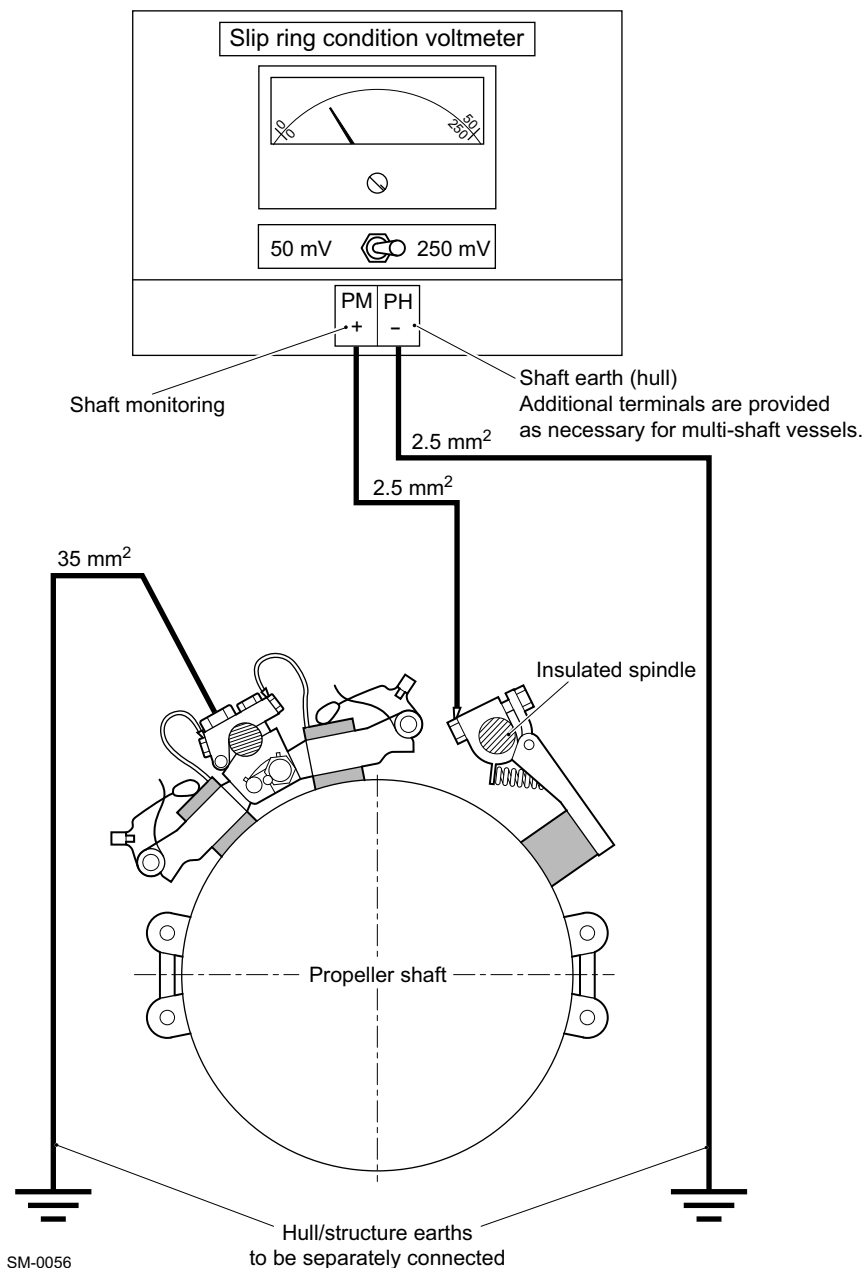


Figure 3-9 Typical shaft earthing with condition monitoring facility

3.10 Twin-engine propulsion

Twin engines are used in many applications depending on design rules and the customer's requirements. This layout offers increased system redundancy, permitting one engine to be taken out of service without disabling the ship. Such work is common during a port stay with one engine on standby, while maintenance is performed on the other.

WinGD recommends that a shaft-locking device is added to all twin-engine installations (see [Figure 3-10](#), [3-18](#)).

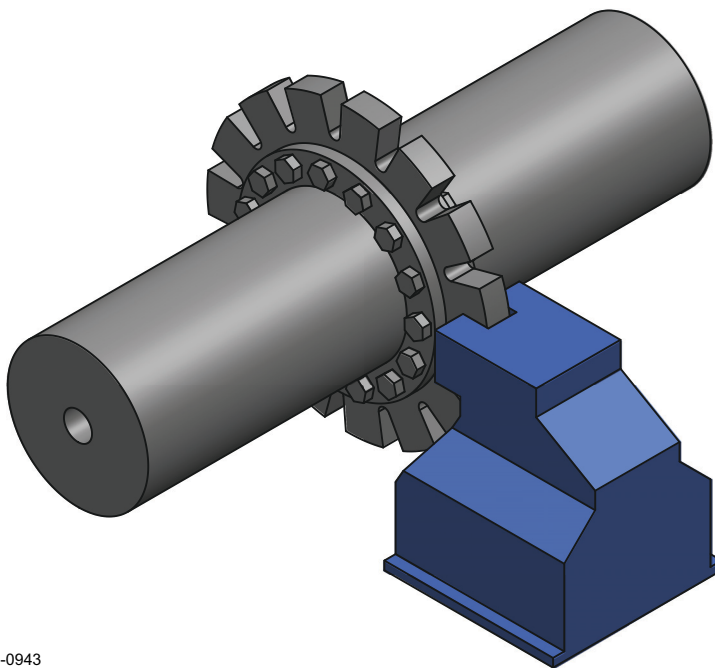

SM-0943

Figure 3-10 Example of a shaft-locking device

NOTE

- During ship design, the impact of vibration by operating the twin-engine vessel with only one running engine while the other engine is connected to locked shaft must be checked by a Torsional Vibration Calculation. The Torsional Vibration Calculation must consider the higher absorbed propeller power.
 - During ship operation, with only one of the twin-engines in operation while the other is connected to a windmilling propeller, no engine must be operated in the barred speed range, neither the windmilling nor the running engine. The barred speed range does not change if an engine is actively running or windmilling.
- For further details, see section [6.4 Torsional vibration](#), [6-17](#).

3.11 Fire protection

Fires can develop in areas, such as scavenge air receiver / piston underside. The engine is fitted with a piping system which leads the fire extinguishing agent into the critical areas.

Where fire protection is required, the final arrangement of the fire extinguishing system must be submitted for approval to the relevant classification society.

Extinguishing agents

Various extinguishing agents can be considered for fire fighting purposes. They are selected either by the shipbuilder or the ship owner in compliance with the rules of the classification society involved.

Steam as an alternative fire extinguishing medium is permissible for the scavenge air spaces of the piston underside. However, it can cause corrosion if countermeasures are not taken immediately after its use. These countermeasures comprise:

- opening scavenge spaces and removing oil and carbon deposits
- drying all unpainted surfaces and applying rust protection (i.e. lubricating oil).

NOTE

If steam is used for the scavenge spaces, a water trap is recommended at each entry to the engine. It must be assured that steam Shut-Off Valves are tight when not in use.

Table 3-3 Recommended quantities of fire extinguishing medium

Piston underside and scavenge air receiver		Bottle		Number of cylinders			
				5	6	7	8
Volume [m ³ /cyl]	Mass [kg/cyl]	Size [kg]	Extinguishing medium	Quantity of fire extinguishing bottles			
4.2	15	45	Carbon dioxide (CO ₂)	2	2	3	3

3.12 Conditions and requirements

3.12.1 Pressure and temperature ranges



For the information on pressure and temperature ranges, please refer to the document available on WinGD web page: [Usual values and safeguard settings](#).

For signal processing, see section [5.6.1 Signal processing](#), [5-12](#).

3.12.2 Operating conditions

The engine can be operated without any restrictions in the ambient condition range 'winter', as permissible by [GTD](#), up to the design conditions. Operation outside these limits is possible, but further measures need to be taken and the power output can be limited (see [4.11.4 Outside ambient air temperature](#), [4-107](#)). For project-specific support, please contact WinGD.

Reference conditions

Engine performance data, like Brake Specific Energy Consumption (BSEC), Brake Specific Exhaust gas Flow (BSEF), Temperature Exhaust gas after Turbo-charger (tEaT), etc., are based on reference conditions. These conditions are specified in ISO standard 15550 (core standard) and, for marine application, in ISO standard 3046 (satellite standard) as follows:

Air temperature before blower	25 °C
Engine room ambient air temperature	25 °C
Coolant temperature before scavenge air cooler	25 °C
Barometric pressure	1,000 mbar
Relative humidity	30%

Design conditions

The capacities of ancillaries are specified according to ISO standard 3046-1 (clause 11.4) following the International Association of Classification Societies (IACS) and are defined as design conditions:

Air temperature before blower	45 °C
Engine room ambient air temperature	45 °C
Coolant temperature before scavenge air cooler	36 °C
Barometric pressure	1,000 mbar
Relative humidity	60%

3.12.3 Ancillary systems design parameters

The layout of the engine ancillary systems is based on the engine rated performance (rating point Rx, Contracted Maximum Continuous Rating (CMCR)). Several parameters must be considered to ensure proper function of the engine and its ancillary systems.

Cylinder cooling water and system oil temperatures

The cylinder cooling water outlet and system oil inlet temperatures must be controlled in the relevant ancillary system to remain within the following specified levels:

Cylinder cooling water outlet temperature	90 °C
Oil temperature before engine	45 °C

Exhaust gas back pressure

The below back pressures correspond to the pipe connection of the iCER return pipe. For engines with a single turbocharger and an exhaust gas return pipe routed to the turbocharger connection from above, an additional back pressure of 10 mbar during iCER operation is caused by the water mist catcher. The water mist catcher is integrated into the engine downstream of the iCER return pipe connection. For all installations with an exhaust gas return pipe routed from the turbocharger connection from below (e.g. compact arrangements, iCER on-engine systems, and installations with multiple turbochargers) no additional back pressure is required. In the *GTD*, the available back pressure range refers specifically to the back pressure between the turbocharger inlet and outlet. As a result, the GTD provides a back pressure range which is 10 mbar higher than the above values for engines with a single turbocharger and an exhaust gas return pipe routed to the turbocharger connection from above.

Design exhaust gas back pressure in diesel Tier II mode at rated power (Rx)	30–60 mbar
Operational limit	
Exhaust gas back pressure in iCER gas mode at rated power (Rx)	80 mbar
• for engines with an exhaust gas return pipe to the turbocharger connection from above	
◦ design limit	20–35 mbar
◦ operational limit	45 mbar
• for engines with an exhaust gas return pipe to the turbocharger connection from below	
◦ design limit	30–45 mbar
◦ operational limit	55 mbar
Exhaust gas back pressure in iCER diesel Tier III mode ^{a)} at rated power (Rx)	not relevant for layout

a) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

3.12.4 Description of the back pressure specifications

Diesel Tier II mode

In this mode all exhaust gas passes through the main exhaust pipe via the main economiser to the funnel. For the X-DF2.0 engines no additional exhaust gas after-treatment systems are foreseen. The exhaust gas back pressure has a direct influence on the engine efficiency and, thus, must be minimised. However, to enable installation of a main economiser which is also highly efficient during iCER operation (during which the exhaust gas flow to the funnel is reduced due to the iCER recirculation), the back pressure limit can be increased from the standard value of 30 mbar to 60 mbar.

iCER gas mode

In this mode, exhaust gas flow to the funnel is reduced due to iCER recirculation, resulting in much lower back pressure than the diesel Tier II design limit. Rather the iCER system back pressure is relevant for this operating mode.

3.12.5 Electrical power requirement

Table 3-4 Electrical power requirement

No. cyl.	Power requirement [kW]	Power supply
Auxiliary blowers ^{a)}		
5	2 x 28	440V / 60Hz
6	2 x 30	
7	2 x 36	
8	2 x 45	
Turning gear		
5	2.2	440V / 60Hz
6	2.2	
7	2.2	
8	2.2	
Engine control system		
5	0.6	220V / 60Hz
6	0.7	
7	0.8	
8	0.8	
Pilot fuel pump		
All	12.8	440V / 60Hz
Trace heating of injection pipes		
5	2.4	220V / 60Hz
6	2.8	
7	3.3	
8	3.8	
Trace heating of cylinder lubricating oil pipes ^{b)}		
5	3.5	220V / 60Hz
6	3.6	
7	3.6	
8	3.7	
Propulsion control system		
All	Acc. to the maker's specifications	24VDC (UPS)
Additional monitoring devices (e.g. oil mist detector, etc.)		
All	Acc. to the maker's specifications	

a) Minimal electric motor power (shaft) is indicated. Actual electric power requirement depends on size, type and voltage/frequency of installed electric motor. Direct starting or Star-Delta starting to be specified when ordering.

b) The values provided are only for the on-engine pipes. The engine provides the possibility to connect an external trace heating cable of up to 80 m (which corresponds to the 16 A circuit breaker rating).

4 Ancillary Systems

Sizing the ancillary systems of the engine, i.e. for freshwater cooling, Lubricating Oil (LO), fuel oil, etc. depends on the contracted maximum engine power. If the expected system design is out of the scope of this Manual (MIM), contact our representative or WinGD directly.



The *GTD* application provides data for estimating the size of ancillary equipment and enables all engine and system data at any Rx rating within the engine rating field to be obtained. However, for convenience or for final confirmation when optimising the plant, WinGD provides a computerised calculation service.

NOTE

All pipework systems must be flushed and proved clean before commissioning.

All pipework systems and fittings must conform to the requirements laid down by the legislative council of the vessel country of registration and the classification society selected by the owners. They must be designed and installed to accommodate the quantities, velocities, flow rates and contents identified in the MIM. They must be set to work in accordance with the build specification as approved by the classification society and protected at all times from ingress of foreign bodies.

4.1 Twin-engine installation


A vessel equipped with two separate main propulsion engines is considered a twin-engine installation. The installation of two WinGD 2-stroke engines allows combining individual engine auxiliary systems. WinGD provides information based on the engines requirements (see [Table 4-1](#), [Figure 4-2](#)). Class and other binding rules can take precedence.

Table 4-1 Common and independent systems in twin-engine installations

System	Independent system for each engine required	Common system possible	Remarks
Exhaust gas cooler circulation water system (Figure 4-7 , Figure 4-8)	X		Independent exhaust gas coolers
		X	Including exhaust gas cooler circulation water tank
Exhaust gas cooler circulation water treatment system		X	
Low-temperature cooling water system (Figure 4-1 , Figure 4-3)		X	Parallel independent low-temperature cooling water supply per engine to the scavenge air coolers from common low-temperature cooling water circuit
		X	Parallel independent low-temperature cooling water supply per engine to the lubricating oil cooler and high-temperature cooling water cooler from common low-temperature cooling water circuit
High-temperature cooling water system	X		
Main lubricating oil system	X		
Cylinder lubricating oil system (Figure 4-24 , Figure 4-37 and Figure 4-25 , Figure 4-38)		X	Day tanks for high- and low-base-number lubricating oil respectively
		X	Rising pipe
	X		Separate distribution to each engine
Fuel oil system	X ^{a)}	X ^{b)}	Feed system
	X	(X)	Booster circuit systems
Air supply system	X		
Control air		X	Supply system
Leakage collection system and washing devices	X		
Exhaust gas system	X		
Engine venting pipes	X		
X = proven solution (X) = alternative solution, if specific conditions are met			

a) Independent systems required if a fuel flexibility for both engines is specified, meaning that the engines can independently operate in gas mode, Fuel Sharing Mode (FSM) or diesel mode. Main injector fuel can be MGO, MDO or Heavy Fuel Oil (HFO) with max. 0.5% m/m sulphur content in FSM and diesel mode..

b) Common system possible if no fuel flexibility is specified, meaning that both engines can only run with the same main injector fuel, i.e. if one engine operates in gas mode, the other engine cannot operate with HFO with max. 0.5% m/m sulphur content as main injector fuel.

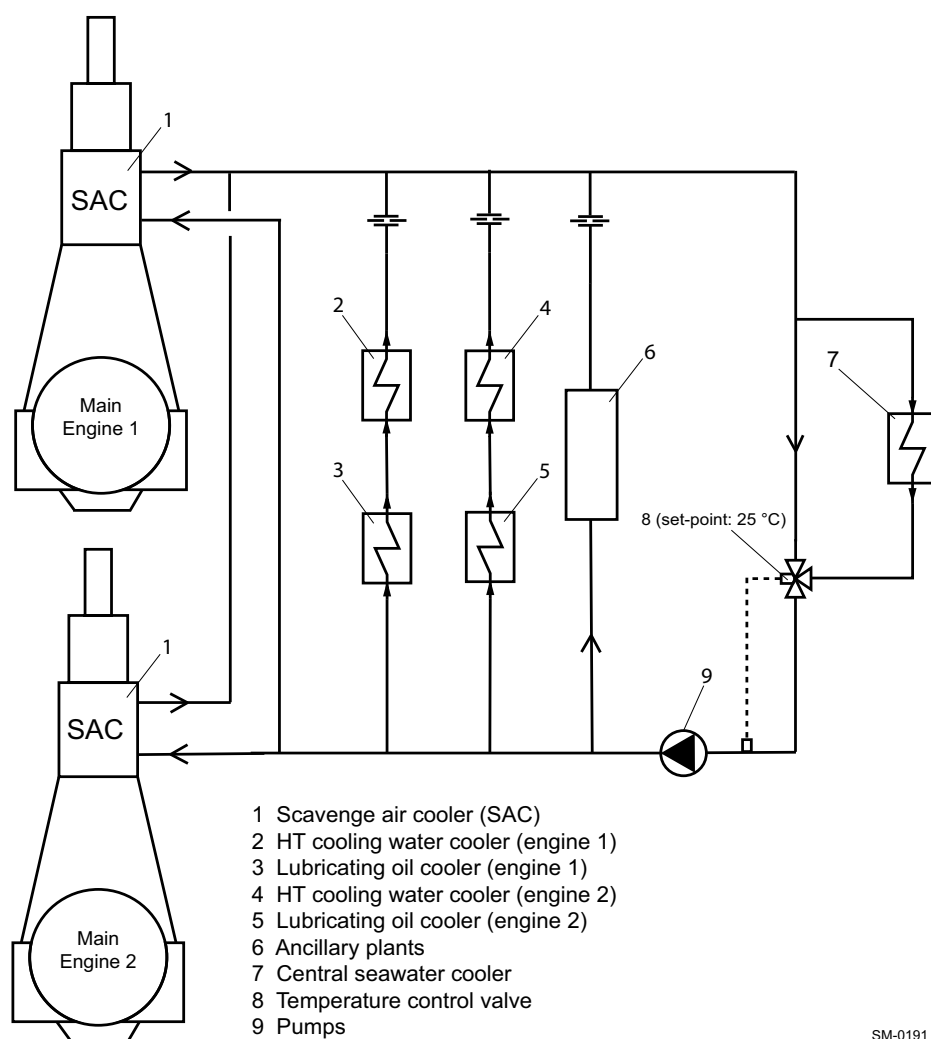

SM-0191

Figure 4-1 LT cooling water system for twin-engine installation

4.2 The iCER technology

This engine is equipped with the Intelligent Control by Exhaust Recycling (iCER) system. This facilitates the recirculation of part of the exhaust gas back to the engine. By replacing some of the oxygen with CO₂ the stability of the engine combustion is increased. This allows an increase in the engine pressure ratio and, as a result, an increase in combustion efficiency.

This engine can also be selected with iCER operation in iCER diesel Tier III mode¹⁾ (see [iCER diesel Tier III mode](#), 1-12). In this case exhaust gas recirculation is used to reduce the NO_x emissions.

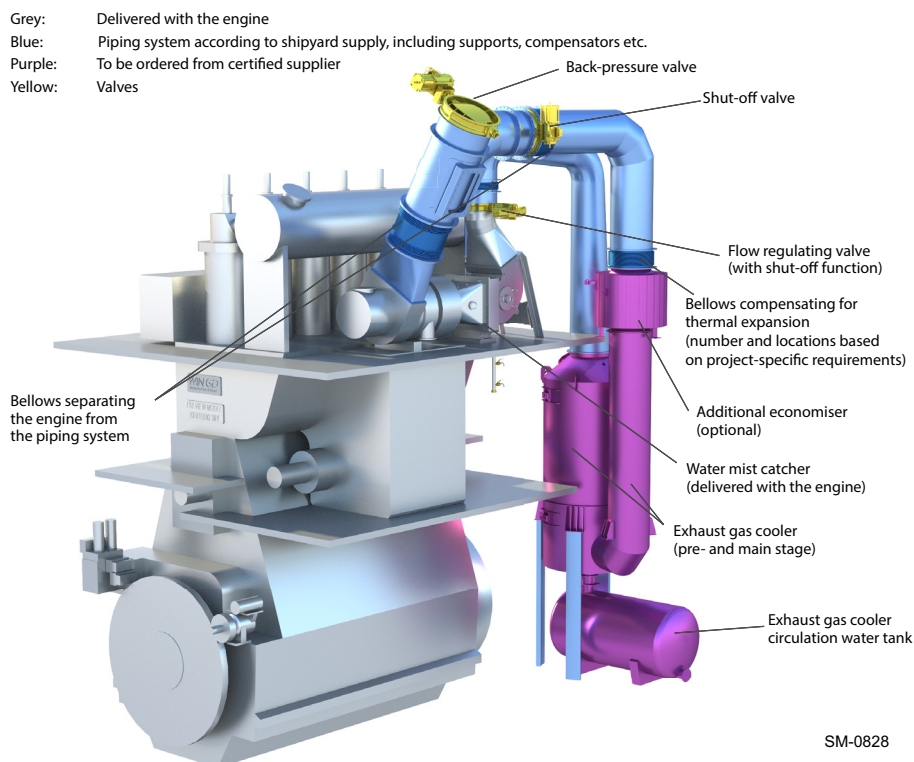


Figure 4-2 Overview of the components for the iCER system with one turbocharger

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

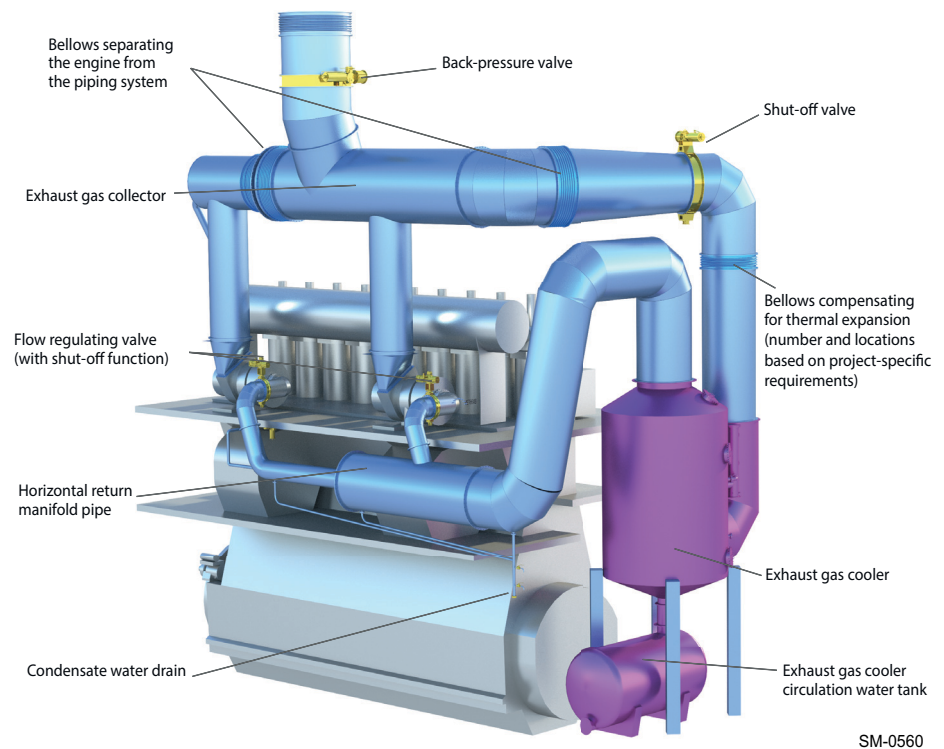


Figure 4-3 Overview of the components for the iCER system with two turbochargers

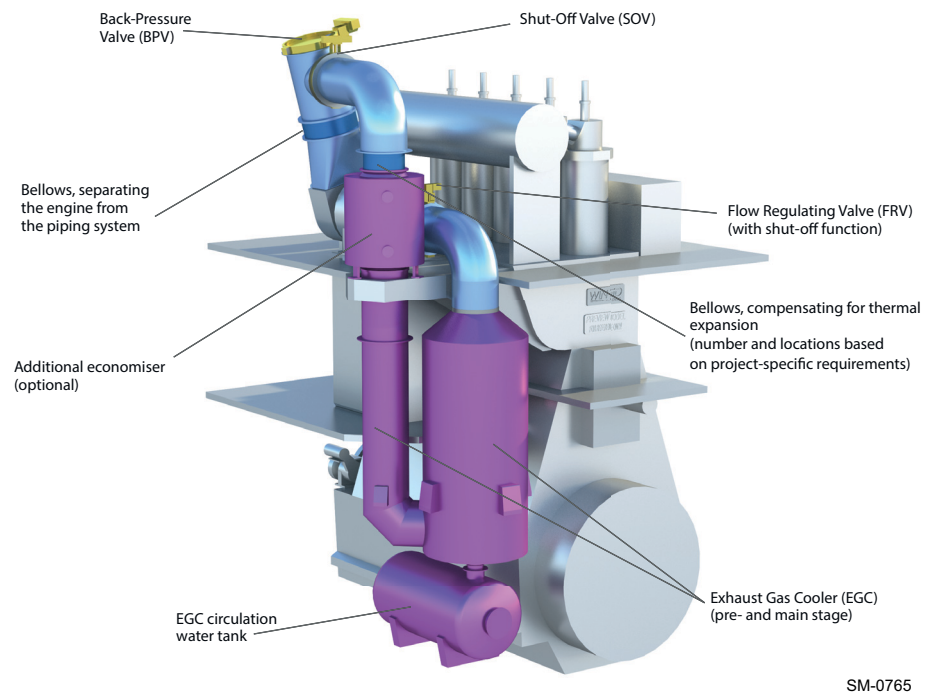


Figure 4-4 Overview of the components for the compact arrangement of the iCER system with one turbocharger

4.2.1 The iCER description

The iCER system redirects part of the exhaust gas after the turbocharger. The exhaust gas temperature is then lowered by the EGC before passing through the turbocharger again at the compressor inlet. Finally, the exhaust gas passes through the scavenge air receiver (via the inlet). This exhaust gas reduces the amount of oxygen flowing into the engine, acting as an inert gas on the combustion.

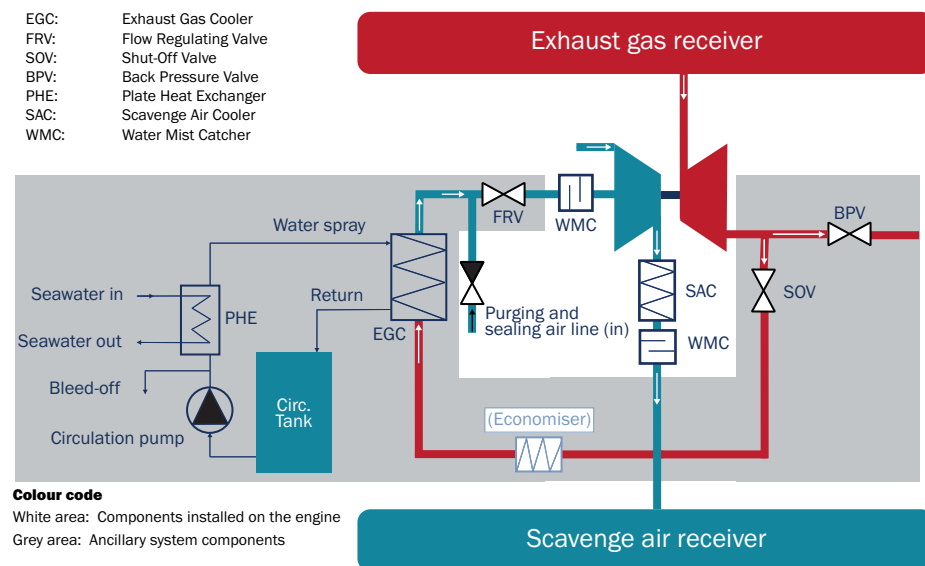


Figure 4-5 The iCER system with one turbocharger and the exhaust gas return pipe routed to the turbocharger connection from above

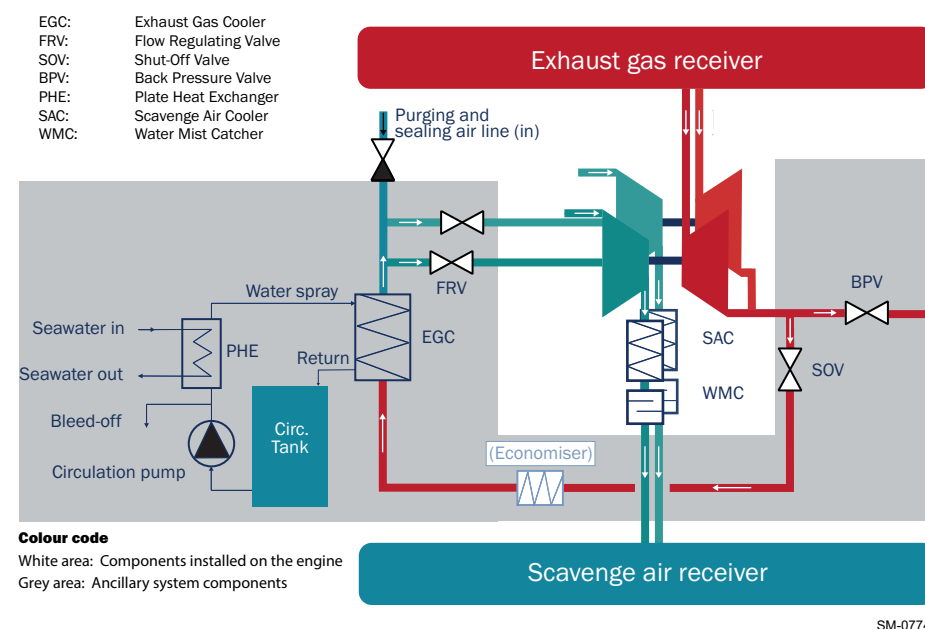


Figure 4-6 The iCER system with two turbochargers and the exhaust gas return pipe routed to the turbocharger connection from below

The iCER system recirculates part of the exhaust gas after the turbine (along a low-pressure path) through the EGC and back to the compressor inlet. The exhaust gas and fresh air are mixed before entering the turbocharger at the compressor inlet. For further information, see section [4.2.5 The iCER exhaust gas system](#), [Fig 4-14](#). The amount of returned exhaust gas is regulated in a closed loop control with a maximum possible exhaust gas recirculation of approximately 50%.

The EGC cools the exhaust gas before it re-enters the turbocharger. The EGC produces water spray that absorbs a majority of the heat as the exhaust gas passes through it. This process also cleans the exhaust gas. Then the exhaust gas passes through the second cooling stage of the EGC which is comprised of heat exchange surfaces made of steel. For the iCER system installations with a single turbocharger and an exhaust gas return pipe routed to the turbocharger connection from above, a Water Mist Catcher (WMC) is installed on the engine with an integrated drain to ensure removal of water. For all installations with the exhaust gas return pipe routed to the turbocharger connection from below, there is no WMC installed. This minimizes the risk of condensate water being carried over to the turbochargers. Condensate water drains must be arranged at the lowest point of the horizontal return manifold pipe. Different vessel trim conditions must be considered.

For the information on water treatment system, see section [4.2.2 The EGC circulation water system](#), [Fig 4-8](#) and section [4.2.3 The iCER drainage system](#), [Fig 4-9](#).


4.2.2 The EGC circulation water system

For the general cooling water system description, see section [4.3 Cooling water system](#), [4-20](#).

The EGC circulation water system is used to cool the recirculated exhaust gas with the EGC circulation water. In the WinGD documentation, the cooling water of the EGC circulation water system is referred to as EGC circulation water. This helps to distinguish between the engine cooling water and the cooling water of the iCER system. After initial filling of the EGC circulation water tank, the EGC circulation water is mainly generated from condensation water within the system. There is no EGC circulation water treatment with corrosion inhibitors necessary as required for the LT and HT cooling water system (see sections [4.3.1 Low-temperature circuit](#), [4-21](#) and [4.3.2 High-temperature circuit](#), [4-25](#)).

The primary component of this process is the EGC which uses a two-stage cooling process as the exhaust gas passes through it. In the first stage, the exhaust gas is cooled by an EGC circulation water spray. In the second stage, the exhaust gas is cooled further by passing through heat exchanging filling material which is also supplied with an EGC circulation water spray (see section [4.2.1 The iCER description](#), [4-6](#)).

The EGC circulation water used by the EGC is captured and circulated through the water system. The EGC circulation water tank stores this water which is continually produced from condensation. The water is circulated through the system and cooled by heat exchanger before re-entering the EGC. The set-point that controls the seawater flow, affecting the temperature of the EGC circulation water, is managed by the iCER control system. This arrangement limits the temperature reduction in winter conditions.

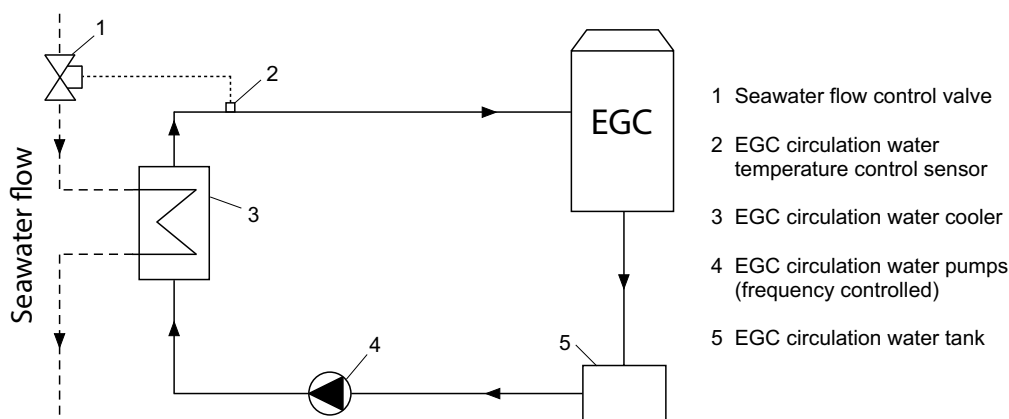

SM-0578

Figure 4-7 The EGC circulation water system (off-engine option)

The cooling process reduces the exhaust gas temperature to approximately 40°C, which is below the dew point. Below the dew point, water starts to condensate out of the exhaust gas and is then used in the system. This can lead to excess water in the system. This water is then collected and discharged from the EGC circulation water tank to a drain tank (see section [4.2.3 The iCER drainage system](#), [4-9](#)).

For further details on the EGC circulation water system, including the size specification for the EGC circulation water tank, please refer to the [MIDS](#). The EGC circulation water pump values for pressure and volumetric flow are determined by the EGC (for pump capacities, please refer to the [GTD](#)).

4.2.3 The iCER drainage system

For the information on leakage collection system and washing devices, see section [4.9 Leakage collection system and washing devices](#),  4-96.

The iCER drainage system includes a water treatment system, a pH-neutralisation system with a dosing system, as well as water holding tanks. The dosing system includes a NaOH tank, a pump unit, as well as a monitoring and control unit. The water treatment system includes a pump unit and the water treatment unit.

The material of the drainage components must be selected according to the pH level of the fluids flowing through the components.

During iCER operation, the iCER drainage system handles all the condensate water from the EGC and the SAC. This water is generated by the EGC cooling of the exhaust gas in the iCER system. This specifically occurs during gas mode and under most conditions of iCER diesel Tier III mode¹⁾. This water is used in the EGC (see section [4.2.2 The EGC circulation water system](#),  4-8) and collected in the EGC circulation water tank.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

Unified arrangements of the iCER drainage system valid for all iCER operating mode options

Figure 4-8, 4-10 provides a sketch of this unified arrangement of the iCER drainage system.

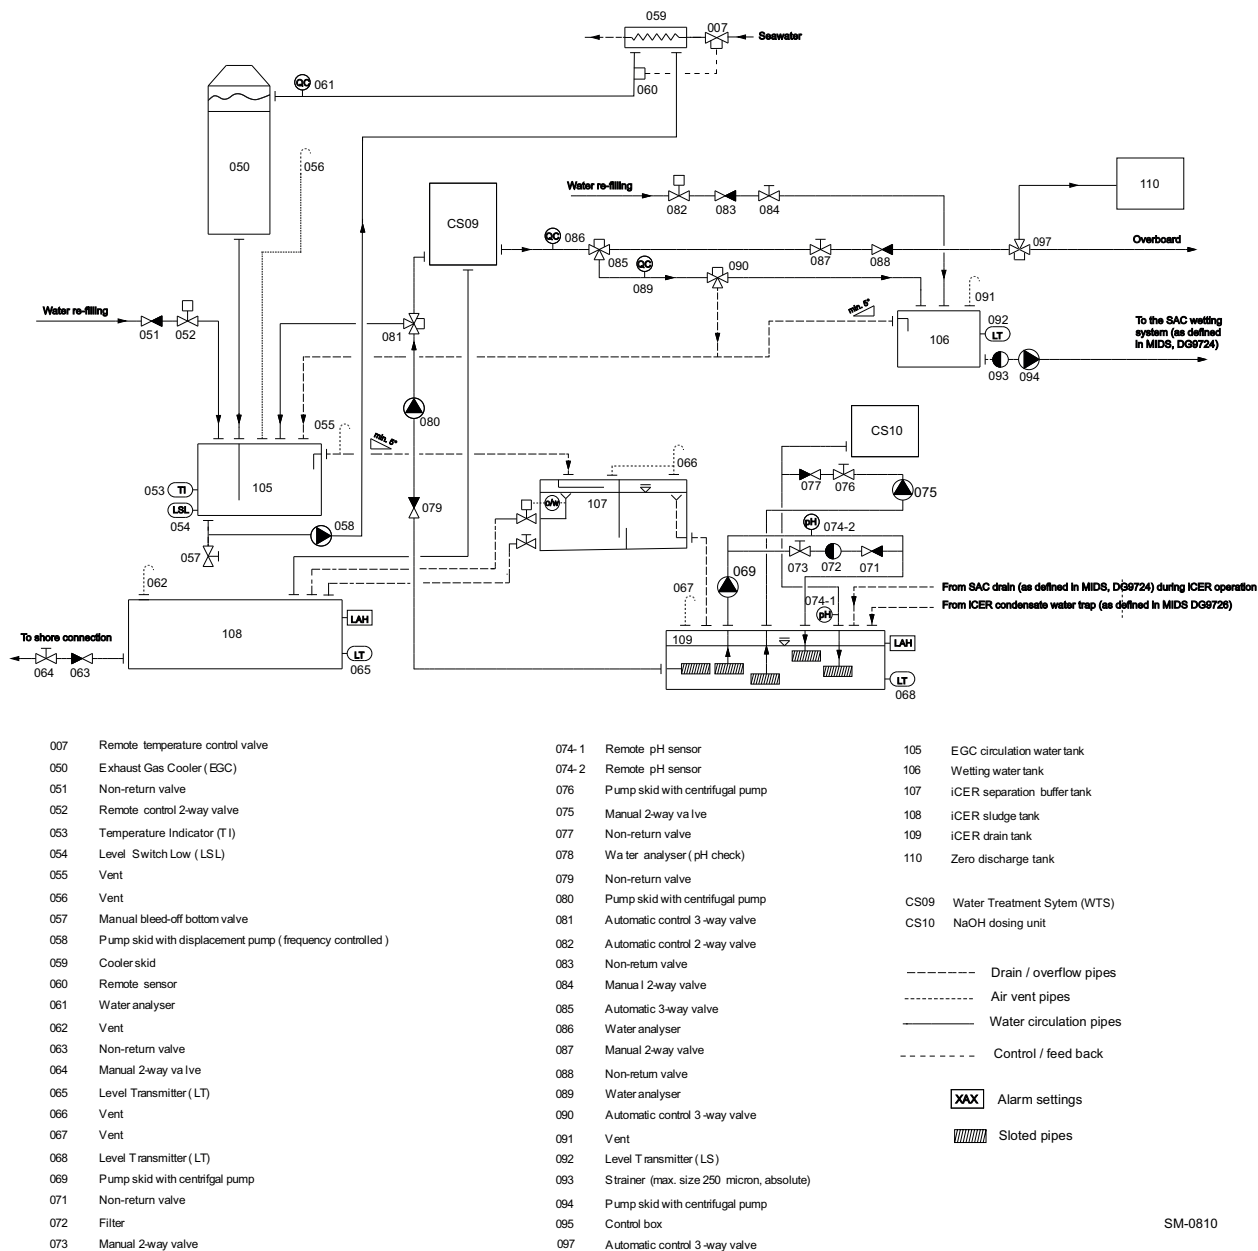


Figure 4-8 The iCER drainage system valid for all iCER operating mode options

During iCER operation, the EGC circulation water is continuously overflowing to the iCER drain tank, while the SAC drain water is also collected in the same tank. When the iCER system is deactivated, the SAC drain water can be directed to the standard SAC drain arrangement.

The water in the iCER drain tank is directed to the water treatment unit. After treatment, if the oil-in-water (o/w) content exceeds 15 ppm, the water is constantly directed back to the EGC circulation water tank (105). Otherwise, if the oil-in-water content does not exceed 15 ppm and the vessel is operating outside an area of restricted overboard discharge, the water can then be directly pumped overboard by activating the valve 097. If the vessel is operating in an area of restricted discharge, the clean water is stored in the zero discharge tank (110) by activating the valve 097.

If the water meets the requirements for further use in the wetting system, which is determined by the water quality measurement (089) and controlled from the ECS, the treated water is directed to the wetting water tank (106). If the wetting tank 106 is reaching maximum filling, the excess water is directed back to the EGC circulation water tank (105).

NOTE

According to the MEPC 307(73) resolution, a direct overboard discharge is possible if the oil-in-water content is below 15 ppm.

During iCER operation, soot and oil can be found in the EGC circulation water. It must be removed by a water treatment unit. The design of the water treatment unit can vary depending on the supplier. In addition, as the ultra-low sulphur MGO with a maximum content of 0.10% m/m sulphur is not sulphur-free, neutralisation of the resulting acids is required. For this purpose, a caustic soda (NaOH) dosing system is required for the EGC circulation water. The dosage amount is controlled by the water analyser which measures the acidity of the effluents requiring pH adjustment.

NOTE

The water treatment system must ensure a proper pH value (e.g. above pH 6) at the different positions of the iCER drainage system. The water treatment system must be designed in such a way that maximum total solids content of 500 mg/l is maintained in the EGC circulation water.

Chemical consumption during iCER operation

During iCER operation, the bleed-off water and the SAC drain water are stored in the iCER drain tank. To ensure that the water in the iCER drain tank maintains a proper pH value (between pH 6 and 7), the drain water must be circulated through a pH-neutralisation dosing unit (CS10). When the iCER system is deactivated, the SAC drain water can be directed to the standard SAC drain arrangement.

Coagulant and flocculant dosing

Depending on the design of the water treatment unit, coagulant and flocculant dosing can be required. The water treatment unit controls the dosing and removes the particles accumulated by the treatment as well as other hydrocarbons. The coagulant and flocculant are typically stored in small units and do not require any structural tank.

It is recommended to use water treatment systems which do not use any flocculants or coagulants.

NaOH dosing

Sodium hydroxide (NaOH), also known as caustic soda, is added to the EGC circulation water to neutralise the acidity. The alkali nature of NaOH counteracts the acid built-up from washing of the exhaust gas.

The water acidity is measured by sensor. This sensor is connected to a monitoring and control unit, which controls the NaOH dosing pump and adds NaOH to the iCER drain tank (109).

The NaOH dosing system is designed for an aqueous solution consisting of a maximum concentration of 50% m/m NaOH. Alternatively, the design can also be made for solutions with lower concentrations, typically for 25% or 30% m/m NaOH. It is necessary to consider the required storage and handling temperature of the NaOH solution. Depending on the concentration, the piping system of the NaOH dosing unit and storage tank must be heated (e.g. trace heating) and insulated. For solutions of 50% m/m NaOH, a storage and handling temperature in the range of 16°C to 45°C is required. For solutions of maximum 30% m/m NaOH, storage at normal engine room ambient temperature is sufficient.

NOTE

Due to the corrosive and dangerous nature of NaOH, extreme caution is required. It is recommended that a safety shower is close to the NaOH dosing unit and storage tank. In addition, the material safety data sheet must be consulted for the installation of the NaOH dosing unit and storage tank.

Forced bleed-off

A manual bleed-off function is available. Depending on the available condensate water, the EGC circulation water tank can also be refilled by freshwater. Independent from the available condensate, a daily refreshing rate with fresh water of 100 l/MW engine power must be ensured.

Sludge amount

When the water treatment system is active, sludge is produced. The properties of this sludge are different from the sludge defined in section [4.9.1 Sludge oil trap](#), [4-96](#). In principle, it is oily water with soot. According to the MEPC 307(73) resolution, the sludge from the water treatment system must be collected in a dedicated iCER sludge tank and must be disposed of ashore. The amount of sludge produced is dependent on the selected water treatment unit and it must be considered for sizing of the iCER sludge tank. For further details, please refer to the supplier of the water treatment unit.



The latest version of the MIDS “DG 9721 Cooling Water Systems” relevant for the drainage collection from the iCER system can be found on WinGD web page: [MIDS](#).

The MIDS provides a guide for tank sizing. Project-specific data sets for bleed-off water and SAC drain water amounts are available for different ambient conditions in the [GTD](#).

NOTE

The operating time in areas of restricted water discharge (by environmental regulations) must be considered for sizing of the zero discharge tank.
The hourly drain amount depends on the engine operating profile (i.e. the engine power and ambient conditions) and is provided in the [GTD](#).

4.2.4 The SAC wetting system

Since particulate matter and oil cannot be fully removed from exhaust gas as it passes from the EGC through the SAC, part of it tends to accumulate on the SAC, leading to fouling over time. Deposits reduce the SAC thermal efficiency and increase the pressure drop over the SAC, potentially affecting the engine operation. In principle, a cleaner SAC leads to lower engine fuel consumption. To help reduce fouling, a wetting process must be implemented.

As shown in Figure 4-8, 4-10, treated water from the wetting water tank is directed to the upper part of the SAC and sprayed to keep the active cooling surfaces wet. This significantly reduces accumulation of particulate matter, ash, and oil on the active cooling surfaces of the SAC.

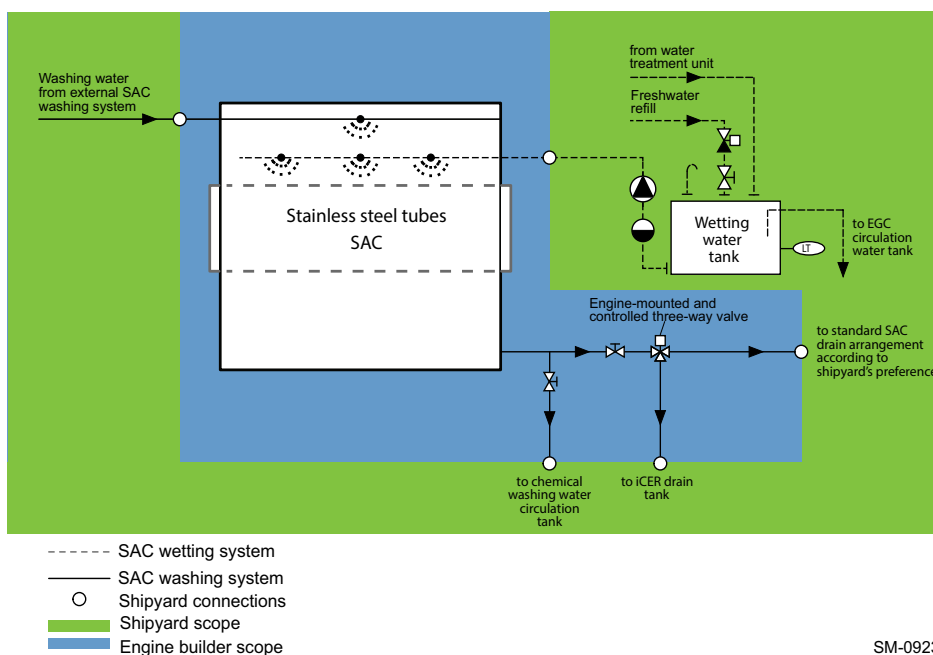


Figure 4-9 The SAC wetting system with the wetting water tank arrangement

Functional description

The SAC wetting system is controlled by an SAC wetting control unit. The Engine Control System (ECS) communicates with this control unit, commanding when wetting starts and stops.

From the wetting water tank, the water is sprayed onto the active cooling surfaces of the SAC by means of a wetting water pump.

In addition to the SAC wetting system, an external washing system, as described in section 4.9.5 SAC washing system, 4-100, must be applied to ensure thorough cleaning during the engine standstill.

4.2.5 The iCER exhaust gas system

For the general exhaust gas system description, see section [4.10 Exhaust gas system](#), [4-101](#).

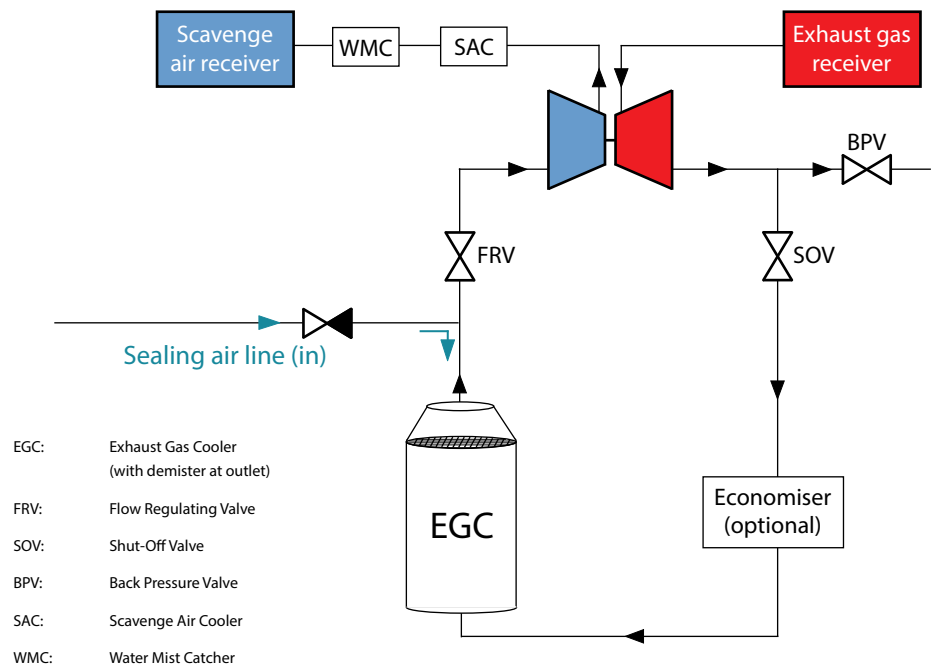


Figure 4-10 iCER exhaust gas system principle

Pressure and control valves

The iCER exhaust gas system connects to both sides of the turbocharger and it controls the exhaust gas recirculation flow rate with a series of valves. During normal engine operation, the Back Pressure Valve (BPV) controls the amount of exhaust gas that is recirculated to the engine. The Shut-Off Valve (SOV) is either fully open or closed, depending on whether the iCER system is active or not. The Flow Regulating Valve (FRV) can be used to support the control of the flow rate in the iCER system, especially during iCER diesel Tier III mode¹⁾.

Sealing air line

A sealing air line is connected to the iCER exhaust gas system. To limit backflow of exhaust gas to the air supply line, a non-return valve must be installed. A sealing air blower is required and must be designed with a 0.15 bar(g) pressure head. The flow rate of the blower is defined by the sealing air demand. The sealing air demand is defined by the leakage rate of the FRV and the SOV at a differential pressure of 0.15 bar(g).

The sealing air blower provides continuous air. The sealing air pressure must be maintained between 0.10 bar(g) and 0.15 bar(g).

For all projects contracted prior to April 2022, an engine-mounted sealing air blower is provided. For any other iCER system installations, such a blower must be installed on the ship side. In both cases the sealing air system is controlled by the ECS.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

Protection against water droplets

The EGC has an integrated demister before its outlet. This demister removes water droplets of a critical size carried by the exhaust gas.

After passing the EGC, the humid recirculating exhaust gas can condense on the pipe wall and, consequently, can carry water droplets (see section 4.2.2 [The EGC circulation water system](#), 4-8).

Thermal insulation

As required for exhaust gas piping, the HT pipes must be thermally insulated upstream of the EGC. The pipes also require the same thermal insulation downstream of the EGC, as this reduces condensation within the system.

Piping material

The exhaust gas piping, downstream of the additional economiser and the EGC, must be made of stainless steel (or alternative corrosion-resistant material).



For further information on the system design and pressure requirements, please refer to the MIDS “DG 9726 Exhaust System” on WinGD web page: [MIDS](#).




Exhaust gas pressure and temperature values are available from the WinGD engine layout application [GTD](#).

Pressure losses

The exhaust gas system design must consider many components. The maximum pressure loss over the cooler and the additional economiser is 150 mmWC. Pressure losses and thermal expansion must be considered across the entire iCER system. It affects the design, selection and location of bellows within the system.


Structural support

The piping of the exhaust gas system must be structurally supported to withstand the mass and to minimise vibrations across the system. It is suggested that this is achieved by supports which are connected to the ship hull or otherwise.

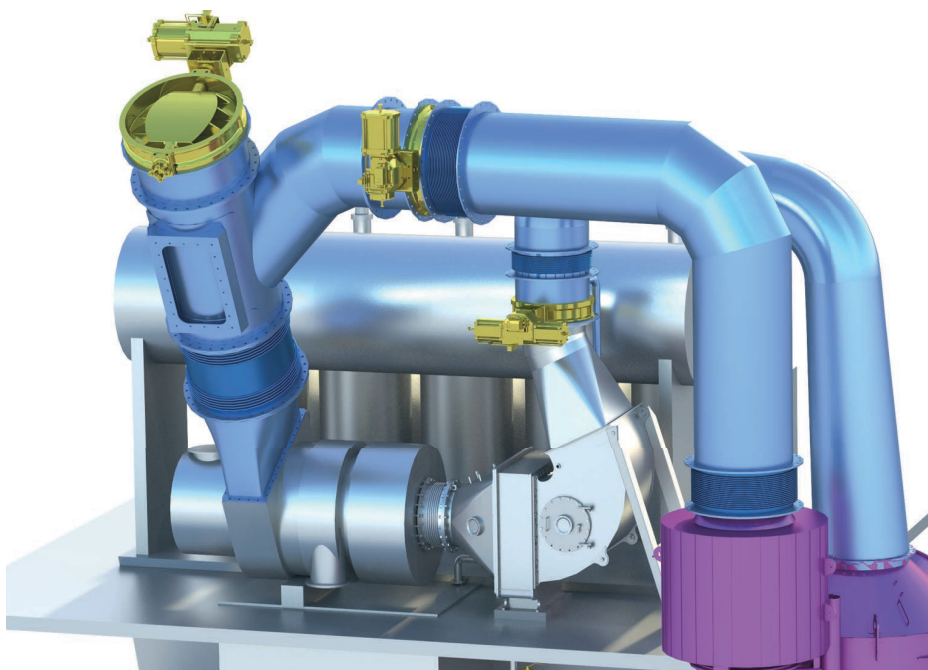


SM-0670

Figure 4-11 Example of an exhaust gas piping arrangement with one turbocharger

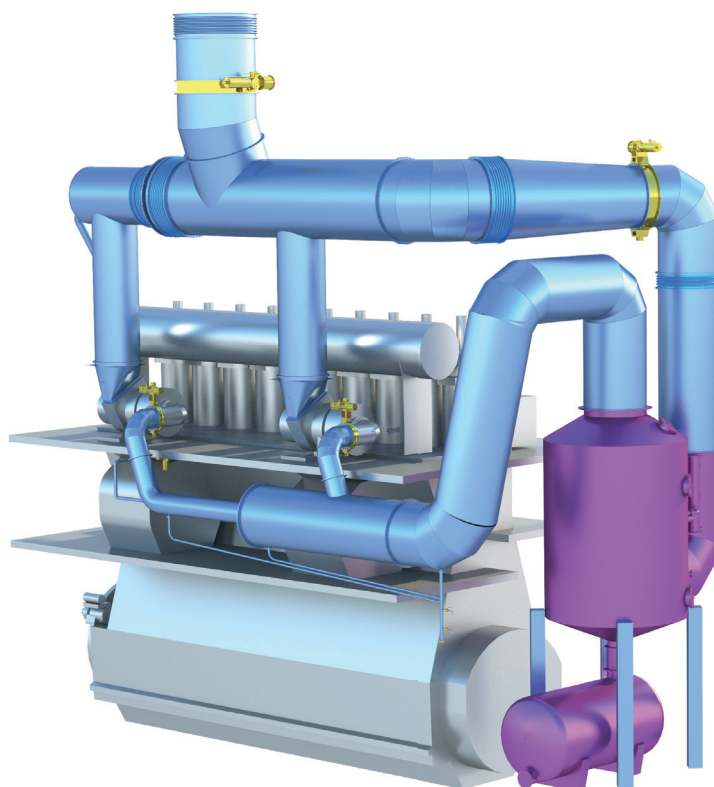

SM-0856

Figure 4-12 Example of an exhaust gas piping arrangement with two turbochargers

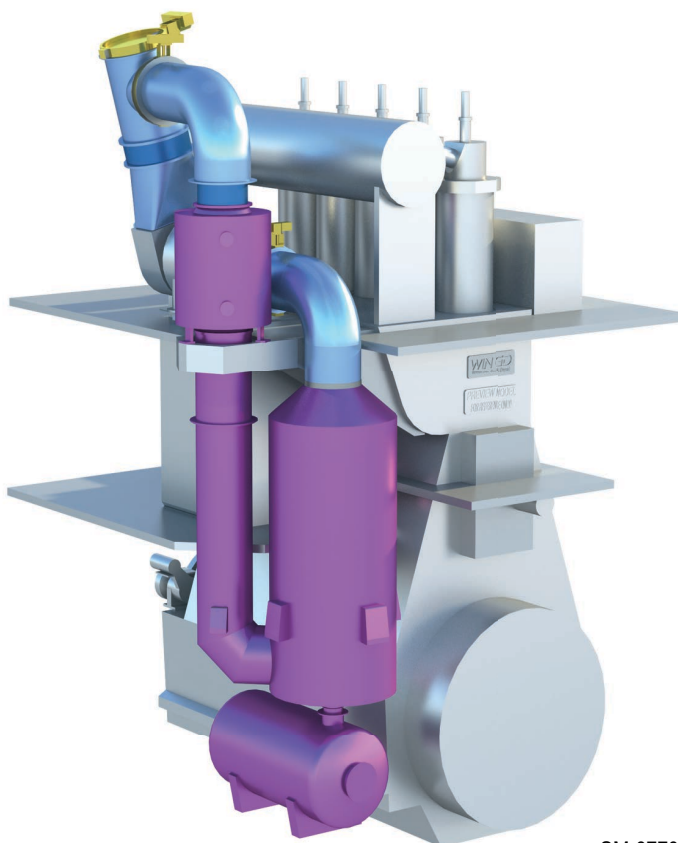

SM-0770

Figure 4-13 Example of an exhaust gas piping arrangement for the compact arrangement with one turbocharger

4.2.6 Heat recovery (economiser)

A main economiser can be installed at different positions depending on the selected routing concept of the iCER system. Optionally, an additional economiser can be installed in the exhaust gas recirculation line.

Different routing concepts

Two different routing concepts are available for the iCER exhaust gas system:

- short route
- long route, different variants.

Short route arrangement

The branch connection to the iCER system is directly after the turbocharger outlet. Consequently, the recirculated exhaust gas bypasses the main economiser. To compensate for the resulting lower steam production, an additional economiser can be installed in the exhaust gas recirculation line. Usually, this additional economiser has no steam drum integrated, for compactness and cost purposes, and, thus, must be connected to the main economiser.


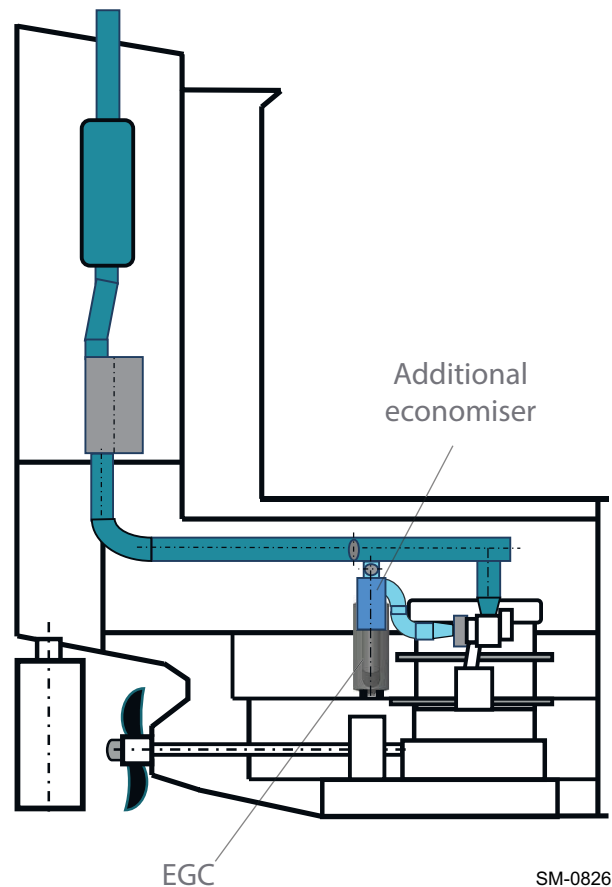


Figure 4-14 The short route arrangement

Long route arrangement

The full exhaust gas flow passes through the main economiser. The iCER recirculation branch is connected downstream of the main economiser outlet. The EGC can be placed close to the boiler, close to the turbocharger inlet, or anywhere in between these two positions. The long route arrangement provides the advantage of ensuring that the maximum steam production is available without the requirement of any additional economiser. However, longer piping provides the challenge of keeping the maximum allowed exhaust gas back pressure in the iCER system within the specified range.

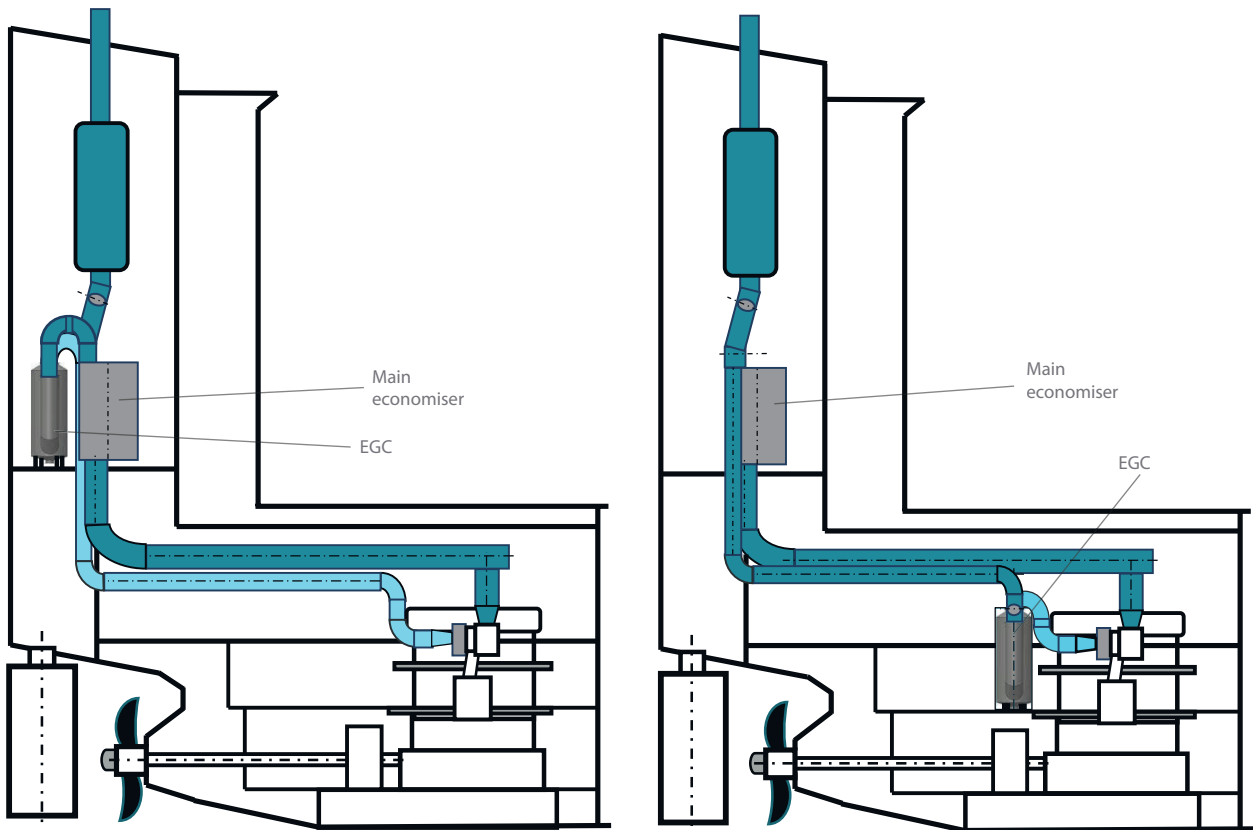

SM-0827

Figure 4-15 The long route arrangement

Special long route arrangement

The cases where it is not possible to fulfil the maximum back pressure limit due to the long route, WinGD must be contacted for project-specific support. Project-specific solutions, including project-specific performance data, can be made available.

Additional economiser (optional)

An additional economiser can be placed upstream of the EGC, thus, ensuring the necessary steam production. By adding this additional economiser, the thermal energy from the exhaust gas can be utilised. The economiser can be installed directly to the steam line.

The on-board steam requirement must be calculated carefully before considering this additional economiser, as less steam production power is generally required during gas operation.

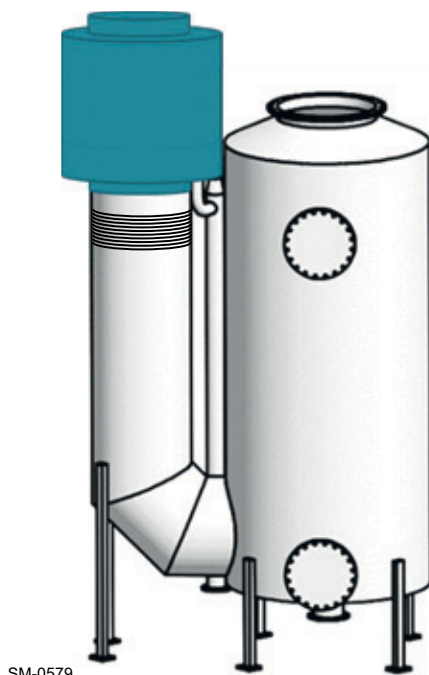


Figure 4-16 Arrangement of the additional economiser

To keep this additional economiser compact, a direct connection to the main economiser is required. For this reason, there is no need to include its own water drum.

If the iCER is active in gas mode, the exhaust gas is essentially considered to be sulphur free. As a result, there is no restriction on the additional and main economiser in reducing the exhaust gas below 160°C–170°C. Even in iCER diesel Tier III mode¹⁾ the lower exhaust gas temperature can be selected as the sulphur content in the fuel is limited to 0.10% m/m sulphur.

The exhaust gas piping, downstream of the additional economiser and the EGC, must be made of stainless steel (or alternative corrosion-resistant material).

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

4.3 Cooling water system



The latest version of the MIDS “DG 9721 Cooling Water Systems” is available on WinGD web page: [MIDS](#).

Freshwater cooling system

The main engine High-Temperature (HT) and Low-Temperature (LT) cooling circuits use freshwater as their cooling medium. As such, the HT and LT circuits are integrated in the ship central freshwater cooling system.

Advantage of freshwater over seawater

Freshwater cooling systems reduce the amount of seawater pipework and problems associated with it, like scaling and corrosion. Freshwater provides for more efficient cooling as it allows a higher heat load than seawater, i.e. freshwater can be heated up to a higher temperature level and, along with a lower flow rate, allows the same cooling effect to be obtained. Thus, the overall running costs are reduced.

Separate HT circuit with own cooler

The central freshwater cooling system runs with single-stage SAC and separate HT circuit. The HT circuit must be completely separate from the LT circuit. A dedicated HT water cooler is applied for heat exchange between HT and LT circuit without flow medium mixing. [Figure 4-17](#), [4-20](#) shows the general installation principle.

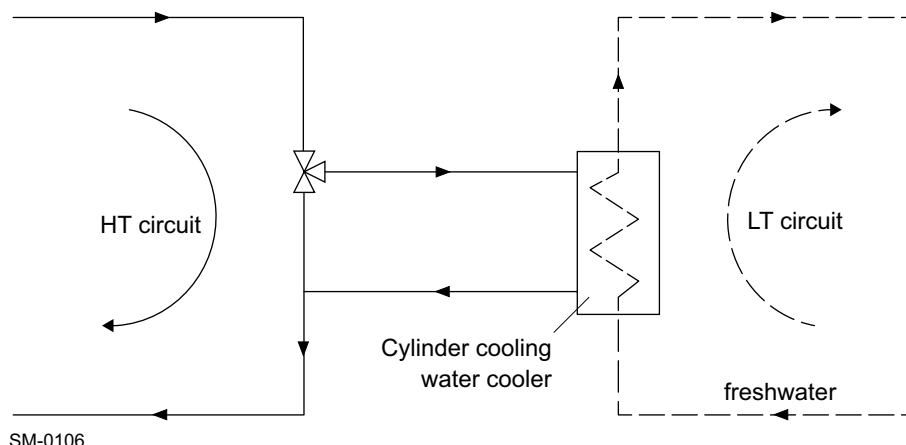


Figure 4-17 Separate HT cooling water circuit

NOTE

For detailed cooling design and the necessary data for this arrangement, please refer to MIDS and GTD respectively.

4.3.1 Low-temperature circuit

The LT cooling water circuit for the main engine provides cooling for the SAC, the LO cooler and the MDO/MGO cooler.

Setting of automatic temperature control valve for cooling water

For the main engine SAC the automatic temperature control valve must be set to 25°C (set-point). When seawater temperatures are higher than 21°C, assuming maximum seawater temperature of 32°C, the cooling water temperature for the SAC may increase to maximum 36°C. It is recommended to keep the temperature of the LT circuit as low as possible.

NOTE

The automatic temperature control valve of the SAC must be set to 25°C (see [Arrangement 1](#), [Figure 4-22](#)). If ancillary machinery requires a different temperature set-point, then a separate cooling water loop must be installed, as shown in [Arrangement 2](#), [Figure 4-22](#) and [Arrangement 3](#), [Figure 4-23](#).

Warm seawater conditions can result in Brake Specific Fuel Consumption (BSFC) and, respectively, Brake Specific Energy Consumption (BSEC) higher than in ISO standard design condition.

Arrangements of LT cooling water circuit

Depending on the ancillary equipment and the temperature set-point selection, the LT circuit can be typically installed in the following arrangements:

- Arrangement 1: Single set-point temperature 25°C (see [Figure 4-18](#), [Figure 4-22](#))
- Arrangement 2: Dual set-point temperatures (see [Figure 4-19](#), [Figure 4-22](#))
- Arrangement 3: Separate SAC cooling circuit (see [Figure 4-20](#), [Figure 4-23](#)).

Arrangement 1

To maintain the required SAC inlet temperature, the automatic temperature control valve of the central freshwater cooling system is set to 25°C (as per WinGD specification). In this arrangement the ancillary plant and other cooler temperatures are controlled and maintained by this single temperature set-point.

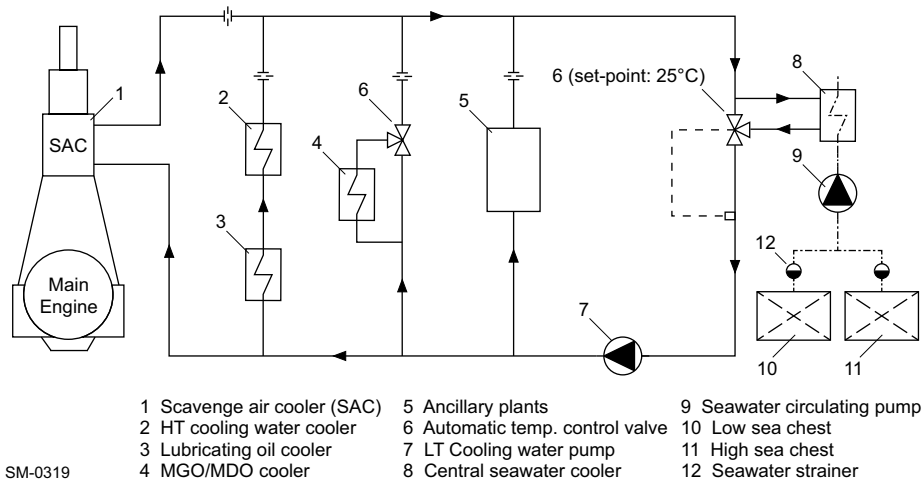


Figure 4-18 LT cooling water circuit: single set-point temperature

Arrangement 2

The central freshwater cooling system is separated into different cooling streams to provide different temperature set-points for the main engine SAC and ancillary equipment. To maintain the required SAC inlet temperature, the automatic temperature control valve of the central freshwater cooling system must be set to 25°C (as per WinGD specification). The ancillary plant temperature control valve can be set differently as the specific project requires, e.g. between 25°C and 36°C.

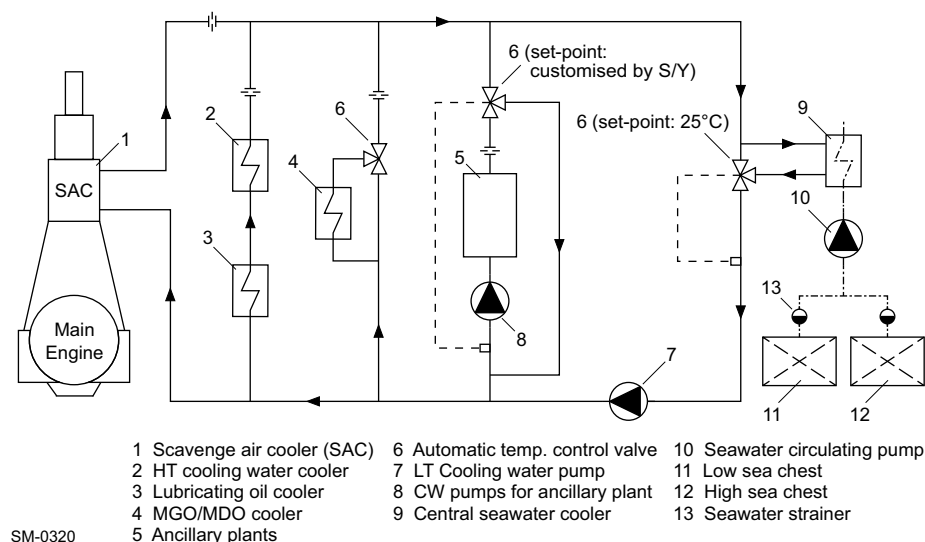


Figure 4-19 LT cooling water circuit: dual set-point temperatures

Arrangement 3

The central freshwater cooling system is separated into two dedicated cooling circuits to better manage the varying temperature set-points. This includes:

- **Circuit 1:** The main engine SAC is cooled with freshwater with a temperature set-point of 25°C (as per WinGD specification). In this arrangement only the main engine SAC requires maximum design seawater flow for cooling.
- **Circuit 2:** All other main engine and ancillary plant coolers are cooled with freshwater with a set-point customised by the shipyard or ship designer.

Figure 4-20, 4-23 is a proposal only and the seawater pump and other equipment layout can be different. As such, the shipyard is free to design their own seawater system. However, the set-point temperature for the main engine SAC must be 25°C (as per WinGD specifications).

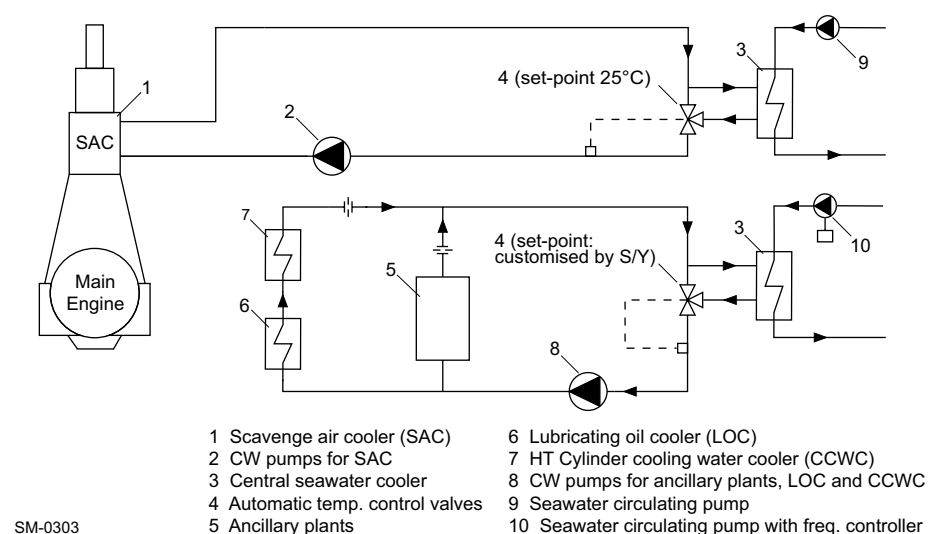


Figure 4-20 Separate SAC and LT cooling circuits

*Low-temperature circuit components***Seawater circulating pump**

The seawater circulating pump delivers seawater from the high and low sea chests to the central seawater cooler.

Pump type	Centrifugal
Capacity	According to <i>GTD</i> : The seawater flow capacity covers the need of the engine only and must be within a tolerance of 0% to + 10% of the GTD value
Delivery pressure	Determined by system layout
Working temperature	According to ship specification

Seawater strainer

Simplex or duplex strainers to be fitted at each sea chest and arranged to enable manual cleaning without interrupting the flow. The strainer mesh size (max. 6µm) must prevent the passage of large particles and debris that could damage the pumps and impair the heat transfer across the coolers.

Central seawater cooler

Cooler type	Plate or tubular
Cooling medium	Seawater
Cooled medium	Freshwater
Design criterion	Keeping max. 36 °C LT while seawater temperature is 32 °C
Margin for fouling	10%–15% must be added
Heat dissipation	Refer to <i>GTD</i>
Freshwater flow	
Seawater flow	
Temperatures	

Automatic temperature control valve

As stated above, the automatic temperature control valve for the cooling water to the SAC must be set to 25 °C (as per WinGD specification). Temperature control of another ancillary plant must be determined by the shipyard.

Valve type	Electrically or electro-pneumatically actuated three-way type (butterfly valves are not adequate) having a linear characteristic
Design pressure	5 bar
Test pressure	Refer to specification laid down by classification society
Pressure drop across valve	Max. 0.5 bar
Controller	Proportional plus integral (PI)
Temperature sensor	According to control valve manufacturer's specification; fitted in engine outlet pipe

Freshwater pumps


Pump type	Centrifugal
Capacity	According to <i>GTD</i> : The freshwater flow capacity covers the need of the engine only and is to be within a tolerance of 0% to +10% of the GTD value
Delivery head	The final delivery head is determined by the layout of the system and must ensure that the inlet pressure to the SAC(s) is within the range of summarised data
Working temperature	According to ship specification

4.3.2 High-temperature circuit

Based on experience and technological development, the HT cooling circuit has been simplified. It consists of a single inlet for the cooling water flowing through the cylinder liner and cover in sequence. The schematic drawing (Figure 4-21, 4-25) shows the basic cooling water circuit arrangement.

Air separator

An air separator is designed as an engine component and arranged upstream from the engine HT cooling water outlet connection. The air separator separates air from water and vents the air out. Removal of air from the cooling water is essential to maintain an optimal cooling effect of the engine cylinder liner. Due to the gas safety requirement for the X-DF engines, the ventilation pipe from the air separator must be led separately outside the engine.

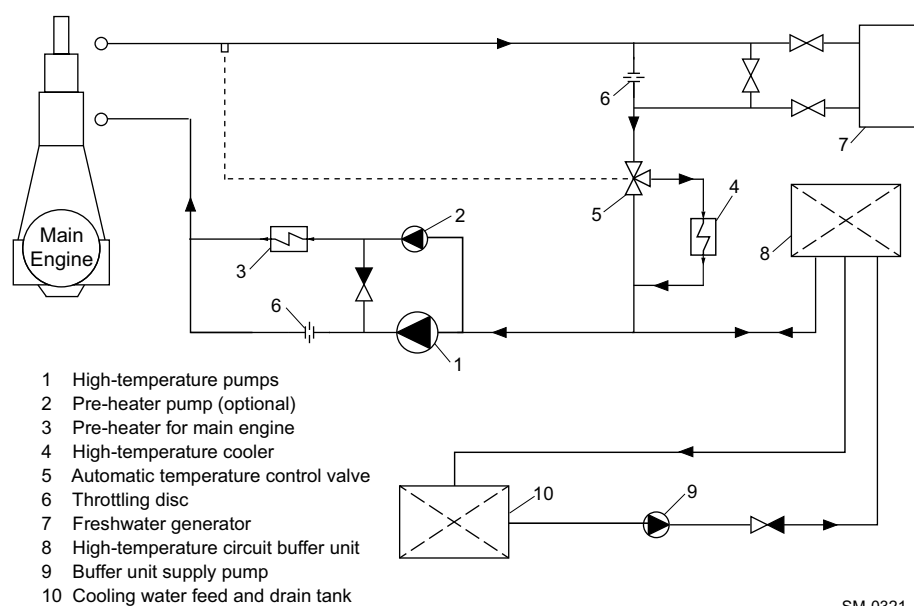

SM-0321

Figure 4-21 HT cooling water circuit

*High-temperature circuit components***Automatic temperature control valve**

Valve type	Electrically or electro-pneumatically actuated three-way type (butterfly valves are not adequate) having a linear characteristic
Design pressure	5 bar
Test pressure	Refer to specification laid down by classification society
Pressure drop across valve	Max. 0.5 bar
Controller	Proportional plus integral (PI), known as proportional plus reset for steady state error of max. $\pm 2^\circ\text{C}$ and transient condition error of max. $\pm 4^\circ\text{C}$
Temperature sensor	According to control valve manufacturer's specification; fitted in engine outlet pipe

HT cooling water pump

Pump type	Centrifugal, preferably with a steep head curve ^{a)}
Pump capacity	According to GTD: The flow capacity is to be within a tolerance of -10% to +20% of the GTD value
Delivery head ^{b)}	To be determined according to the total pressure losses (resistance) of the actual piping installation arrangement
Working temperature	95 °C

a) As a guide, the minimum advisable curve steepness can be defined as follows:
For a pressure increase from 100% to 107%, the pump capacity should not decrease by more than 10%.

b) The pump delivery head (p_p) is:

$$p_p = p_{ei} - p_{st} + \Delta p + \frac{h}{10.2} \text{ [bar]}$$

where:

p_{ei} = pressure at engine inlet [bar]

p_{st} = static pressure* at pump inlet [bar]

Δp = pressure losses over piping between pump outlet and engine inlet [bar]

h = height difference between pump outlet and engine inlet [m]

* If an expansion tank is used, p_{st} equals the static pressure head from the change in height between expansion tank and pump inlet.

If a buffer unit is used, p_{st} equals the buffer unit pressure plus the pressure head from the change in height between buffer unit and pump inlet.

The pressure (p_{ei}) at engine inlet must be 3.0–5.0 bar(g).

To supply the cooling water system with desired static pressure and compensate for the cooling water volume change during engine operation, WinGD proposes two possible solutions, namely installing either an expansion tank or a buffer unit.

Expansion tank

To ensure that the required static head is applied to the Cylinder Cooling Water (CCW) system, the expansion tank must be fitted at least 10.5 m above the highest point of the engine cooling water piping. The tank must be connected by a balance pipe to the CCW pump suction.

Buffer unit

The installation of a buffer unit is an alternative solution. The buffer unit has the advantage of variable static pressure settings and location flexibility. However, it requires an additional water supply pump.

Main components and functionalities of the buffer unit:

- **Control air SOV** (DN15), solenoid type, controlled by the signal from the Level Switch Low (LSL). This valve is normally open but needs to be shut off when the signal from the LSL is triggered and water feeding is started.
- **Control air pressure regulating valve** (DN15) with pressure reduction and air release function. This valve reduces the control air pressure to the desired buffer unit pressure. It enables air to be released to maintain the pressure when the buffer unit water volume is increasing (refill or water expansion). The pressure setting of the buffer unit is targeted to ensure that the cooling water pressure at the main engine inlet fulfils the WinGD specification requirement.
- **Safety valve** (DN32) needs to be set at approximately 0.5 bar above the buffer unit set pressure.
- **Level Switch, High (LSH), and Level Switch, Low (LSL):**
 - The LSL is set at approximately 35% of the total volume of the buffer unit. When the LSL is triggered, a signal to start is emitted simultaneously to the control air SOV and to the buffer unit supply pump.
 - The LSH is set at approximately 65% of the total volume of the buffer unit. When the LSH is triggered, a signal is emitted to stop the buffer unit supply pump.
 - The volume difference between the LSH and the LSL must not be less than 150 litres.
- **Level Alarm, High (LAH), and Level Alarm, Low (LAL):**
 - The LAH must be set at approximately 70% of the total volume of the buffer unit.
 - The LAL must be set at approximately 30% of the total volume of the buffer unit.

Buffer unit supply pump

The buffer unit supply pump compensates for losses in the CCW system. This pump is automatically controlled by the water level in the buffer unit. It is also advisable to monitor the running period of the supply pump. Monitoring of the pump running period can warn when the running period exceeds a pre-set value, indicating unusual water losses in the system. Spare parts for the supply pump must be available according to classification societies requirements.

Pump type	Centrifugal or positive displacement
Capacity	0.5 m ³ /h
Delivery head	4 bar (can be adjusted depending on project-specific design)

4.3.3 Pre-heating

To prevent corrosive liner wear when not in service or during short stays in port, it is important to keep the main engine warm. Warming-through can be provided by a dedicated heater, using boiler raised steam or hot water from the diesel auxiliaries, or by direct circulation from the diesel auxiliaries.

Pre-heating from cooling water systems

If the requirement for warming-up is from the cooling water systems of the diesel auxiliaries, it is essential that the amount of heat available at normal load is sufficient to warm the main engine.

If the main and auxiliary engines have a cooling water system which can be cross-connected, it must be ensured that, when the cross-connection is made, any pressure drop across the main engine does not affect the cooling water pressure required by the auxiliaries.

If the cooling water systems are apart, then a dedicated heat exchanger is required to transfer the heat to the main CCW system.

Pre-heating by direct water circulation

Use of main CCW pump

If the main CCW pump is used to circulate water through the engine during pre-heating, the heater needs to be arranged parallel with the CCW system, and on/off control needs to be provided by a dedicated temperature sensor at the CCW outlet of the engine. The flow through the heater is set by throttling discs, but not by valves.

Use of separate pre-heating pump

If a separate pre-heating pump is required, a small unit with 10% of the main pump capacity and an additional non-return valve between CCW pump and heater need to be installed. In addition, the pumps need to be electrically interlocked to prevent two pumps running at the same time.

Recommended temperature

The recommended temperature to start and operate the engine is 60°C at CCW outlet. If the engine is started below the recommended temperature, engine power must not exceed 80% of CMCR until the water temperature reaches 60°C.

The ambient engine room temperature and warm-up time are key parameters to estimate the heater power capacity required to achieve the target temperature of 60°C. The shipyard or ship designer determines the ambient engine room temperature and the warm-up time (which can also be specified by the ship owner) on the basis of their own experience.

Warm-up time

The graph in [Figure 4-22](#), [Fig 4-29](#) shows the warm-up time needed in relation to the ambient engine room temperature to arrive at the heat amount required per cylinder. The graph covers the warming-up of engine components per cylinder, taking also the radiation heat into account. The readable figure is then multiplied by the number of cylinders to show the heater capacity required for the engine.

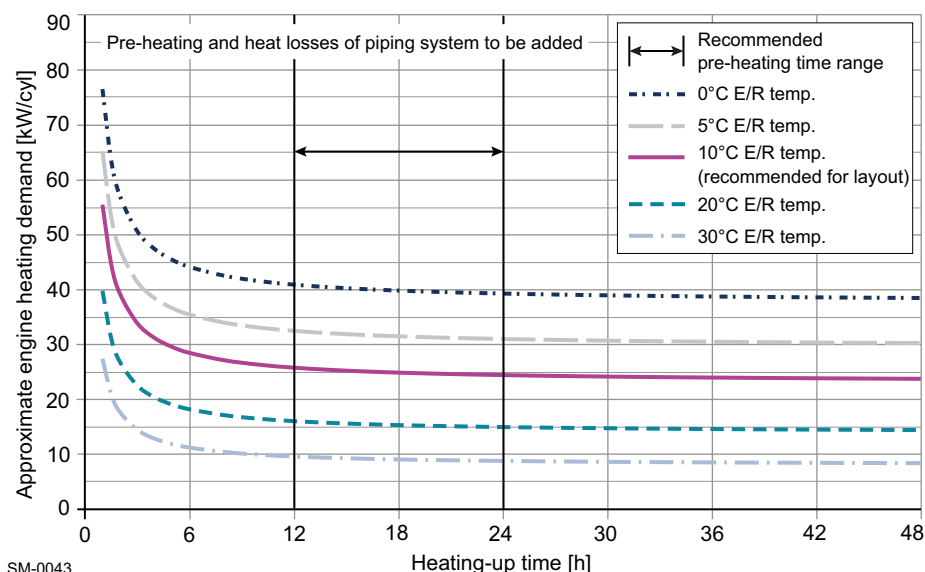


Figure 4-22 Pre-heating power requirement per cylinder

All figures are related to the engine requirements and must only be used for a first concept layout of the heater capacity. However, during pre-heater selection the shipyard or ship designer must also consider further aspects, such as heat losses in the external piping system, water volume inside the system, pipe lengths, volume of ancillary equipment, etc.

4.3.4 Freshwater generator

Using heat from the cylinder cooling system to distil seawater, a freshwater generator can be used to meet the demand for washing and potable water. The capacity of the freshwater generator is limited by the amount of heat available which depends on the engine service power rating.

NOTE

It is crucial in the design stage to ensure that there are sufficient safeguards to protect the main engine from thermal shock when the freshwater generator is started. To reduce the risk, it is recommended to use valves (e.g. butterfly valves), which are linked and actuated with a large reduction ratio, at the freshwater generator inlet and in the bypass line.



The latest version of the document “Concept Guidance” for freshwater generator installation (“DG 9721 Cooling Water Systems”) is available on WinGD web page: [Freshwater generator installation](#).

4.3.5 Cooling water treatment

Correct treatment of the LT and HT cooling water is essential for safe engine operation. According to the specifications in [Table 4-2](#), [4-30](#), demineralised water or condensate must be used as raw water. In case of emergency, tap water can be used for a limited period, but afterwards the entire CCW system must be drained off, flushed and recharged with demineralised water.

Table 4-2 Recommended specifications for raw water

Parameter	Value
pH at 20 °C	6.5 to 8.5
Max. dH	10° (corresponds to 180 mg/l CaCO ₃) ^{a)}
Max. chloride	80 mg/l
Max. sulphates	150 mg/l

a) In case of higher values the water must be softened.

NOTE

Raw water from reverse osmosis technologies requires a minimum pH value of 6.0.

Corrosion inhibitors

Used water must be treated with a suitable corrosion inhibitor to prevent corrosive attack, sludge formation and scale deposits. For further information, please refer to chemical supply companies. Monitoring the level of the corrosion inhibitor and water softness is essential to prevent down-times due to component failures resulting from corrosion or impaired heat transfer.

NOTE

Internally galvanised steel pipes must not be used in connection with treated freshwater, because most corrosion inhibitors have a nitrite base. Nitrites attack zinc lining of galvanised piping and create sludge.



For further information on permissible cooling water additives, please refer to the document on WinGD web page: [Cooling water and additives](#).

4.3.6 General recommendations for the cooling water system design

- The number of valves in the system must be kept to a minimum to reduce the risk of incorrect setting.
- Valves must be locked in the set position and labelled to eliminate incorrect handling.
- After the system commissioning is completed, it is prohibited to manually interfere with the cooling water flow in different branches of the main engine cooling water system by adjusting the valves or the orifice.
- Under normal operation of the CCW system, the pump delivery head and the total flow rate must remain constant, even when the freshwater generator is started up or shut down.
- The CCW system must be totally separated from steam systems. Under no circumstances must there be any possibility of steam entering the CCW system, e.g. via a freshwater generator.
- The installation of equipment affecting the controlled temperature of CCW must be examined carefully before being added. Uncontrolled increases or decreases in CCW temperature can lead to thermal shock of engine components and scuffing of pistons. Thermal shock must be avoided, and the temperature gradient of the cooling water when starting and shutting down additional equipment must not exceed 2°C/min at the engine inlet.
- The design pressure and temperature of all component parts, such as pipes, valves, expansion tank, fittings, etc., must meet classification societies requirements.

4.3.7 EGC circulation water system

The EGC circulation water system is part of the iCER system. For further information, see section [4.2.2 The EGC circulation water system](#),  4-8.

4.4 Lubricating Oil systems



The latest version of the MIDS “DG 9722 Lubricating Oil System” is available on WinGD web page: [MIDS](#).

4.4.1 Lubricating Oil requirements

The validated Lubricating Oils (LOs) have been selected in co-operation with the oil suppliers. In their respective product lines the products are considered as appropriate lubricants for the indicated application.

WinGD does not accept any liability for the quality of the supplied LO or its performance in actual service.



For further information on the validated cylinder and system oils, please refer to the document on WinGD web page: [Lubricants](#).


4.4.2 Main Lubricating Oil system

Field of application

Lubrication of the main bearings, thrust bearings and bottom-end bearings is carried out by the main LO system. The main LO system also operates the cooling of the piston crown with the efficient jet-shaker principle and the lubrication and cooling of the torsional and axial vibration dampers. [Figure 4-23](#), [4-32](#) shows the general installation principle.

Lubrication of crosshead bearings

The crosshead bearings are lubricated by an additional crosshead pump (see the specification in [Booster pump for crosshead lubrication](#), [4-34](#)).

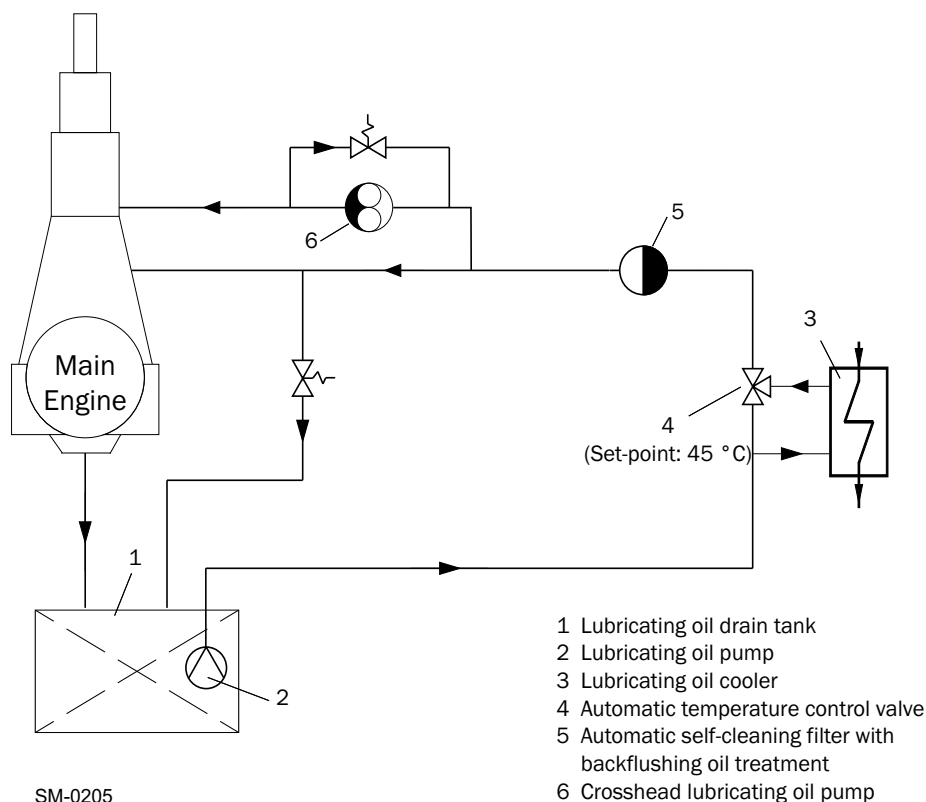

SM-0205

Figure 4-23 LO system

*Main Lubricating Oil system components***LO pump**

Positive displacement screw pumps with built-in safety valves, or centrifugal pumps (for pump capacities refer to *GTD*):

Type: Positive displacement screw pump	The flow rate must be within a tolerance of 0% to + 10% of the GTD value, plus: - back-flushing flow of automatic self-cleaning filter, if such a filter is installed; - oil flow to torsional vibration damper, if such a damper is installed.
Type: Centrifugal pump	The flow rate must be within a tolerance of - 10% to + 10% of the GTD value, plus: - back-flushing flow of automatic self-cleaning filter, if such a filter is installed; - oil flow to torsional vibration damper, if such a damper is installed.
Delivery head	The final delivery head must be determined depending on the actual piping layout.
Working temperature	60 °C
Oil type	SAE30, 50 cSt at working temperature; when sizing the pump motor, the maximum allowed viscosity is 400 cSt

Lubricating Oil Cooler

Type	Plate or tubular
Cooling medium	Freshwater
Cooling water flow	Refer to <i>GTD</i>
Cooling water temperature	36 °C
Heat dissipation	Refer to <i>GTD</i>
Margin for fouling	10%–15% must be added
Oil flow	Refer to <i>GTD</i>
Oil viscosity at cooler inlet	50 cSt at 60 °C
Oil temperature at inlet	Approx. 60 °C
Oil temperature at outlet	45 °C
Working pressure oil side	6 bar
Working pressure water side	Approx. 3 bar

Full-flow filter

The drain from the filter must be sized and fitted to allow free flow into the LO drain tank. The output required for the main LO pump to 'back-flush' the filter without interrupting the flow must be taken into account when estimating the pump capacity (see [LO pump](#), § 4-33).

Type ^{a)}	Automatic back-flushing filter with differential pressure gauge and high-differential pressure alarm contacts. Designed to clean itself automatically using reverse flow or compressed air techniques. Back-flushing oil treatment required.
Oil flow	Refer to GTD
Working viscosity	95 cSt, at working temperature
Working pressure	6 bar
Test pressure	Specified by classification society
Different pressure, clean filter	Max. 0.2 bar
Different pressure, dirty filter	Max. 0.6 bar
Different pressure, alarm	Max. 0.8 bar Note: Real operational settings could be less according to filter maker's recommendation.
Mesh size	Sphere passing max. 0.035 mm
Filter material	Stainless steel mesh
Filter inserts bursting pressure	Max. 3 bar differential across filter

a) Optional: change-over duplex filter designed for in-service cleaning, with differential pressure gauge and high-differential pressure alarm contacts

Booster pump for crosshead lubrication

Type	Positive displacement screw or gear types with built-in safety valves
Capacity	According to GTD : The flow rate must be within a tolerance of 0% to 10% of the GTD value.
Delivery head	Refer to GTD
Working temperature	Approx. 45 °C
Oil type	SAE 30, 95 cSt at working temperature; when sizing the pump motor, the maximum allowed viscosity is 400 cSt.

System oil

The pistons feature highly efficient jet-shaker cooling. A validated system oil must be selected which fulfils the following basic properties:

- additive-type oil
- viscosity of SAE 30
- minimum Base Number (BN)¹⁾ of 5.0 mg KOH/g
- minimum failure load stage of 11 ± 1 related to the FZG gear oil test method A/8.3/90 according to ISO 14635-1²⁾
- detergency properties
- thermal stability
- anti-corrosion properties
- anti-foam properties
- demulsifying performance.

The consumption of system oil is given in [Table 1-5](#), [Fig 1-7](#).



For further information on the validated system oils which can be used for this purpose, please refer to the respective document on WinGD web page: [Validated engine oils for the WinGD engines](#).



The system oil must be used according to the document “Lubricants” which is available on WinGD web page: [Lubricants](#).

4.4.3 Flushing the Lubricating Oil system



For further information on flushing the LO system, please refer to the latest version of the MIDS “DG 9722 Lubricating Oil System” available on WinGD web page: [Instruction for flushing - Lubricating oil system](#).

4.4.4 Lubrication for turbochargers

As a standard, turbochargers are lubricated by the engine system oil.

An external lubrication system for turbochargers is available as an option, which can use a different LO according to the turbocharger maker’s specifications. The external lubrication system requires an additional storage tank, a lubrication pump, a fine filter and an oil cooler. For further information, please refer to the latest version of the MIDS “DG 9722 Lubricating Oil System” available on WinGD web page: [MIDS](#).

- 1) The Base Number (BN), measured in mg KOH/g (test method ASTM D2896), is a measure of the oil alkalinity. The BN of the cylinder oil is not an index for detergency or for other properties of the cylinder oil.
- 2) The FZG gear machines located at the FZG Institute, Munich/Germany are the reference test apparatuses and must be used in the event of any uncertainty about test repeatability and reproducibility.

4.4.5 Cylinder Lubricating Oil system

Cylinder lubrication is carried out by a separate system, working with the once-through principle. A hydraulically actuated dosage pump feeds cylinder LO to the surface of the cylinder liner through quills in the liner. The oil feed rate is adjustable and set based on the piston underside drain oil analysis results.

For further information on cylinder LO consumption, see [Table 1-5](#), [Fig 1-7](#).

Cylinder LO

For normal operating conditions, it is recommended to use a high-alkaline marine cylinder LO with a viscosity of SAE 50 and a minimum kinematic viscosity of 18.5 cSt (mm²/s) at 100°C. The alkalinity of the oil is indicated by its BN.

BN of cylinder LO

The BN of the cylinder LO must be selected depending on the total sulphur content of the fuel being burned.

Alternatives to a finished cylinder LO

The cylinder LO can also be blended/mixed on board. Multiple concepts for blending/mixing cylinder oil on board are available.



For further information on the validated cylinder LOs which can be used for this purpose, please refer to the respective document on WinGD web page: [Validated engine oils for the WinGD engines](#).



The cylinder oil must be used according to the document “Lubricants” available on WinGD web page: [Lubricants](#).

Cylinder LO supply

Cylinder LO can be supplied in one of the following ways:

- by gravity feed from the cylinder LO service tanks which must be placed at the required geodetic height (as suggested within the system proposal), to achieve the specified static pressure
- by active feed by a suitable pump sucking the cylinder LO directly out of the cylinder LO service tank which could be placed at any position. By selecting the pump option, redundancy in case of a pump failure, e.g. by installation of a second pump in parallel, must be considered.

**Changeover between
cylinder LOs**

There is an option to have two grades of cylinder LOs available. A changeover between the cylinder LOs can be initiated manually. In this case, two cylinder LO service tanks and a changeover device must be installed.


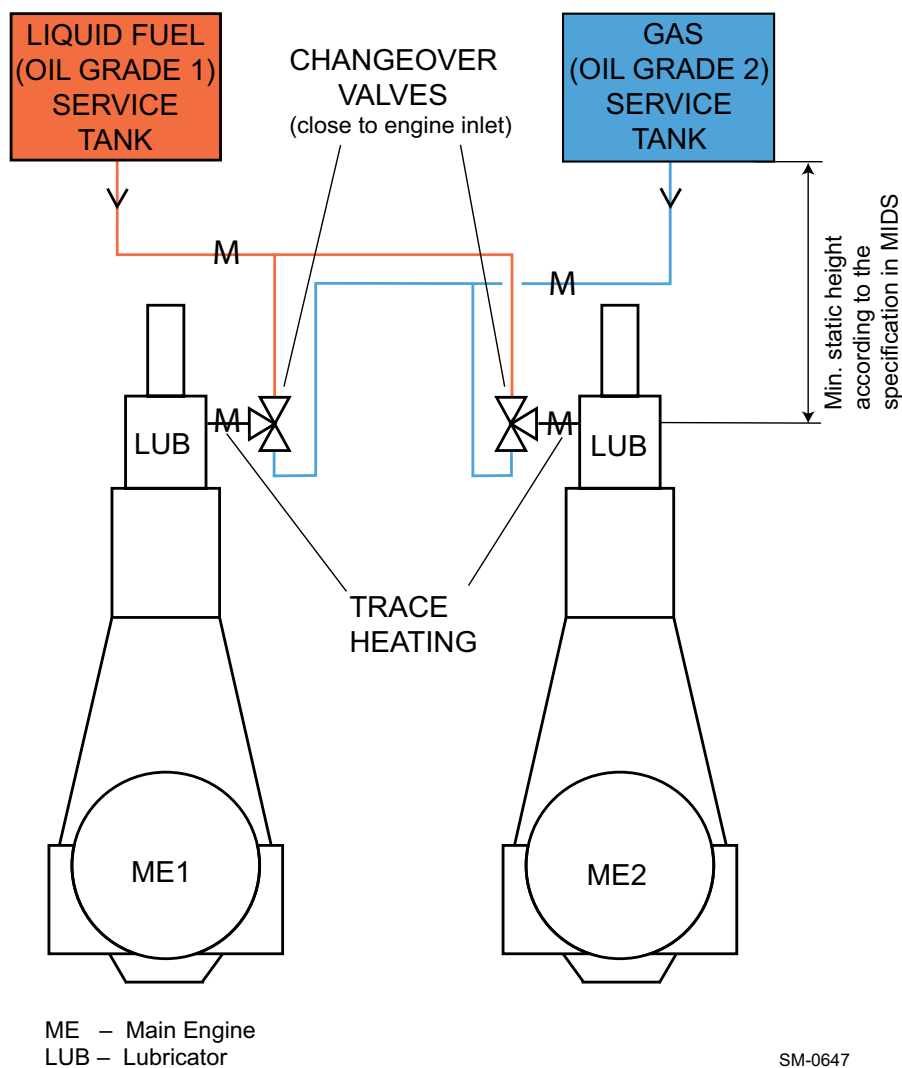


Figure 4-24 Dual cylinder LO installation, enabling independent gas and liquid fuel (max. 0.5% m/m sulphur) operation with a manual changeover valve

**Single grade cylinder
LO application**

If the engine is specified for operation on liquid fuel with a sulphur content of up to 0.1% m/m sulphur (ultra low sulphur), then it is sufficient to install a single grade (low BN) cylinder LO service tank and, thus, no changeover device is required. The same is valid, if a single grade cylinder LO is selected, which is typically in the BN 40 to 60 range, capable of and approved for handling both gas and diesel mode.

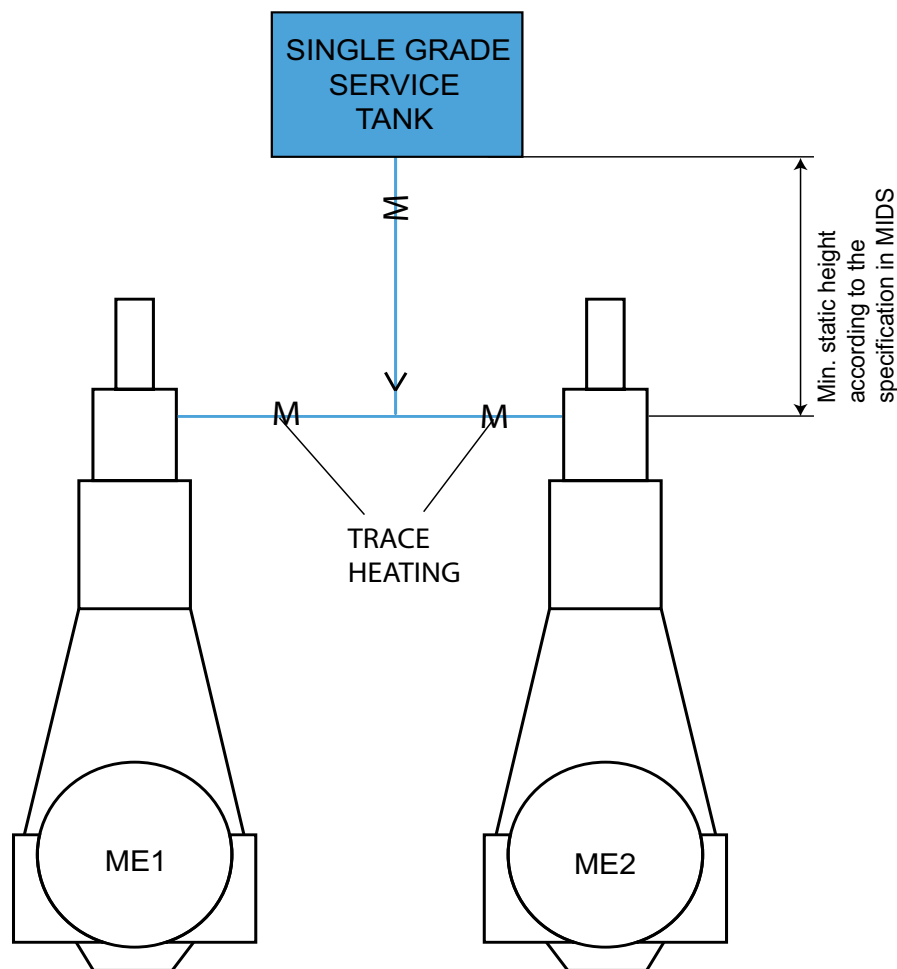

ME – Main engine

SM-0411

Figure 4-25 Single grade cylinder LO installation

Service tank and storage tank

The arrangement of the service tank and the storage tank can be changed by locating the storage tank in place of the service tank. If this arrangement is preferred, the storage tank must be placed at the same height as the service tank to provide the required static pressure at the engine inlet. Furthermore, the storage tank must be of similar design, with a sloping floor.

Electrical trace heating for ship side cylinder LO piping


To ensure the correct cylinder LO temperature at the engine inlet ($40+10/-5^{\circ}\text{C}$), it is recommended to apply electrical trace heating. The main engine provides cabinet control box E86 for the heating cable connection and power supply. The heating cable together with the plug can be directly ordered from the engine maker. The guided heating cable length is determined by the cylinder LO pipe length and the engine type (see Table 4-3, 4-39).

NOTE

On the engine side, electrical trace heating is applied in the rail unit to keep the cylinder LO within the required temperature range, even during gas operation in cold areas.

Cylinder LO trace heating cable

WinGD specifies the 10QTVR2-CT self-regulating heating cable for the engine side and ship side cylinder LO piping. Detailed technical information on this cable can be found in *MIDS*. To reach the required LO temperature of $40+10/-5^{\circ}\text{C}$, the proper length of heating cable must be selected for the engine and traced along the ship side piping spirally or in parallel, depending on the cable/pipe ratio (see Figure 4-26, 4-39).

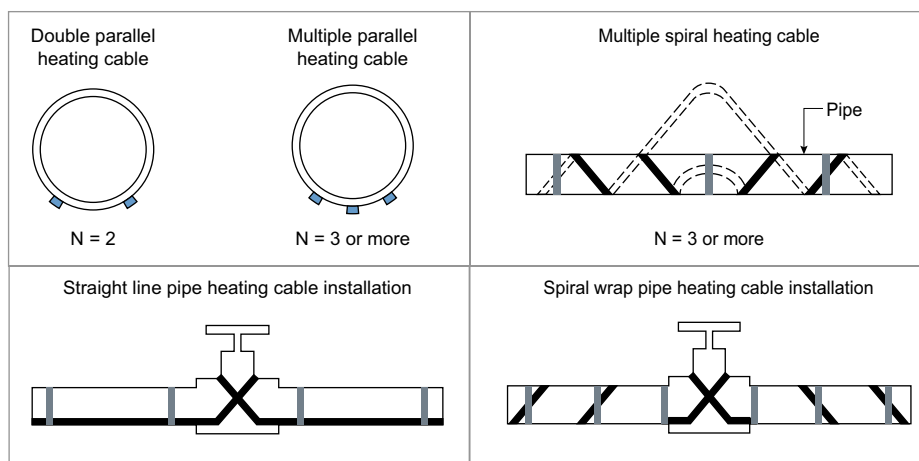

SM-0412

Figure 4-26 Trace heating cable arrangement

Considering the main engine power, LO feed rate and environment condition, WinGD specifies a minimum heating cable length 'Lc' as listed in the following table:

Table 4-3 Heating cable specification

No. of cyl.	Min. heating cable length 'Lc' [m]
5	8
6	9
7	11
8	12

Considering the ship side cylinder LO pipe length 'Lp', the heating cable must be longer than the LO pipe, i.e. 'Lc' > 'Lp'.

Insulation of trace heated cylinder LO pipe

To maintain the desired temperature, the ship side cylinder LO pipe must be well insulated. The following requirements must be considered:

- Insulation material, such as mineral wool, glass fibre or another material of class approved type, can be applied.
- WinGD recommends an insulation thickness of minimum 25 mm.

4.4.6 Maintenance and treatment of Lubricating Oil

It is essential that engine LO is kept as clean as possible. Water and solid contaminants held in suspension must be removed using centrifugal separators which operate in bypass to the engine lubricating system.

Alternatively to separators, filters from WinGD certified suppliers can be used.

Great care must be taken of separators and filters to ensure that they work correctly. The separators must be set up as purifiers. The bypass cleaning system with separators or filters from WinGD certified suppliers must be completely isolated from the fuel oil treatment systems; there must be no possibility of cross-contamination.

LO separator

Type	Self-cleaning centrifugal separator
Min. throughput capacity [l/h]	Refer to GTD
Rated separator capacity	The rated or nominal capacity of the separator must be according to the separator manufacturer's recommendations.
Separation temperature	90°C–95°C; refer to the manufacturer's instructions

LO samples

To ensure that representative samples of the LO can be taken, dedicated sampling points (cocks) are provided on the engine side. Such cocks need also to be installed on system side according to the relevant system proposal drawing in [MIDS](#).

4.4.7 Drain tank

The engine is designed to operate with a dry sump: the oil returns from the bearings, flows to the bottom of the crankcase and through strainers into the LO drain tank. The drain connections from the crankcase to the drain tank are arranged vertically.

The drain tank must be located beneath the engine and equipped with the following:

- depth sounding pipe
- pipe connections for LO purifiers
- heating coil adjacent to pump suction
- air vents with flame protection.

NOTE

The classification societies require that all drain pipes from the crankcase to the drain tank are as low as possible below the free surface of the oil to prevent aeration and foaming; they have to remain below the oil surface at all times.

It is important to maintain adequate drainage under sea conditions resulting in pitching and rolling. The amount of LO required for an initial charge of the drain tank is shown in Figure 4-27, 4-41. The total tank size is normally 5%–10% greater than the amount of LO required for an initial filling.


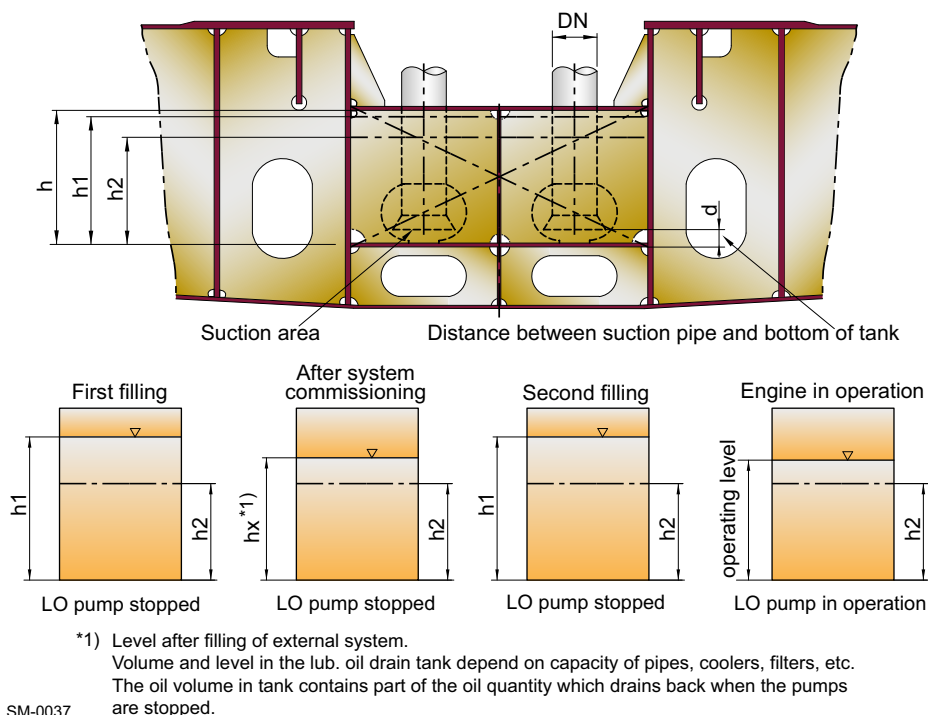


Figure 4-27 Dimensioning and filling process of LO drain tank

Arrangement of vertical LO drains

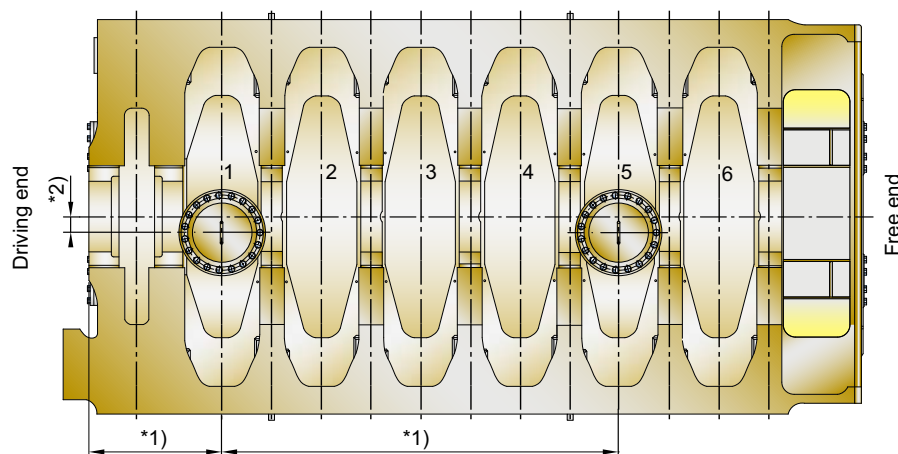

*1) Proposal to determine final position in accordance with shipyard

*2) Alternatively the oil drains may also be arranged symmetrically on port/fuel pump side.


SM-0038

Figure 4-28 Arrangement of vertical LO drains for 6-cylinder engines

NOTE

The illustration above does not necessarily represent the actual configuration or the stage of development or the type of the engine concerned. For all relevant and prevailing information, please refer to *MIDS*.

Inclination angles

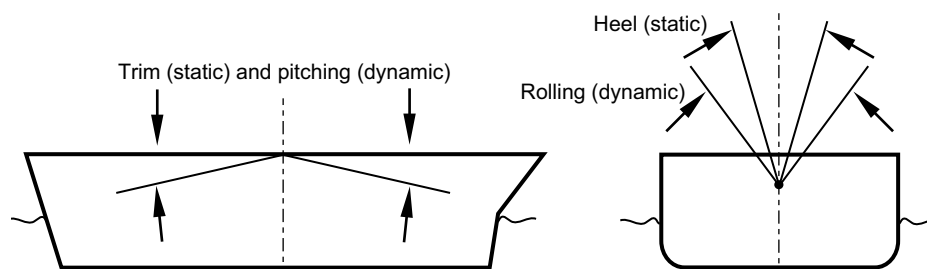

SM-0065

Athwartships and fore-and-aft inclinations may occur simultaneously.

Figure 4-29 Inclination angles

NOTE

The following tables represent the state of data as of 2023 and earlier. Please contact the relevant classification society for the latest data.

Table 4-4 Minimum inclination angles for full operability of the engine (1)

Classification societies (overview see Appendix, Table 9-1, 9-1)				
Year of latest update by Class	ABS 2022	BV 2022	CCS 2022	CRS 2020
Main and auxiliary engine				
Abbreviation	4/1/1/7.9	C/1/1/2.4	3/1/2/1.2.1	7/1/1.6/1.6.2
Heel to each side	15°	15°	15°	15°
Rolling to each side	22.5°	22.5°	22.5°	22.5°
Trim by the head ^{a)}	5°	5°	5°	5°
Trim by the stern ^{a)}	5°	5°	5°	5°
Pitching	±7.5°	±7.5°	±7.5°	±7.5°
Emergency sets				
Abbreviation	4/1/1/7.9	C/1/1/2.4	3/1/2/1.2.1	7/1/1.6/1.6.2
Heel to each side	22.5° ^{c)}	22.5°	22.5° ^{c)}	22.5° ^{c)}
Rolling to each side	22.5° ^{c)}	22.5°	22.5° ^{c)}	22.5° ^{c)}
Trim	10°	10°	10°	10°
Pitching	±10°	±10°	±10°	±10°
Electrical installation				
Abbreviation	4/1/1/7.9	C/1/1/2.4	4/1/2/1.2.1	7/1/1.6/1.6.2
Heel to each side	22.5° ^{b)}	22.5° ^{b) c)}	15° ^{c)}	22.5° ^{b)}
Rolling to each side	22.5° ^{b)}	22.5° ^{b) c)}	22.5° ^{c)}	22.5° ^{b)}
Trim	10°	10° ^{b)}	5°	10° ^{b)}
Pitching	±10°	±10° ^{b)}	±7.5°	±10° ^{b)}
a) Where the ship length exceeds 100 m, the fore-and-aft static angle of inclination can be taken as 500/L degrees (where L = length of ship in metres). b) Up to an inclination angle of 45° switches and controls must remain in their last set position because no undesired switching operations or operational changes can occur. c) For ships carrying liquefied gases or chemicals the arrangement must guarantee that the emergency power supply also remains operable with the ship flooded to a final athwartships inclination up to 30°.				

Table 4-5 Minimum inclination angles for full operability of the engine (2)

Classification societies (overview see Appendix, Table 9-1, 9-1)			
Year of latest update by Class	DNV 2022	IRS 2022	KR 2022
Main and auxiliary engine			
Abbreviation	4/1/3/2.2/2.2.1	4/1/1/1.7/1.7.1	5/1/103./1.
Heel to each side	15°	15°	15°
Rolling to each side	22.5°	22.5°	22.5°
Trim by the head ^{a)}	5°	5°	5°
Trim by the stern ^{a)}	5°	5°	5°
Pitching	±7.5°	±7.5°	±7.5°
Emergency sets			
Abbreviation	4/1/3/2.2/2.2.1	4/1/1/1.7/1.7.1	5/1/103./1.
Heel to each side	22.5° ^{c)}	22.5° ^{c)}	22.5° ^{c)}
Rolling to each side	22.5° ^{c)}	22.5° ^{c)}	22.5° ^{c)}
Trim	10° ^{a)}	10°	10°
Pitching	±10°	±10°	±10°
Electrical installation			
Abbreviation	4/1/3/2.2/2.2.1	4/1/1/1.7/1.7.1	5/1/103./1.
Heel to each side	22.5° ^{b) c)}	22.5° ^{b) c)}	22.5° ^{b) c)}
Rolling to each side	22.5° ^{b) c)}	22.5° ^{b) c)}	22.5° ^{b) c)}
Trim	10° ^{a) b)}	10° ^{b)}	10° ^{b)}
Pitching	±10° ^{b)}	±10° ^{b)}	±10° ^{b)}
a) Where the ship length exceeds 100 m, the fore-and-aft static angle of inclination can be taken as 500/L degrees (where L = length of ship in metres). b) Up to an inclination angle of 45° switches and controls must remain in their last set position because no undesired switching operations or operational changes can occur. c) For ships carrying liquefied gases or chemicals the arrangement must guarantee that the emergency power supply also remains operable with the ship flooded to a final athwartships inclination up to 30°.			

Table 4-6 Minimum inclination angles for full operability of the engine (3)

Classification societies (overview see Appendix, Table 9-1, 9-1)					
Year of latest update by Class	LR 2021	NK 2021	PRS 2022	RINA 2022	RS 2022
Main and auxiliary engine					
Abbreviation	5/1/3/3.7	D/1.3.1/6	VI/1/1.6.1	C/1/1/2.4	VII/2/2.3
Heel to each side	15°	15°	15°	15°	15°
Rolling to each side	22.5°	22.5°	22.5°	22.5°	22.5°
Trim by the head ^{a)}	5°	5°	5°	5°	5°
Trim by the stern ^{a)}	5°	5°	5°	5°	5°
Pitching	±7.5°	±7.5°	±7.5°	±7.5°	±7.5°
Emergency sets					
Abbreviation	5/1/3/3.7	D/1.3.1/6	VI/1/1.6.1	C/1/1/2.4	VII/2/2.3
Heel to each side	22.5° ^{c)}	22.5° ^{b) c)}	22.5° ^{c)}	22.5° ^{c)}	22.5° ^{c)}
Rolling to each side	22.5° ^{c)}	22.5° ^{b) c)}	22.5° ^{c)}	22.5° ^{c)}	22.5° ^{c)}
Trim	10°	10° ^{b)}	10°	10°	10°
Pitching	±10°	±10° ^{b)}	±10°	±10°	±10°
Electrical installation					
Abbreviation	6/2/1/1.10	H/1/1.1.7	VIII/2/2.1.2.2	C/2/2/1.6	XI/2/2.1.2.2
Heel to each side	15°	15° ^{c)}	15°	22.5° ^{b)}	15° ^{c)}
Rolling to each side	22.5°	22.5° ^{c)}	22.5°	22.5° ^{b)}	22.5° ^{c)}
Trim	5° ^{a)}	5° ^{a)}	5°	10° ^{b)}	5° ^{c)}
Pitching	±7.5°	±7.5°	±10°	±10° ^{b)}	±10° ^{c)}
a) Where the ship length exceeds 100 m, the fore-and-aft static angle of inclination can be taken as 500/L degrees (where L = length of ship in metres). b) Up to an inclination angle of 45° switches and controls must remain in their last set position because no undesired switching operations or operational changes can occur. c) For ships carrying liquefied gases or chemicals the arrangement must guarantee that the emergency power supply also remains operable with the ship flooded to a final athwartships inclination up to 30°.					

4.5 Fuel gas system

This section looks at the fuel gas system of the X-DF engines. There are currently two different devices to control the fuel gas pressure delivered to the X-DF engines:

- Integrated Gas Pressure Regulation (iGPR) unit - [4.5.6](#), [4-65](#)
- Gas Valve Unit (GVU) - [4.5.7](#), [4-67](#).

The iGPR is an on-engine solution, while the GVU is an off-engine solution. Thus, the gas properties (see sections [4.5.3 Gas specifications](#), [4-49](#) and [4.5.5 Fuel gas supply pressure](#), [4-60](#)) must be achieved either at the inlet of the iGPR or the inlet of the GVU. As the iGPR is on the engine, the engine inlet is identical to the iGPR inlet.



The latest version of the MIDS “DG 9727 Fuel Gas System” is available on WinGD web page: [MIDS](#).



The document “Flushing Instruction for Gas Fuel Piping System” is accessible under the following link: [Flushing instruction - Gas fuel piping system](#).

4.5.1 Safety considerations

The engine room arrangement (the design and location of the equipment) and the type of systems installed vary depending on the ship installation. However, the main principles of gas safety and redundancy must meet the minimum requirements as defined in WinGD Safety Concept and in the relevant codes and regulations, including the IGF and IGC Codes.



For further information on the safety considerations, please refer to “DG9727 - X-DF Safety Concept” available on WinGD web page: [2-Stroke Dual-Fuel Safety Concept](#).

NOTE

Carefully read, understand and follow the instructions provided in the above-mentioned Safety Concept. This document is an important prerequisite for safe operation of the X-DF engine applications.

4.5.2 Operating principles

The WinGD X-DF engines are normally installed for DF operation, where the engine can operate in either gas or diesel mode. The operating mode can be changed while the engine is running, within certain limits, without interruption of power generation. If the fuel gas supply fails, then the engine will automatically trip to diesel mode operation.


The lean-burn concept

In gas mode the X-DF engine runs as a lean-burn engine utilising natural gas as the main source of fuel. The fuel gas is supplied to the engine at low pressure. Gas ignition is initiated by injecting a small amount of pilot fuel (MDO / MGO), providing a high-energy ignition source for the main fuel charge (gas-air mixture) in the cylinder (see [Figure 4-30](#), [Fig 4-48](#)). Fuel gas admission is hydraulically actuated and electronically controlled.

With the lean fuel gas mixture it is possible to achieve good engine characteristics regarding output, efficiency and emissions. A lean fuel gas to air mixture is also utilised to avoid knocking. However, at high loads the misfiring limit gets closer to the knocking limit, which means that the available operating window is decreasing (see [Figure 4-31](#), [Fig 4-48](#)). Thanks to continuous combustion monitoring, the engine operation will remain in the correct operating window.


Combustion control for each cylinder

One of the key measures is to control the combustion process separately in each cylinder to remain within the operating window and have optimal performance under all conditions for each cylinder regarding safety, efficiency and emissions. The X-DF engine facilitates individual cylinder combustion control, which makes it possible to obtain optimal operating performance at conditions where gas quality, ambient temperature, etc. can vary.

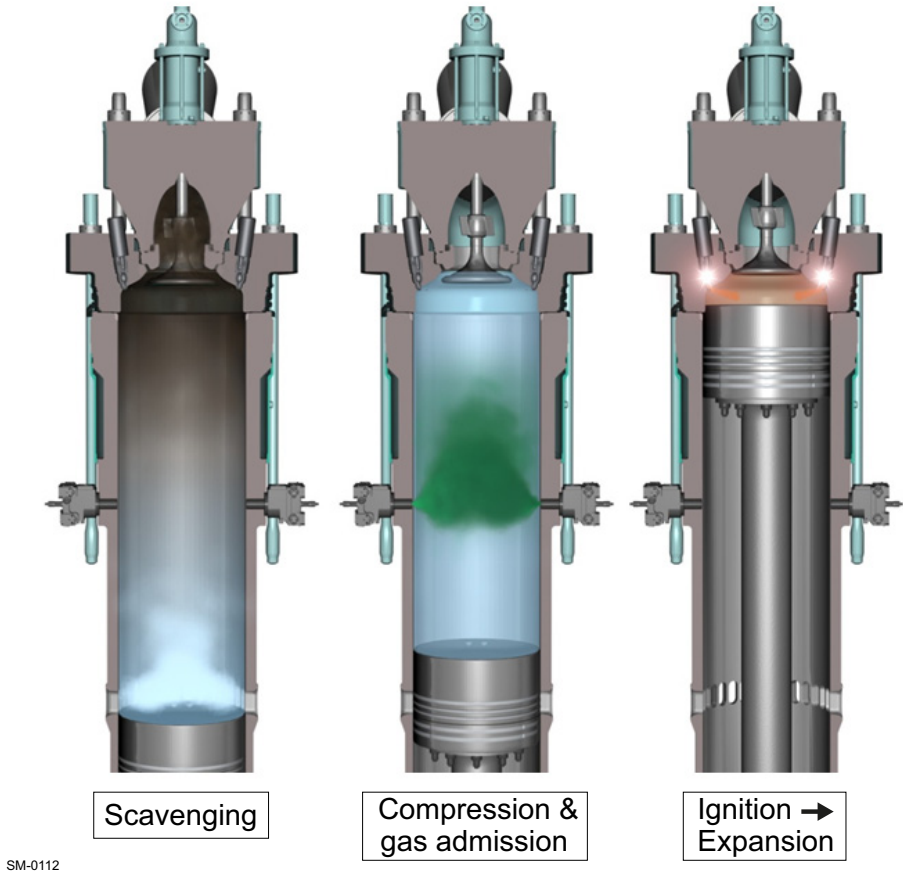

SM-0112

Figure 4-30 Lean burn with pilot ignition

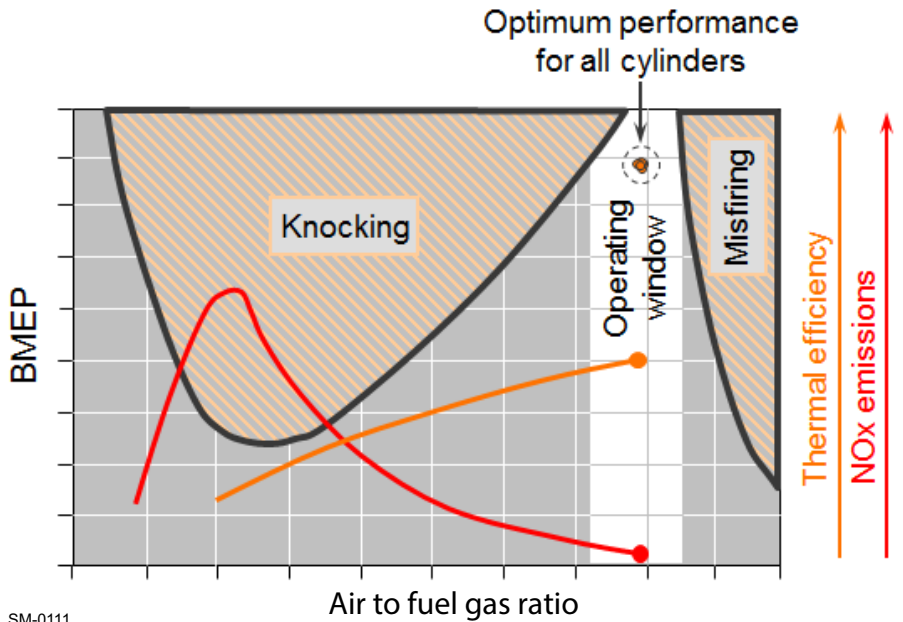

SM-0111

Figure 4-31 Lean-burn operation window

4.5.3 Gas specifications

As a Dual-Fuel engine, the X-DF engine is designed for continuous service in gas or in diesel operating mode. For continuous operation without reduction in rated output, the gas which is used as the main fuel in gas operating mode must fulfil the quality requirements provided in [Table 4-7](#), [▮ 4-49](#). The gas properties are defined at the engine inlet (for the iGPR, see section [4.5.6 On-engine integrated gas pressure regulation unit](#), [▮ 4-65](#)) and the inlet of the Gas Valve Unit (GVU). For further information on the GVU, see section [4.5.7 Off-engine Gas Valve Unit](#), [▮ 4-67](#).

Table 4-7 Gas specifications

Property	Value (values given in Nm ³ are at 0 °C and 101.3 kPa)
Lower Heating Value (LHV)	≥ 28 MJ/kg
Minimum Methane Number (MN)	65 for 100% engine power 60 for 85% engine power
Influence of MN on the maximum engine output	See Figure 4-32 , ▮ 4-50 .
Methane content	≥ 70% volume
Hydrogen sulphide (H ₂ S)	≤ 0.05% volume
Hydrogen (H ₂) ^{a)}	≤ 3% volume
Ammonia	≤ 25 mg/Nm ³
Chlorine and fluorine	≤ 50 mg/Nm ³
Dew point of water	≤ -20 °C
Oil (aerosol liquid and vapour)	≤ 1 mg/Nm ³
Gas cleanliness	Gas is considered as sufficiently clean. ^{b)}
Gas temperature at relative inlet ^{c)}	0 °C–60 °C. Note that no condensate is allowed in the annular space of the main engine gas piping. ^{d)}
Gas feed pressure ^{e)}	According to GTD
Permissible gas pressure fluctuation	± 0.6 bar (across all frequencies)

- a) Hydrogen content higher than 3% volume must be considered on a project-specific basis.
- b) Contamination from the Fuel Gas Supply System must be avoided, e.g. by correct pipe flushing, ensuring cleanliness of bunkering connections, etc.
- c) The gas properties are defined at the engine inlet (for iGPR, see section [4.5.6 On-engine integrated gas pressure regulation unit](#), [▮ 4-65](#)) and the inlet of the GVU (for GVU, see section [4.5.7 Off-engine Gas Valve Unit](#), [▮ 4-67](#)).
- d) If the gas temperature falls below the ambient air temperature (or the ambient air dew point, if determined), a dedicated dry air supply must be used from one of the following methods:
- from control air supply (ISO 8573-1, class x-4-x to be fulfilled, i.e. dew point ≤ 3 °C)
 - from air dryer (ISO 8573-1, class x-4-x to be fulfilled, i.e. dew point ≤ 3 °C)
 - from working air supply (as long as gas temperature is > 20 °C).
- e) The required gas feed pressure depends on the LHV as well as on the specific engine rating and actual engine load (specified in [GTD](#)). Details regarding feed pressure layout can be found in section [4.5.5 Fuel gas supply pressure](#), [▮ 4-60](#).

Methane Number dependent engine output

The Methane Number (MN) has an influence on the maximum available power output.

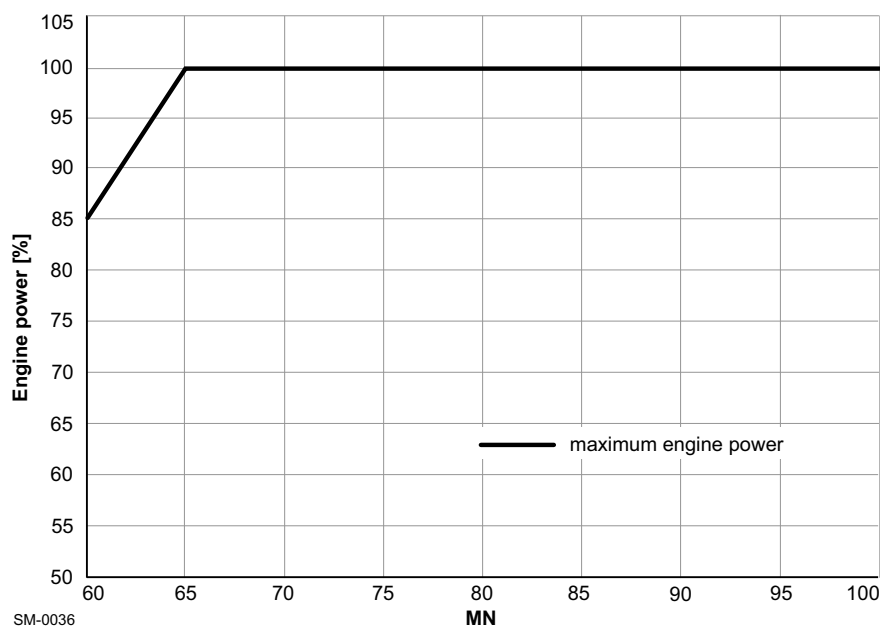


Figure 4-32 Maximum achievable power

MN calculation

An application provided by the European Association of Internal Combustion Engine Manufacturers (EUROMOT) allows calculating the MN of natural gas mixtures. The application is free software and can be downloaded here: [MWN MN calculation program](#).

4.5.4 Fuel Gas Supply System

Fuel gas can typically be stored as LNG at atmospheric pressure, or be pressurised. The design of the external Fuel Gas Supply System (FGSS) may vary, however, it should provide natural gas with the correct temperature and pressure to the engine. The gas piping can be of either single- or double-wall type according to its installation position in compliance with the relevant rules. Any gas pipe in the engine room must be of the double-wall type.

Master gas fuel engine valve

For DF engines the IMO IGC and IGF Codes require a master gas fuel engine valve to be installed in the fuel gas feed system, outside of the engine room (see the “Fuel Gas System” in the [MIDS](#)). In addition, a manual SOV must be placed upstream of the master gas fuel engine valve. Alternatively, the master gas fuel engine valve can be designed with manual override function.

To enable independent operation of different fuel gas consumers, it is recommended that each fuel gas consumer’s supply line is equipped with an independent fuel gas SOV. At least one of these SOVs should close in suitable time to prevent unnecessary venting of fuel gas or at least to restrict the amount of vented fuel gas.


Tank type

The best-suited tank type will depend on system requirements such as the necessary size, design pressure, the expected quantity of Boil-Off Gas (BOG), and the expected duration for the tank to hold the LNG (and resulting BOG).

As defined by the IMO, LNG tanks are classified as either ‘Integrated’ or ‘Free-standing’. Free-standing tanks are then further classified as sub-types A, B and C. A description of the main tank types is provided below.

Integrated: Membrane tank

Integrated type tanks, such as a membrane tank, are built into the hull as part of the vessel structure to ensure an efficient utilisation of space. This is the defining feature compared to a free-standing tank (also known as an independent or self-supporting tank) which is not built into the hull. Integrated tanks are low-pressure tanks, designed for pressure less than 0.7 bar(g). They are a common tank type option for LNGC cargo tanks and are appropriate for large LNG-fuelled vessels, such as container vessels, bulk carriers and oil tankers.

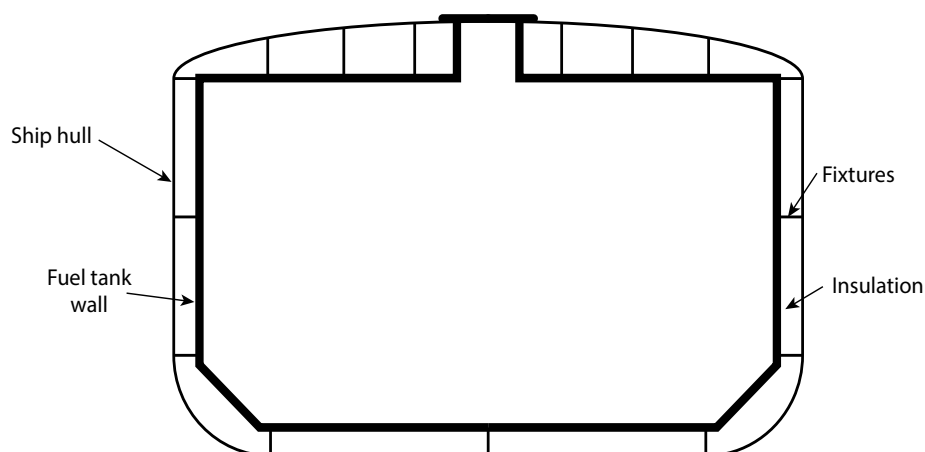

SM-0740

Figure 4-33 Section view of an integrated membrane tank

**Free-standing:
Type A tank**

As specified by the IGC Codes, the Type A tank must have a second barrier to withhold leaks. Often the ship hull is used as this second layer, so to maximise volume efficiency, the tank is designed in a prismatic shape to best fit inside the vessels hull. Between the tank wall and secondary barrier is a solid insulation layer and an air-gap layer. This reduces the thermal impact on the LNG from the environment, thus, reducing the BOG. This gap also allows for a given expansion of the tank wall, which is a result of the Type A tank design. The tank adjusts to the gas pressure due to its flexible structure. Thus, it is very important to control the pressure increase, which must remain within a very limited pressure range (defined as non-pressurised tank), as otherwise structural damages would occur.

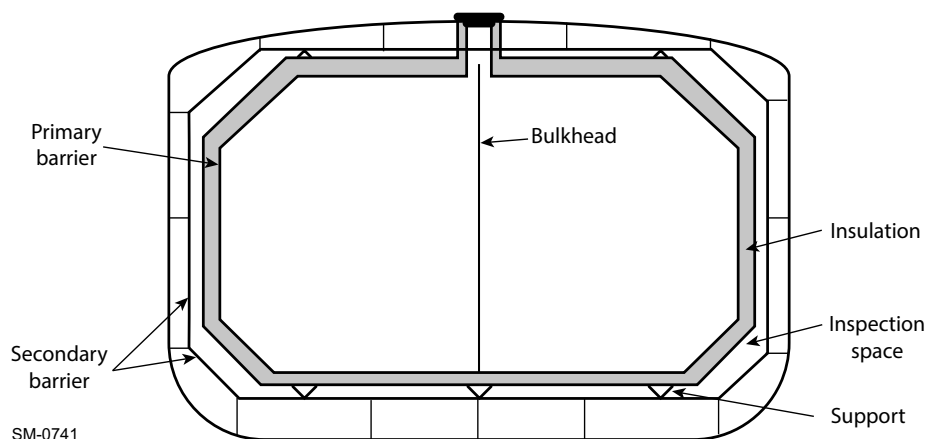


Figure 4-34 Section view of a free-standing Type A tank

**Free-standing:
Type B tank**

Same as the Type A tank, the Type B tank is also designed to be non-pressurised and will respond to pressure increase by expansion. Consequently, it is also as important to control the pressure increase. The Type B tank design is based on a fail-safe concept. From crack monitoring and analysis, the 'Leak before Failure' approach of this design means that fatigue is progressive and not catastrophic. Thus, it is only necessary to have a partial secondary barrier to hold the calculated maximum leakage. In the past, the Type B tank, referred to as the Moss type (see Figure 4-35, 4-52), was spherical. This curve-designed shape supports the even distribution of stress across the tank walls. Nowadays, however, the Type B tank (same as the Type A tank) is also available in a prismatic shape, having a partial secondary barrier.


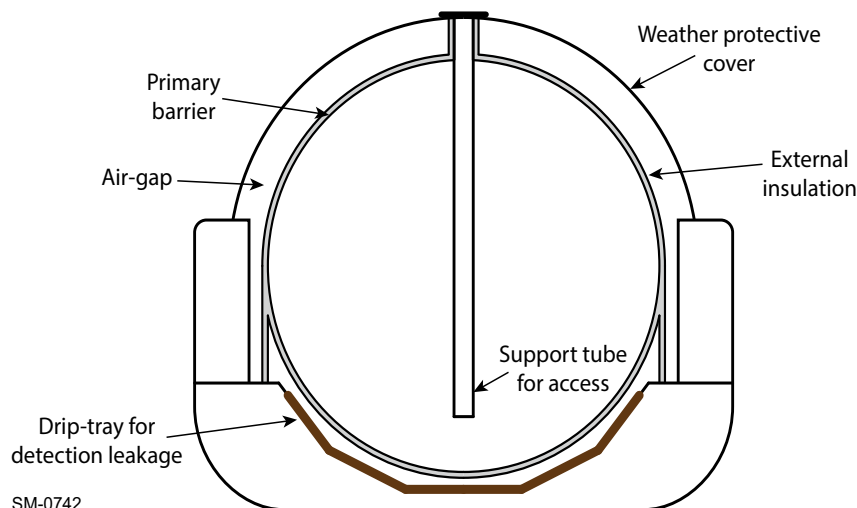


Figure 4-35 Section view of a free-standing Type B tank of moss design

**Free-standing:
Type C tank**


Type C tanks are designed using conventional pressure vessel codes for pressure ranges above 2 bar(g). The most common shapes for this type of tank are cylindrical and bi-lobe, which can be either vertically or horizontally mounted depending on the available space (Figure 4-36, 4-53). While the cylindrical shape does not utilise the available space in an optimal way, the bi-lobe shape utilises the available space more effectively. The intersecting design of two cylinders makes use of the space between the two single cylinders, which otherwise would be not be utilised. No secondary barrier is required for Type C tanks, but instead, gas leakage detectors are placed in the hold space.

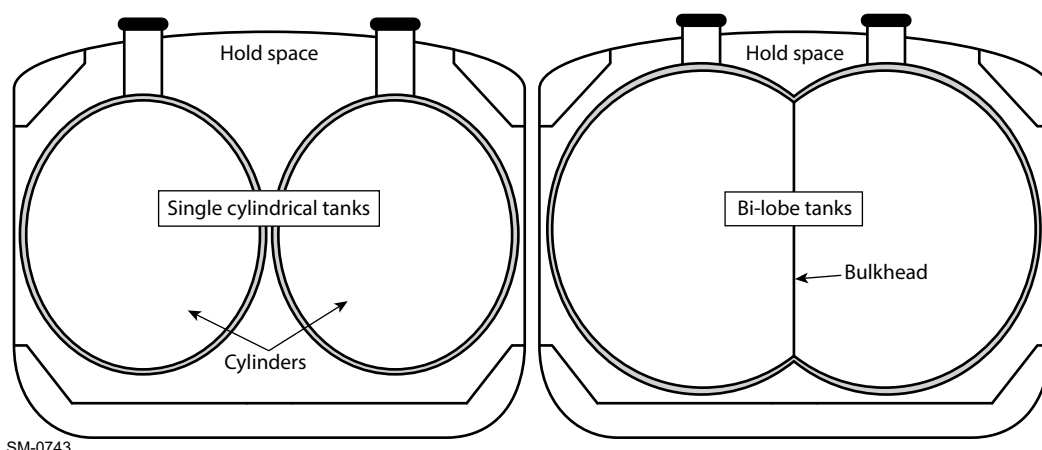

SM-0743

Figure 4-36 Section view of different free-standing Type C tanks installed below the deck

Depending on the arrangement of the vessel, the Type C tank can also be arranged top-side (on the deck) if this is preferred (see Figure 4-37, 4-53). For example, this could be particularly useful if the hold space is used for other bulk materials. An advantage to this arrangement is that in the event of any leakage, the gas does not collect in an enclosed space, and, thus, reduces the risk of hazard.

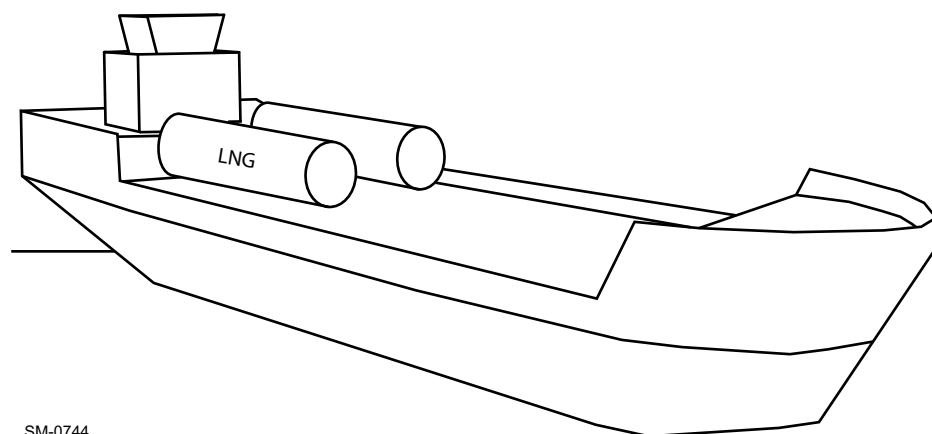

SM-0744

Figure 4-37 Type C tank on the deck of a vessel

Supplying fuel gas

The goal of the FGSS is to provide the fuel gas to the engine and gensets as required, and this must be achieved during engine operation and bunkering. The FGSS must be designed to handle variations in temperature and pressure. It is important to consider the processing of excessive Boil-Off Gas (BOG)¹⁾, including the suitability of an on-board re-liquefaction plant (see the subsection [Re-liquefaction process](#), [▮ 4-58](#)).

Fuel gas is supplied to the main engine and gensets by the following two methods:

Forced Boil-Off Gas supply

LNG is pumped from the tank by cryogenic submerged pumps to a vaporiser, where the liquid is converted to gas at the main engine required pressure. As the LNG is forced to evaporate by an external heat source, the resulting gas is referred to as Forced Boil-Off Gas (FBOG). For the WinGD low-pressure X-DF engines, this is at a maximum pressure of 16 bar(g). The fuel gas produced from the vaporiser can also feed the gensets by passing through a pressure reduction valve to match the required pressure.

Natural Boil-Off Gas supply

The heat which passes through the tank insulation causes the LNG to “boil”, meaning that it evaporates and collects above the LNG. Thus, this gas is a type of BOG and more specifically it is called Natural Boil-Off Gas (NBOG), as the source of the heat of evaporation is from the natural environment and not from any heating. In the sections that follow, the term NBOG is used to distinguish from FBOG. The relative amount of liquid in relation to the total tank volume, which evaporates from the LNG tank per day determines the Boil-Off Rate (BOR). The BOR is provided as a percentage value.

Over time, the NBOG will accumulate and raise the pressure in the system. To ensure that the pressure is not exceeding the safe level, the NBOG must be removed. Usually, the NBOG is used to power the main engine and the gensets. The NBOG can also be directed to a gas-fired boiler. The NBOG that is captured from the tank must be conditioned to meet the requirements of the main engine(s), the gensets, and the gas-fired boiler(s). This is accomplished by use of a combination of heat exchangers and NBOG compressor(s). If the gas cannot be consumed by the main engine(s) or the gas-fired boiler(s), then it can be released to the Gas Combustion Unit (GCU).

Depending on the expected amount of NBOG and the desired level of system flexibility, the NBOG can exclusively fuel the gensets with forced boil-off of LNG as a supplement (see [Figure 4-38](#), [▮ 4-55](#)), or alternatively, the NBOG can fuel the main engine(s) directly as well as the gensets, while having the possibility to supplement with forced boil-off from LNG (see [Figure 4-39](#), [▮ 4-56](#)). For further flexibility, the NBOG can be returned to the tank after a re-liquefaction process, or alternatively, the BOR can be controlled by cooling the LNG.


1) In general, the term BOG is used to describe the boil-off gas produced from evaporation in the tank by natural heat input. As the source of the heat of evaporation is the natural environment and not any other heating, BOG is also called Natural Boil-Off Gas (NBOG). In this document, the term NBOG is used to differentiate it from Forced Boil-Off Gas (FBOG).

Pressurised FGSS

If an LNG tank is designed to withstand pressure (along with the FGSS), then generally the system will be less complex than a system with a non-pressurised tank (along with the FGSS). The system will be less complex since the NBOG management will not be as demanding as for the other non-pressurised systems. Two examples of solutions for a non-LNGC FGSS are provided.

**Type C tank:
Solution 1**

Figure 4-38, 4-55 shows a pressurised Type C tank where fuel gas is provided to the main engine only as FBOG and where only the gensets utilise the NBOG. If required, the gensets have the possibility to supplement with forced boil-off from LNG. In many cases, the amount of NBOG being generated can be consumed by a single gas-fuelled genset. This makes solution 1 a simple and cost efficient solution, as only a low-pressure NBOG compressor may be required, depending on the design tank pressure and the gas feed pressure demand of the gensets.

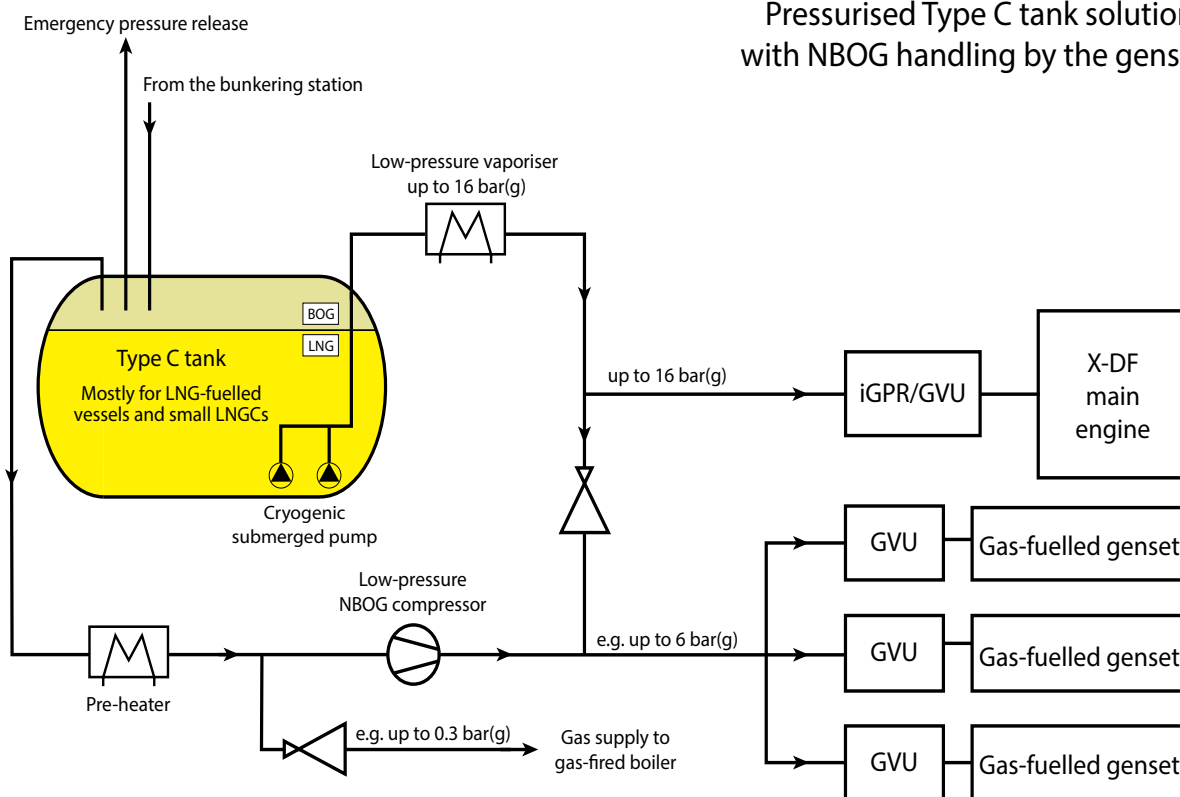


SM-0681

Figure 4-38 Pressurised Type C tank solution with NBOG handling by the gensets

**Type C tank:
Solution 2**

Figure 4-39, 4-56 shows a pressurised Type C tank where fuel gas is provided to the main engine as a combination of FBOG and NBOG. The gensets are fed by a reduction valve from the main engine supply. This system design ensures that the NBOG is also utilised, even when the generated NBOG is greater than the genset consumption. However, this additional flexibility comes at a greater cost as the NBOG compressor is designed for a higher delivery pressure.

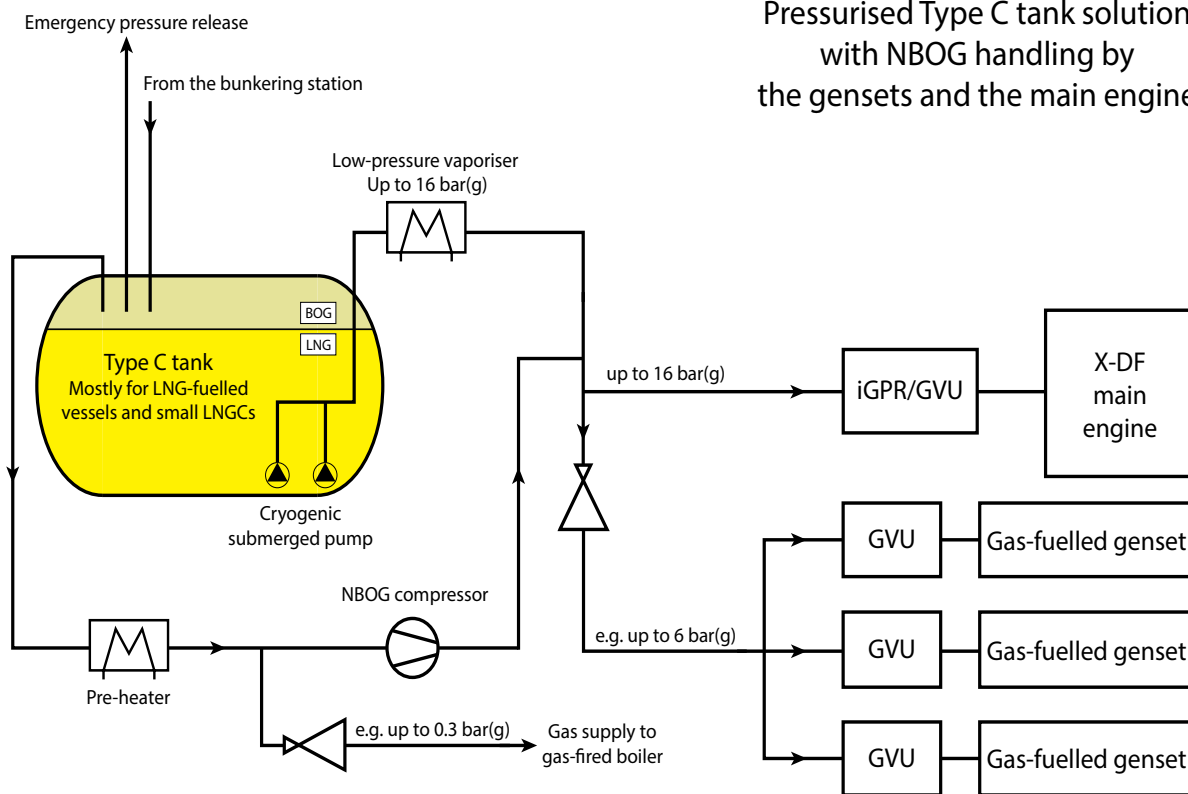

SM-0684

Figure 4-39 Pressurised Type C tank solution with NBOG handling by the gensets and the main engine

Non-pressurised FGSS

For larger LNGCs it is more common to use non-pressurised cargo tanks, thus, the NBOG management must ensure that the pressure build-up does not exceed the tank design limits during bunkering and sea voyages. Like in a pressurised FGSS, a non-pressurised FGSS can combine both FBOG and NBOG to fuel the main engine(s) and gensets as required. In addition, a re-liquefaction system can be added as shown in Figure 4-40, 4-57. This allows for surplus NBOG to be returned to the tank in liquid form and ensures that the pressure in the FGSS does not exceed the limits.

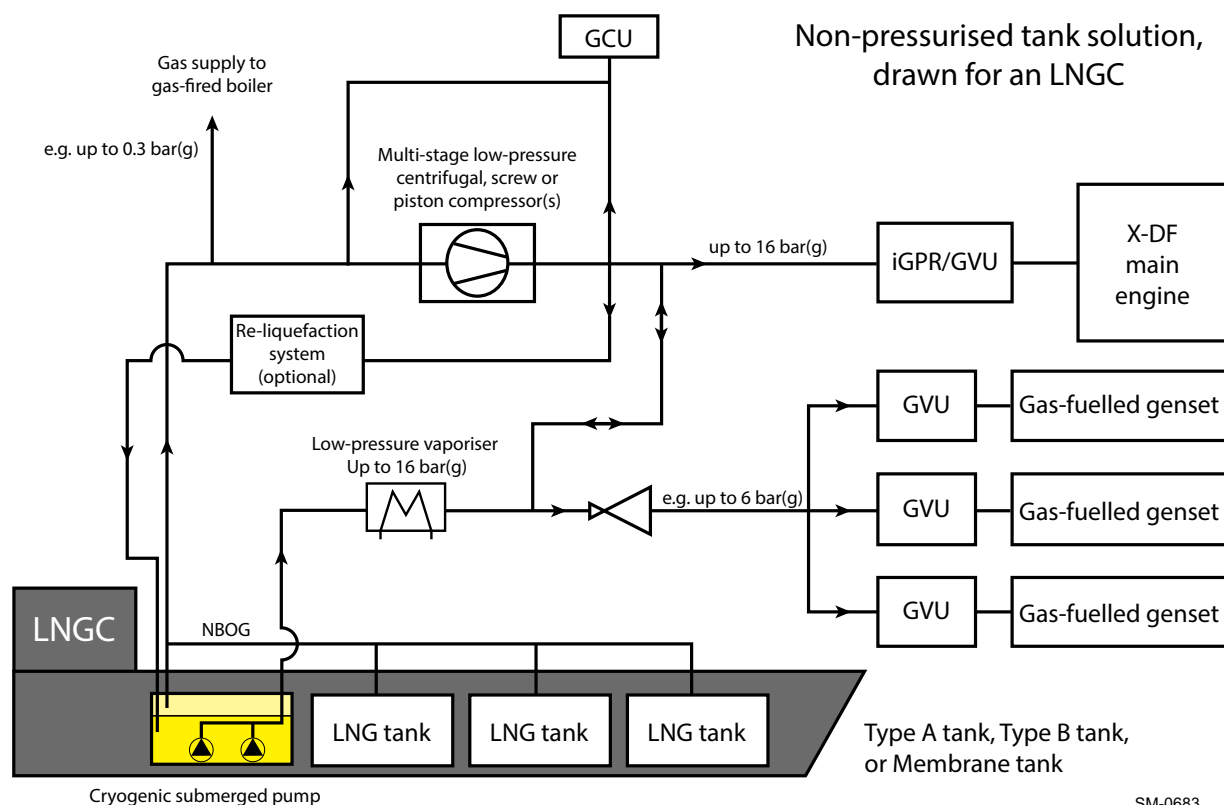


Figure 4-40 Non-pressurised tank solution, drawn for an LNGC

SM-0683

Re-liquefaction process

An on-board re-liquefaction system recovers excess NBOG in the FGSS and returns it to the cargo tanks. This re-liquefaction process reduces the pressure in the system without having to dispose the fuel gas through the GCU, which is also known as NBOG flaring. This is important during voyages as well as in port, as cargo tank pressure requirements must be met. The re-liquefaction of NBOG also slows down the 'LNG ageing'. LNG ageing means the reduction of the methane content in the LNG composition, resulting in lowering the MN.

There are two basic methods of cooling within a re-liquefaction plant. These methods are often used in many different combinations, resulting in re-liquefaction of the NBOG. These two basic methods are described in detail below.

Cooling by the Joule-Thompson effect

The Joule-Thompson effect is the change in temperature that is experienced by a gas when subjected to a change in pressure. Within a re-liquefaction system, if the NBOG from the tank is pressurised through a compressor, it will cause the NBOG to heat up. If the NBOG is then again cooled before reducing its pressure (by a release valve), then its temperature can fall below its boiling point. This will cause the NBOG to partially return to liquid, while the rest remains gaseous, but at the very cold boiling temperature. This cold boiling temperature is utilised in the cooling process of the compressed NBOG.

Cooling by the Reversed-Brayton effect

The alternative method for cooling is a refrigeration process where a heat exchanger is able to remove enough heat from the NBOG, so that it falls below its boiling point without any pressure changes. This is normally achieved by a nitrogen cooling system which provides sufficient cooling capacity to the heat exchanger. This principle is known as the Reversed-Brayton effect.

These two basic methods can be used together in different system configurations to offer the best results and efficiency for re-liquefying the NBOG. After being cooled, it must then be passed through a separator to remove any NBOG that has not condensed. After this point, the NBOG which has not been condensed is then normally recirculated back to the beginning of the re-liquefaction process, while the LNG generated from the re-liquefaction process is then returned to the LNG tank(s).

Sub-cooling method

The process of spraying sub-cooled LNG into the top of the tank is an alternative approach for indirectly handling the NBOG. This method of managing the system pressure is different compared to the direct handling of the NBOG. Instead of returning the NBOG to its liquid state, a sub-cooler aims to continuously cool the LNG below its boiling point, thus, preventing it from reaching its boiling temperature. As shown in Figure 4-41, 4-59, the LNG is pumped from the tank and after sub-cooling it is returned back to the tank. The LNG is either returned by spraying it from the top of the tank into the gas layer above the LNG level, or by mixing it into the LNG in the tank. The process of spraying helps to reduce the tank pressure.

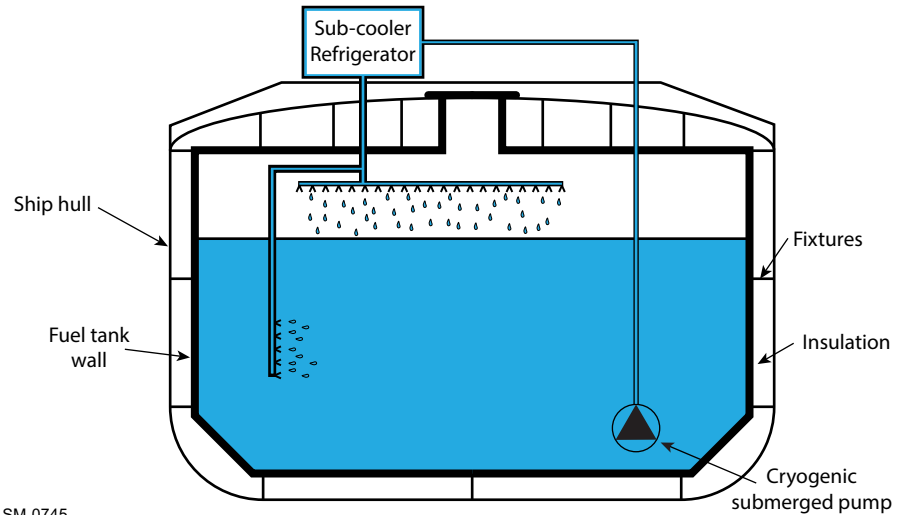


Figure 4-41 An LNG sub-cooler within an integrated tank

The advantages of this approach are that it is a much simpler system setup requiring usually a smaller plant size. As a result, it also requires less maintenance, while being more energy efficient. However, a sub-cooler system is normally not suitable for Type A and Type B tanks.

4.5.5 Fuel gas supply pressure

Layout of the FGSS

The engine and the FGSS are laid out such that unrestricted engine power output is ensured for all gas qualities down to a Lower Heating Value (LHV) of 28MJ/kg. This is typically the lowest value of LNG NBOG composition with high nitrogen content (approximately 22%), as it can be found on LNG carriers at the beginning of laden voyages.

The design limit of gas pressure regulating equipment for both the iGPR (see section 4.5.6 On-engine integrated gas pressure regulation unit, 4-65) and the GVU (see section 4.5.7 Off-engine Gas Valve Unit, 4-67) is 16 bar(g).

For the specific project, the gas piping class can be defined according to the design fuel gas supply pressure specified in the following paragraphs, with the consideration of pressure fluctuation and a safety margin for pressure losses.

Design fuel gas supply pressure selection

The graph in Figure 4-42, 4-60 indicates the required minimum design fuel gas supply pressure (at the iGPR or the GVU inlet) for R1–R3 and R2–R4 rated engines as a function of the fuel gas LHV and the actual engine power output.

NOTE

The ship owner and the shipyard have the right and responsibility to define the main engine rating (CMCR) and the LHV for 100% CMCR engine output in the ship building specification.

The design fuel gas supply pressure must be selected according to the 100% CMCR engine output and the selected LHV. The maximum pressure drop of the FGSS must be added. In addition, a margin must be added to consider the FGSS ability to compensate for pressure fluctuations caused by variations of flow rates.

A fuel gas with a lower LHV than the specified LHV can be used. However, the main engine can have power limitations at certain rating levels. Please refer to Option 2 of Case 1 for more information.

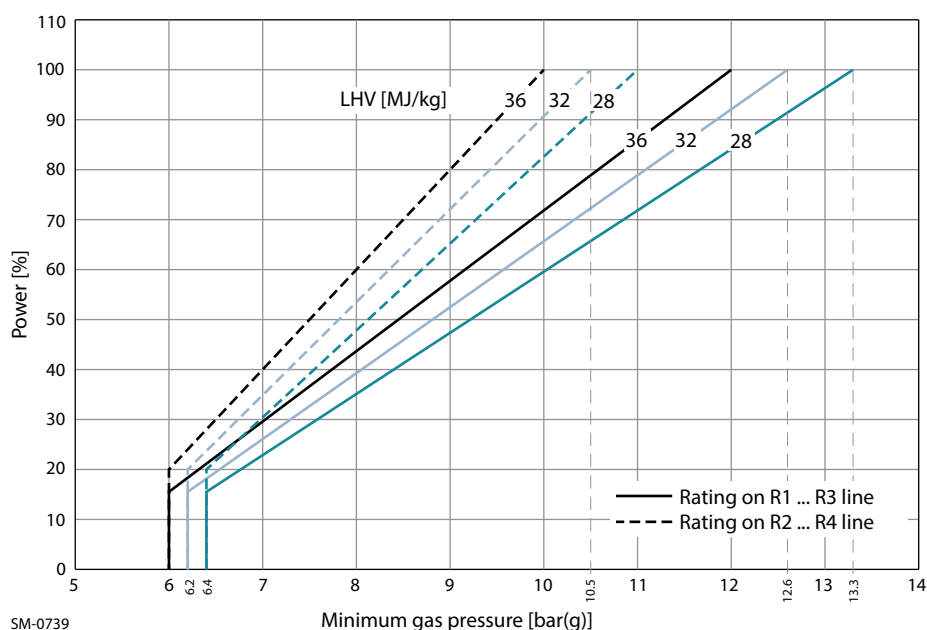


Figure 4-42 Design fuel gas supply pressure requirements



Rating-specific information is available from the WinGD engine layout application [GTD](#).

Case 1: Example of fuel gas supply pressure selection for an LNG-fuelled vessel

Assumptions:

- An engine with R4 rating is selected.
- No significant amount of NBOG is considered, e.g. just up to 10%. Typically, the LNG in the tank has an LHV of approximately 36 MJ/kg or higher. Thus, a fuel gas with an LHV of approximately 36 MJ/kg is available under normal conditions. In the unlikely case of a significantly lower LHV, sufficient engine power output for normal service operation is available (e.g. more than 90% CMCR power if the LHV is just as low as 32 MJ/kg).
- A pressure drop of 0.5 bar across the FGSS is considered. The real pressure drop needs to be calculated by the shipyard or the FGSS supplier (see section [4.5.5 Fuel gas supply pressure](#), [4-60](#)).

Results:

In this case, the ship owner and shipyard have two options to define the fuel gas supply pressure.

- Option 1:
 - The ship owner and the shipyard consider the worst case as design criterion (i.e. an LHV of 32 MJ/kg to select the fuel gas pressure).
 - Based on the R4 rating and the LHV of 32 MJ/kg, the fuel gas supply pressure (at the iGPR or the GVU inlet) is selected at 10.5 bar(g) following the GTD data.
 - Considering the 0.5 bar pressure drop, the fuel gas supply design pressure from the FGSS is defined at 11.0 bar(g).
- Option 2 (recommended by WinGD):
 - The ship owner and the shipyard consider the LHV of 36 MJ/kg as design criterion and accept a main engine power limitation of up to 92% CMCR power in case the LHV drops to 32 MJ/kg.
 - Based on the R4 rating and the LHV of 36 MJ/kg, the fuel gas supply design pressure (at the iGPR or the GVU inlet) is selected at 10.0 bar(g) following the GTD data.
 - Considering the 0.5 bar pressure drop, the fuel gas supply design pressure from the FGSS is defined at 10.5 bar(g).

Case 2: Example of fuel gas supply pressure selection for an LNG carrier

Assumptions:

- An engine with R4 rating is selected.
- A combination of a low LHV (28 MJ/kg) and full-load operation of the engine is unlikely. Typically, compressed NBOG is utilised as the main fuel gas, supplemented by FBOG, if necessary. Consequently, an FGSS layout with an LHV of 28 MJ/kg would only lead to a situation where compressors are running far below their design point during normal vessel operation. This would result in compressor operation of a lower efficiency.
- WinGD recommends selecting an LHV of 32 MJ/kg for normal condition. Even if designed for this LHV, the engine can still operate with high output if the fuel gas is supplied with an LHV of 28 MJ/kg (e.g. more than 90% CMCR power, if designed for an LHV of 32 MJ/kg).
- A pressure drop of 0.5 bar across the FGSS is considered. The real pressure drop needs to be calculated by the shipyard or the FGSS supplier (see section [4.5.5 Fuel gas supply pressure](#), [4-60](#)).

Results:

- A fuel gas pressure of 10.5 bar(g) (at the iGPR or the GVU inlet) is sufficient for CMCR operation.
- Considering the assumed maximum pressure drop of 0.5 bar, the design fuel gas supply pressure is 11.0 bar(g).

NOTE

- It is recommended to consider the different fuel gas temperatures for the different fuel gas compositions (e.g. cold fuel gas with a low LHV at the beginning of a laden voyage and warm fuel gas with a high LHV during a ballast voyage).
- It is recommended to consider the varying nitrogen content in relation to the LHV. For example, approximately 22% nitrogen for an LHV of 28 MJ/kg and 11% for an LHV of 32 MJ/kg in the NBOG, which mainly contains methane.
- If the GCU is supplied by the compressor, then the compressor flow capacity is defined by the natural BOR.

FSM

If the main engine is operating in Fuel Sharing Mode¹⁾ (FSM) the required minimum fuel gas supply pressure is according to the engine power, as indicated in [Figure 4-42](#), [Fig 4-60](#). However, the fuel gas flow rate will vary depending on the mixture ratio of fuel gas and fuel oil.

Advantage of variable fuel gas supply pressure


WinGD recommends energy-saving variable fuel gas supply pressure to the iGPR or the GVU inlet. If the fuel gas is supplied by means of a compressor, the savings can be significant, while for supply by means of an LNG pump, the savings are minor. For LNG pump operation, the pressure adaptation has the additional advantage of creating less heat input into the LNG tank by reducing the pump mechanical work. Finally, variable fuel gas supply pressure supports stable engine operation at minimum power. However, constant fuel gas supply pressure is possible but not recommended because of the reasons mentioned before.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

Pressure control of the FGSS with iGPR

The ECS determines the set-point of the fuel gas supply pressure and transmits the controlling signals to the Propulsion Control System (PCS) and the iGPR. The PCS transmits the set-point to the FGSS (see Figure 4-43, 4-63 for basic information about the control system interfaces).

The data transmitted to the FGSS includes an additional pressure offset to accommodate for pressure losses and dynamic load changes in the system. The pressure offset is a project-specific input that is calculated and set in the PCS.

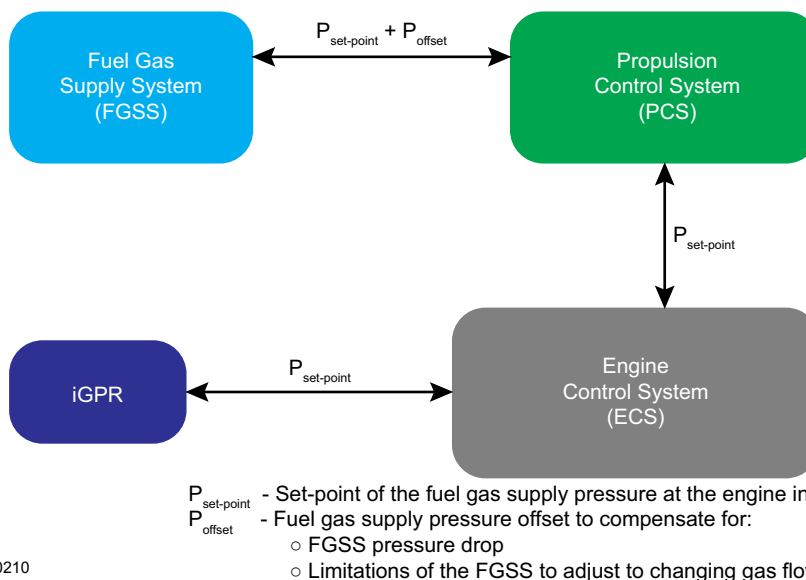


SM-0210

Figure 4-43 Fuel gas supply pressure control at the engine inlet (engines with iGPR)**Pressure control of the FGSS with GVU**

The ECS determines the set-point of the fuel gas supply pressure at the GVU inlet and transmits the controlling signals to the PCS, which then requests pressure increase or decrease from the GVU. In addition, the PCS transmits the set-point to the FGSS (see Figure 4-44, 4-63 for basic information on the control system interfaces).

The data transmitted to the FGSS includes an additional pressure offset to accommodate for pressure losses and dynamic load changes in the system. The pressure offset is a project-specific input that is calculated and set in the PCS.

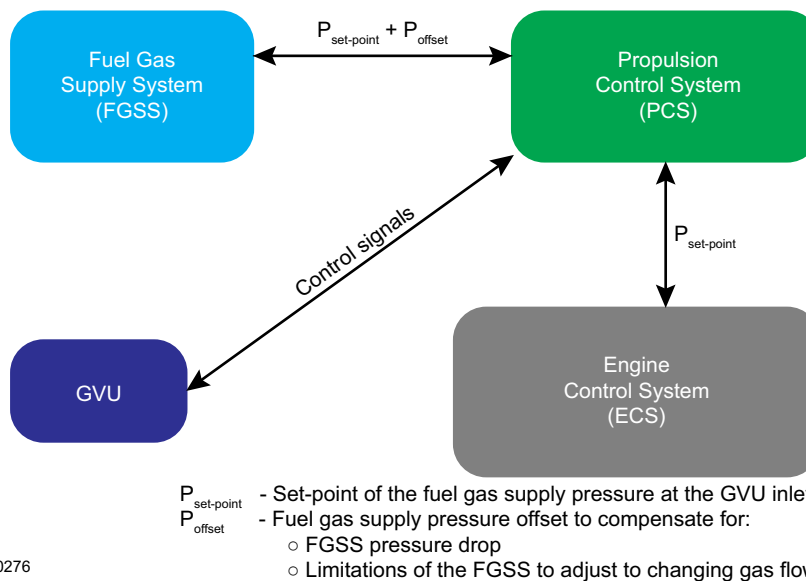

SM-0276


Figure 4-44 Fuel gas supply pressure control at the GVU inlet (engines with GVU)

Pressure control of the engine operational gas pressure

The operational gas pressure at the engine internal Gas Admission Valves (GAVs) is controlled by the iGPR (see section 4.5.6 On-engine integrated gas pressure regulation unit, ¶ 4-65) or the GVU (see section 4.5.7 Off-engine Gas Valve Unit, ¶ 4-67). Both the iGPR or the GVU are connected to the ECS (either by means of the PCS, or directly). The iGPR or the GVU preferably just provide fine adjustments of the gas supply pressure to compensate for fluctuating pressure demands. These varying pressure demands may be caused by fluctuations of the engine power demand. At the same time, the FGSS provides the gas supply pressure as requested by the PCS. However, the iGPR or the GVU have the capacity to handle any gas supply pressure up to the maximum design gas supply pressure of 16 bar(g).

Overview of steps for acquiring the FGSS delivery pressure

Figure 4-45, ¶ 4-64 provides an overview of the gas pressure from the FGSS input by way of the iGPR or the GVU inlet to the final pressure level at the engine GAVs.

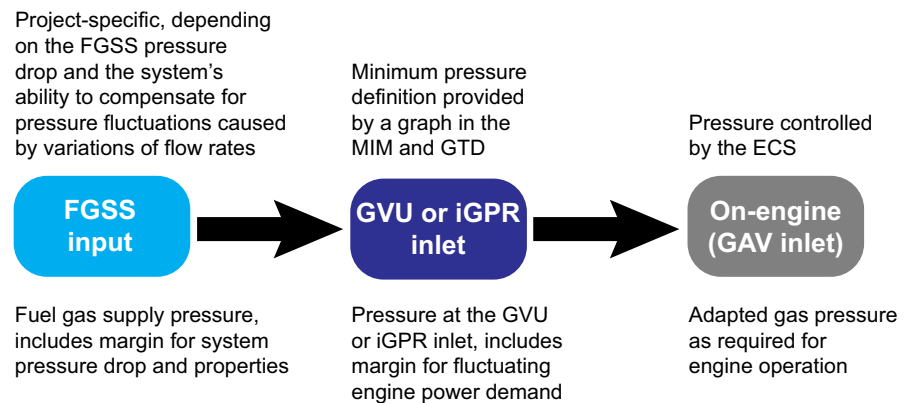


SM-0773

Figure 4-45 Fuel gas pressure level definitions

4.5.6 On-engine integrated gas pressure regulation unit

The X-DF engine requires precise regulation of gas pressure with a timely response to changing load conditions. WinGD has developed the Integrated Gas Pressure Regulation (iGPR) unit, which encompasses all performance and safety requirements associated with the X-DF engine applications (see Figure 4-46, 4-65).

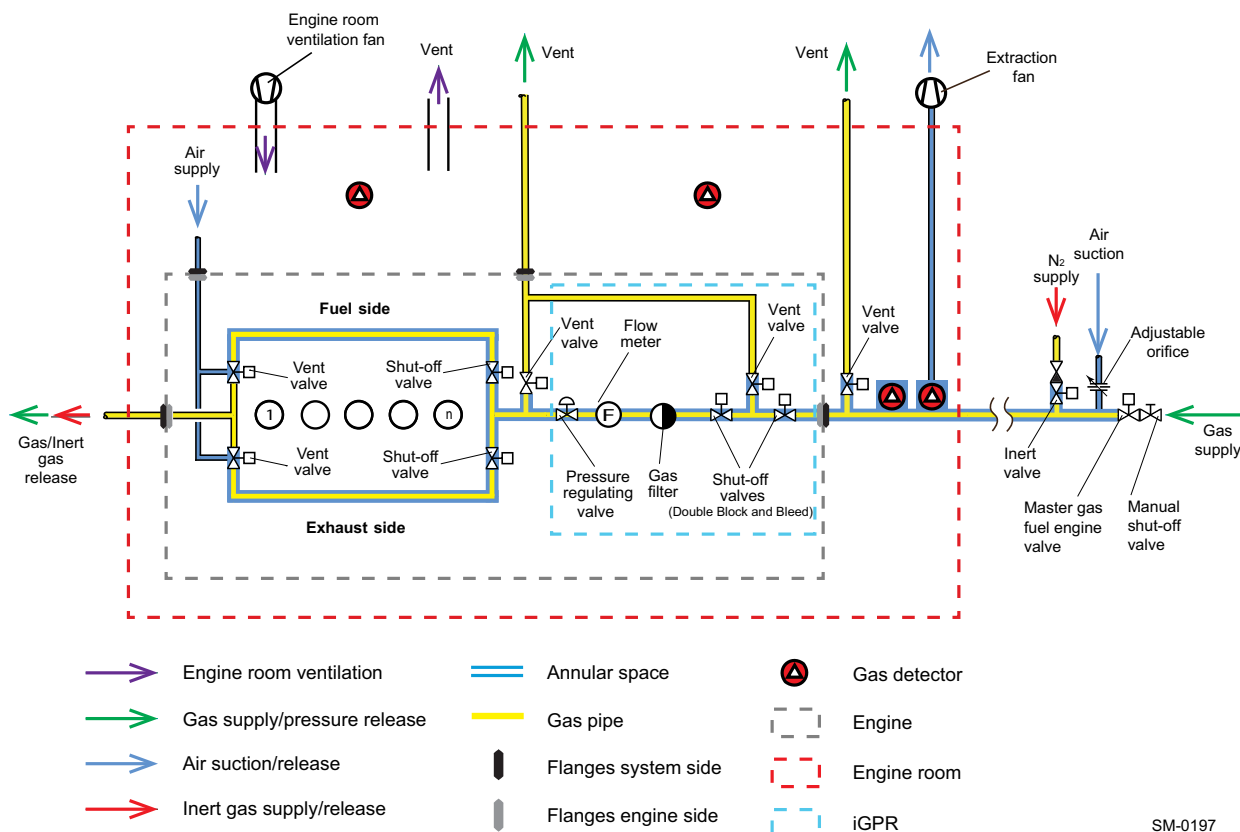

SM-0197

Figure 4-46 FGSS with the iGPR

The main functions of the iGPR include:

- gas pressure regulation
- gas flow measurement
- gas filtration
- leak test sequence
- purging with inert gas and venting
- fuel gas temperature monitoring.

The iGPR is mounted on the engine and has the same installation principles as applied to the FGSS which is located in the engine room.

The iGPR consists of the following main components:

Fuel gas pressure regulating valve	The fuel gas feed pressure to the engine must be adjusted within a narrow, load-dependent pressure range. This adjustment will ensure that the fuel gas pressure in the engine common-rail piping fits to the load command. This is done by means of a pressure regulating valve that is controlled by the ECS.
Fuel gas SOVs	The fuel gas SOVs as installed in the iGPR are normally closed type valves which are open during gas operation. It is used to shut off the fuel gas supply to the pressure regulating valve and the engine, while also providing piping isolation for on-engine purging.
Purging and venting valves	The iGPR is installed with multiple valves that isolate inert gas and vent lines from the main fuel gas piping. In the event that a gas trip is initiated by the safety system, these valves are automatically opened. Inert gas is then supplied to the iGPR, and the engine fuel gas system is purged of gas. Manual activation of the valves is available for fuel gas system maintenance.
Flow meter	Fuel gas consumption is measured by a Coriolis flow meter.
Gas filter	Fuel gas supply to the iGPR is filtered using an integrated gas filter.
Control system	The control system is based on the same hardware and reliable components as used on the engine itself. The complete iGPR control is allocated in the iGPR control box. Based on signals from the control system logic, the solenoids control the pneumatically actuated valves. A control panel is mounted on the iGPR control box, where the status of all valves and readings from sensors are displayed.

4.5.7 Off-engine Gas Valve Unit

Before being supplied to the engine, the fuel gas passes through the Gas Valve Unit (GVU), which is a module connected to the engine fuel gas supply piping. This unit controls the fuel gas pressure to the engine depending on the engine load. As a safety precaution to ensure the tightness of valves and proper functioning of components, the GVU performs a gas leakage test before the engine starts operating on fuel gas.

WinGD supports two different types of GVUs:

- GVU without housing** The GVU without housing, e.g. GVU-OD™ (open design) from Wärtsilä (see Figure 4-47, 4-67), must be installed in an explosion-proof GVU room.
- GVU within a housing** The GVU within a housing, e.g. GVU-ED™ (enclosed design) from Wärtsilä (see Figure 4-48, 4-68), is a solution where all the equipment is mounted inside a gas-tight casing. This arrangement minimises installation costs, as it allows the GVU-ED™ to be placed inside the engine room, next to the engine in a similar manner as other auxiliary equipment.

GVUs from other suppliers can be applied if fulfilling the same functionalities as specified in this document. For dimensional GVU drawings or for further information on the product, please contact the GVU supplier.


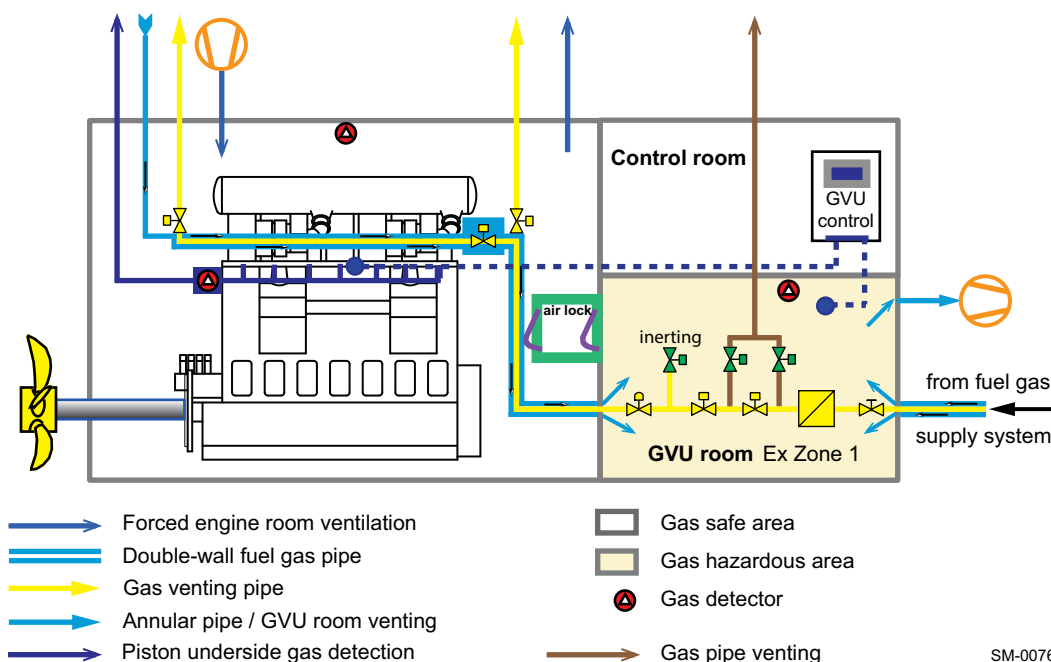


Figure 4-47 The GVU-OD™ from Wärtsilä

SM-0076

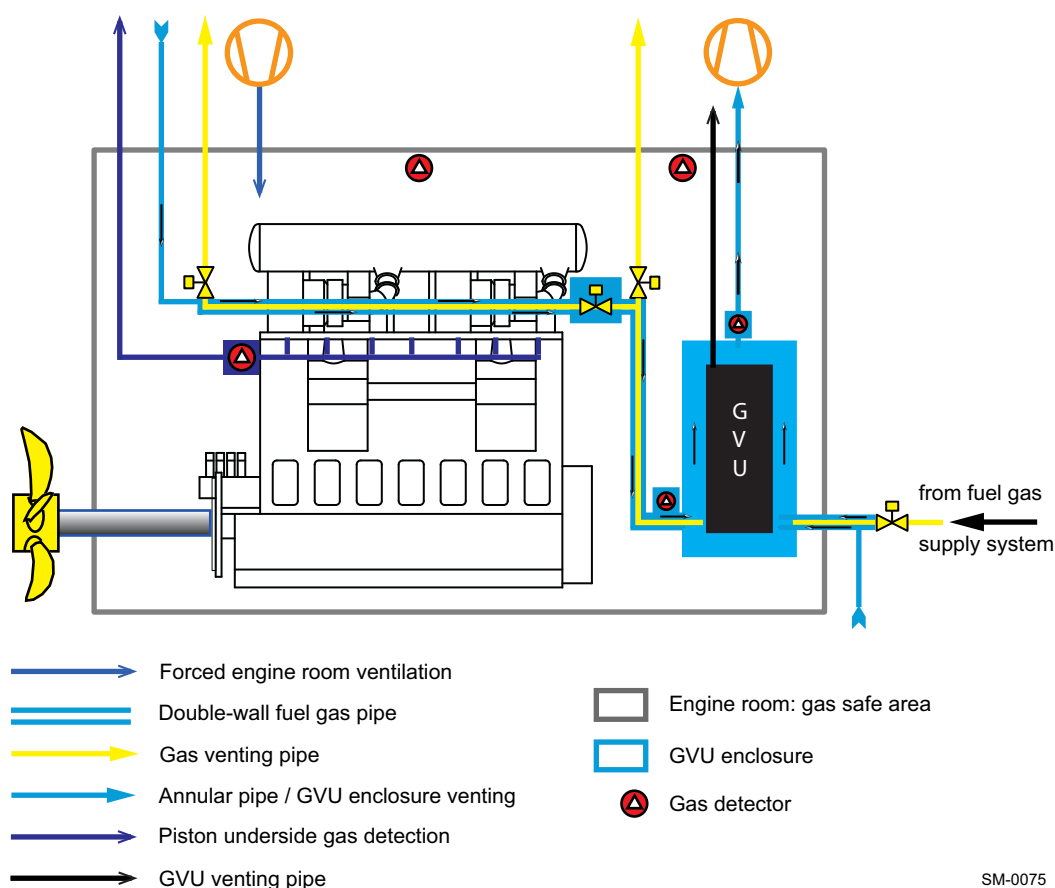

SM-0075

Figure 4-48 The GVU-ED™ from Wärtsilä

Location of the GVU

The fuel gas supply pipe length between the GVU and the engine inlet should be kept as short as possible (maximum length 30 m) to ensure optimal engine response to transient conditions.

The GVU consists of the following main components:

Fuel gas pressure regulating valve

The fuel gas feed pressure to the engine must be adjusted within a narrow, load-dependent pressure range. This adjustment will ensure that the fuel gas pressure in the engine common-rail piping fits to the load command. This is done by means of a pressure regulating valve that is controlled by the PCS. A smaller gas volume between the pressure control valve and the engine improves the response time of the system in transient conditions, such as engine load fluctuations.

Valve block

The 'Interim guidelines on safety for natural gas-fuelled engine installations in ships' (IGF Code) state that each item of gas-consuming equipment must be provided with a set of valves to form a double block-and-bleed function and thus ensures reliable and safe operation on fuel gas.

Gas filter

The filter is a full-flow unit, preventing impurities from entering the engine fuel gas system. The pressure drop over the filter is monitored and an alarm is activated when the pressure drop is higher than the permitted value, which is caused by a dirty filter.

Control system

Readings from the sensors on the GVU as well as the opening and closing of valves are electronically or electro-pneumatically controlled by the GVU control system. The Local Display Unit (LDU), which is mounted on the control cabinet, indicates all valve statuses and readings from sensors.

4.5.8 Fuel gas venting

During normal operation of the X-DF engine, there are certain situations defined where the fuel gas piping must be safely depressurised. For example, during a stop sequence in gas operation mode, the gas venting valves on the iGPR or GVU, as well as on the engine itself will automatically open to quickly reduce the gas pressure to atmospheric pressure. Also, in case of an emergency stop, an additional pressure relief valve in the FGSS will release pressure from the fuel gas piping, upstream of the iGPR or GVU.

Venting of fuel gas

This small amount of fuel gas can be released outward to a place carrying no risk of ignition. Instead of venting to the atmosphere, other means of disposal such as a suitable furnace or gas-recovery system can be considered. However, this kind of arrangement must be accepted by the classification society on a case-by-case basis.

NOTE

- All venting pipes that may contain fuel gas must be designed to prevent the accumulation of fuel gas inside the piping.
- The pressure drop in the venting lines must be kept to a minimum.

Interconnection of vent lines

To prevent gas venting to another engine during maintenance, vent lines from the fuel gas supply (or from the iGPR or GVU) of different engines must not be interconnected. However, vent lines from the same engine can be interconnected to a common header.

Ventilation of double-wall fuel gas piping

All fuel gas piping on the engine is of the double-wall type. The annular space in the double-wall piping is ventilated by suction pressure, as created by a ventilation fan. WinGD recommends having the ventilation fan installed in a safe location outside of the engine room. Differing layouts (for installation within the engine room) can also be considered, given prior acceptance from the responsible flag state and / or the classification society. The suction side of the ventilation fan is connected to the ventilation outlet pipe just before the engine inlet in the case of an iGPR installation. Alternatively, the connection is on the top of the GVU.

Location of ventilation air inlets

One ventilation air inlet to the annular space is located on the engine. The ventilation air is to be taken from a safe area through dedicated piping. The second ventilation air inlet is located at the other end of the fuel gas supply double-wall piping, and in a safe area outside of the engine room.

With this arrangement, the ventilation air is taken from both inlets and flows through the double-wall piping annular space to the suction side of the ventilation fan. The correct flow distribution between both venting paths must be set by adjusting the orifices as shown in the “Fuel Gas System” of the MIDS, MIDS.

Extraction fan capacity

The extraction fan capacity is calculated for an air flow rate that ensures air exchanges of no less than 30 times per hour. The volume of extraction air depends on the volume of the annular space of the main engine and the FGSS double-wall piping, including the GVU volume, if a GVU is applied. The on-engine flow resistance in the annular space is provided in the “Fuel Gas System” of the [MIDS](#). The extraction fan must not be connected to any other consumer's FGSS.

According to requirements of classification societies, spare parts should be available for each type of fan, except if a second fan is mounted as redundancy.

Dry air supply for annular space ventilation

If the fuel gas temperature is below the dew point of the annular space ventilation air, then dry air needs to be supplied for the engine annular space ventilation to prevent condensation. This can be achieved by supplying compressed air (working air at 7-8 bar(g) is sufficient). For further details, please see the system proposal as shown in the “Fuel Gas System” of the *MIDS*. The compressed air capacity must be designed such that the volume of the annular space can be ventilated at a minimum of 30 times per hour. Some design margin must be included for the layout uncertainties, as well as to account for air loss through the flow indicator as applied in the MIDS installation proposal.

Hazardous area

According to the IGC/IGF Code a 1.5-metre hazardous area around both the ventilation air inlet and outlet must be taken into consideration when designing the ventilation piping.

4.5.9 Purging by inert gas

Purging and flushing of the fuel gas system is performed in case of fuel gas leakage detection, a fire alarm or any other emergency, and before maintenance on the main engine, the iGPR or the GVU. The fuel gas piping system must be depressurised and any remaining fuel gas must be removed by an inert gas (e.g. nitrogen). For this purpose, the piping of the WinGD main engine and the iGPR or the GVU are equipped with inert gas connections.

Purging gas properties

For purging, WinGD requires an inert gas (typically nitrogen) with the following properties:

Table 4-8 Purity of inert gas (engines with iGPR)

Requirement	Property	Value
IGF requirements	Content of mixture out of N ₂ , CO ₂ , Ar	≥ 95.0%
	Oxygen content	≤ 5.0%
WinGD requirements	Dew point (atmospheric pressure)	≤ -40 °C
	Inert gas pressure before purging valve	Set-point ± 10%
	Set-point selection range	5–15 bar(g)

Table 4-9 Purity of inert gas (engines with GVU)

Requirement	Property	Value
IGF requirements	Content of mixture out of N ₂ , CO ₂ , Ar	≥ 95.0%
	Oxygen content	≤ 5.0%
WinGD requirements	Dew point (atmospheric pressure)	≤ -40 °C
	Inert gas pressure before purging valve	Set-point ± 10%
	Set-point selection range	3–15 bar(g)

Purging gas pressure

The purging gas pressure (p_i) can be selected within a wide range to allow the best match with the available purging gas system. Once the purging gas pressure has been selected (defined as set-point), the actual purging gas pressure may deviate $\pm 10\%$ from the set-point. As the purging cycle is time-controlled and is programmed during commissioning, the pressure set-point must be fixed beforehand.

Purging gas consumption volume

The inert gas consumption for one purging cycle must be a minimum of three times the fuel gas pipe volume. The inert gas volume can be calculated with the following equation:

$$V_i = 3 V_a \text{ [Nm}^3\text{]}$$

where:

V_i = minimum required inert gas volume [Nm³]

V_a = total volume of the space to be purged, including the main engine internal gas piping, the external gas supply piping and the relevant fittings [m³].

The main engine internal gas piping volume, which must be purged, can be found in the “Fuel Gas System” of the *MIDS*. The volume of the fuel gas piping on the ship side must be calculated by the shipyard and must be based on the piping layout. The main engine control system has a pre-set inert gas purging cycle of 25 seconds. The value for this purging cycle must be adjusted during commissioning.

The design principles of an inert gas release valve are similar to that of a safety valve. The valve opening section is designed based on the desired flow velocity and the pressure differential before and after the valve. The valve supplier must provide a suitable valve for the calculated V_i and the selected p_i as well as the resulting purging duration time. Shipyards can consult the supplier of the inert gas release valve for more details.

Inert gas supply for the main engine is one part of the inert gas supply on the vessel. Thus, the inert gas consumption of the main engine must be added to the ship inert gas system during the design phase.

4.5.10 Fuel gas leak test

After first-time system assembly or maintenance work on the fuel gas piping, a leak test of the fuel gas pipe on the engine side and plant side is required to ensure that the fuel gas pipe is tight and that the components in the gas piping are working properly. The fuel gas leak test can be carried out with compressed air from the starting air system. The air pressure must be reduced to the fuel gas supply pressure as defined in section 4.5.5 Fuel gas supply pressure, 4-60. A temporary connection must be arranged (please refer to *MIDS*).

NOTE

If the inert gas pressure is equal to or higher than the design fuel gas supply pressure, then it can be used instead of compressed. This can be carried out by means of a pressure reduction valve. In this case, a branch connection from the starting air system to the gas fuel piping is not necessary.

The fuel gas leak test can be activated from the engine LDU. The test is automatically done sequentially for the three sections of the fuel gas pipe, as shown in Figure 4-49, 4-72 and Figure 4-50, 4-72.

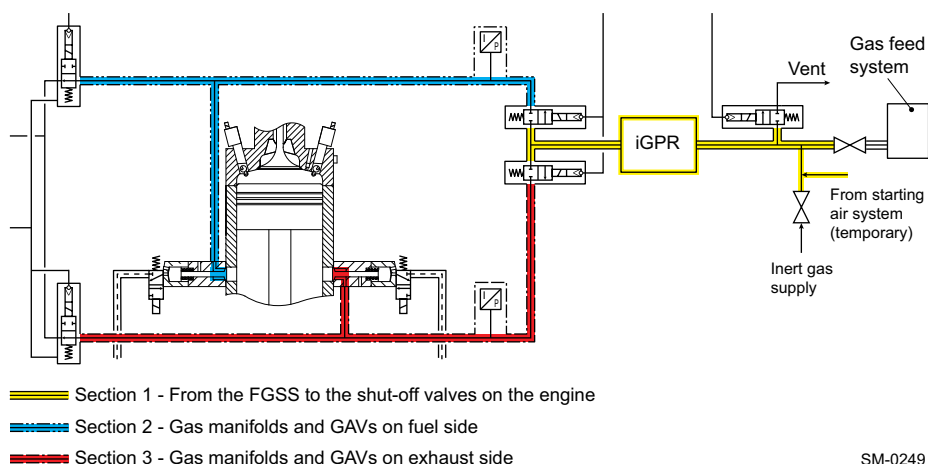


Figure 4-49 Gas leak test sequence (engines with iGPR)

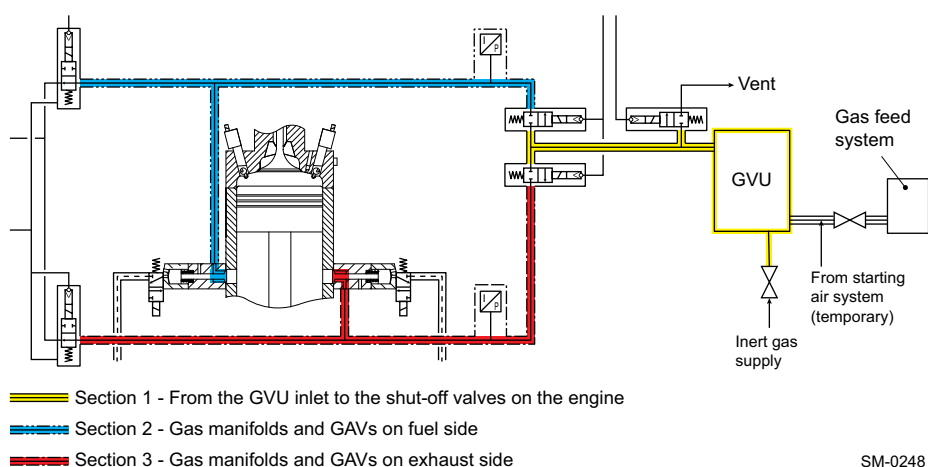


Figure 4-50 Gas leak test sequence (engines with GUV)

4.6 Pilot fuel oil system



Flushing the pilot fuel oil system and treatment of pilot fuel oil

Relevant installation information for the pilot fuel system is included in the MIDS “DG 9723 Fuel Oil System” available on WinGD web page: [MIDS](#).

The requirements for flushing the pilot fuel oil system and for the treatment of pilot fuel oil are similar to those described in the fuel oil system sections (see sections [4.7.3 Flushing the fuel oil system](#), [4-89](#) and [4.7.4 Fuel oil treatment](#), [4-89](#)).

Functionality

The pilot fuel system operates during all engine operating modes (gas, diesel and fuel sharing operation) as outlined in section [1.3 Fuel operating modes](#), [1-7](#). Pilot fuel is injected into the combustion chamber to ignite the gas charge. The pilot fuel system is designed for operation on MDO (DMB, DFB grades) and MGO (DMA, DFA, DMZ, DFZ grades). The diesel oil is delivered by a fuel oil feed pump via a diesel oil cooler and a filter to the engine, as shown in [Figure 4-51](#), [4-73](#).

Sulphur content

In general, the pilot fuel sulphur content must comply with the limits of the applicable emission regulations. Project-specific exceptions might be granted in some areas on certain conditions, e.g. continuous sulphur emission measurements.

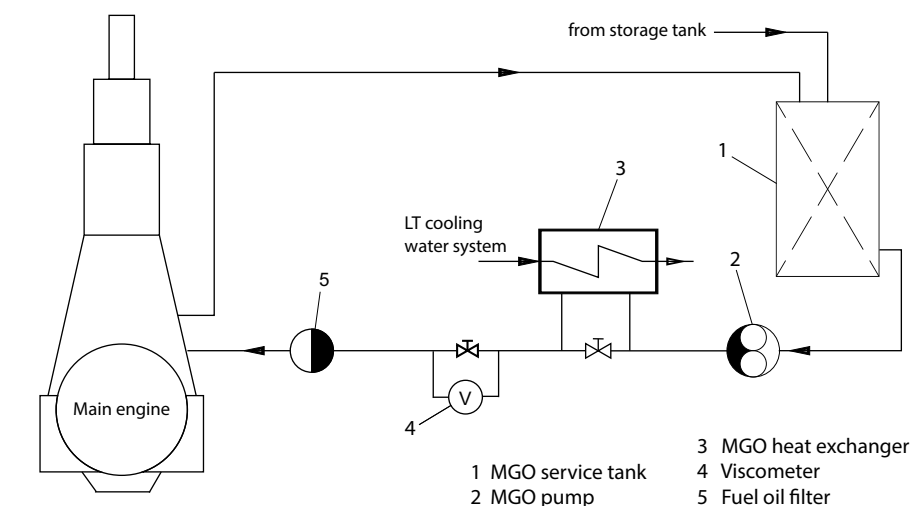


Figure 4-51 Pilot fuel oil system

On-engine pilot fuel oil system

The on-engine pilot fuel pump unit raises the pilot diesel oil pressure to the required level. The unit consists of an electrically-driven radial piston pump (with built-in overpressure bypass valve), fuel filters, and a pressure control valve.

Main components of pilot fuel oil system

The main components of the pilot fuel oil system are the pump unit, common rail pipe, feed pipes, and injection valves.

Pressurised pilot fuel is delivered from the pump unit into a common rail pipe. The high-pressure piping from pump to injectors is of double-wall type. Any leakage is collected from the annular space of the double-wall pipe and led to a collector fitted with a leakage sensor. The common rail piping delivers pilot fuel to each injection valve and in addition acts as a pressure accumulator against pressure pulses.

**Pilot injection valves
and pre-chambers**

The X-DF engine uses pilot injectors with built-in solenoid valves. The injectors are electronically controlled by the WinGD ECS, which allows exact timing and duration of the injection. To have the best ignition and combustion stability, the pilot injection valves are combined with pre-chambers. These pre-chambers are directly cooled by the HT cooling water from the cylinder cover. Furthermore the injectors are cooled by system oil.

Pilot fuel injection is also activated in diesel mode operation to prevent excessive deposit formation on the injector tips and in the pre-chambers.

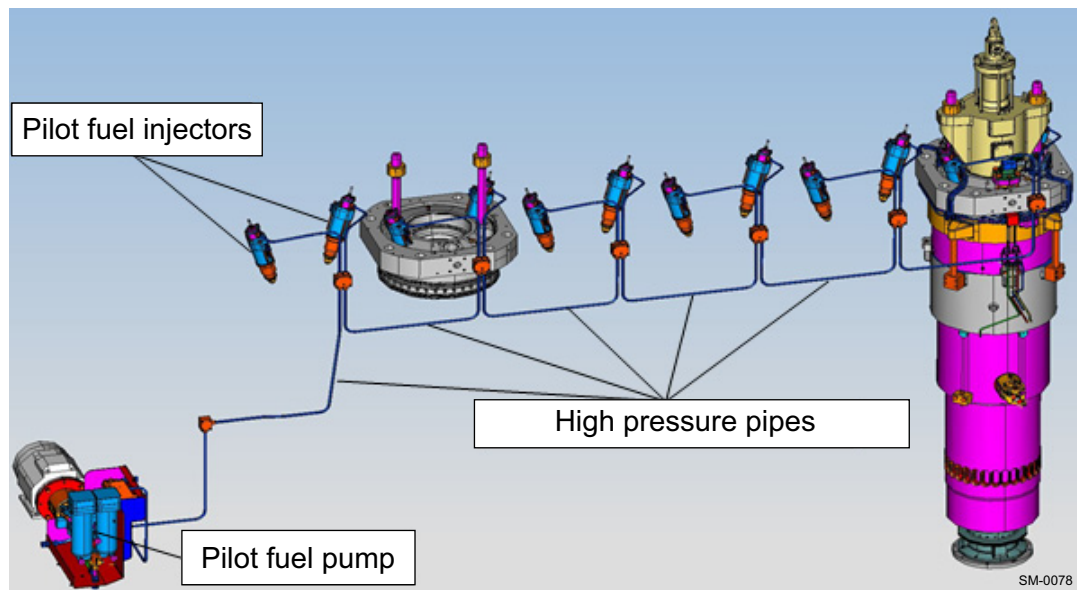


Figure 4-52 Pilot fuel high-pressure system

Pilot fuel oil filter

A 10 µm filter is provided in the engine pilot fuel unit. On the system side, a 10 µm (absolute sphere passing mesh size) duplex filter, as shown in [Table 4-10](#), [Fig. 4-75](#), must be installed. For the installation position, please refer to the [MIDS](#).

Table 4-10 Specification of the pilot fuel oil filter on the system side


Type	Duplex filter
Working viscosity	2–17 cSt required for MDO/MGO
Flow rate	According to GTD . The capacities cover the needs of the engine only. If a filter of automatic back-flushing type is installed, the feed and booster pump capacities must be increased by the quantity needed for back-flushing of the filter.
Service pressure	Max. 10 bar at filter inlet
Test pressure	Specified by classification society
Permitted differential pressure at 14 cSt	– clean filter: max. 0.2 bar – dirty filter: max. 0.6 bar – alarm setting: max. 0.8 bar Note: Real operational settings could be less according to filter maker's recommendation.
Minimum bursting pressure of filter insert	Max. 3 bar differential across filter
Filter insert mesh size	Specified max. 10 micron (absolute sphere passing mesh)
Filter insert material	Stainless steel mesh (CrNiMo)
Working temperature	Up to 50 °C

4.7 Fuel oil system



The latest version of the MIDS “DG 9723 Fuel Oil System” is available on WinGD web page: [MIDS](#).

Figure 4-53, 4-76 shows the installation principle for maximum fuel flexibility.

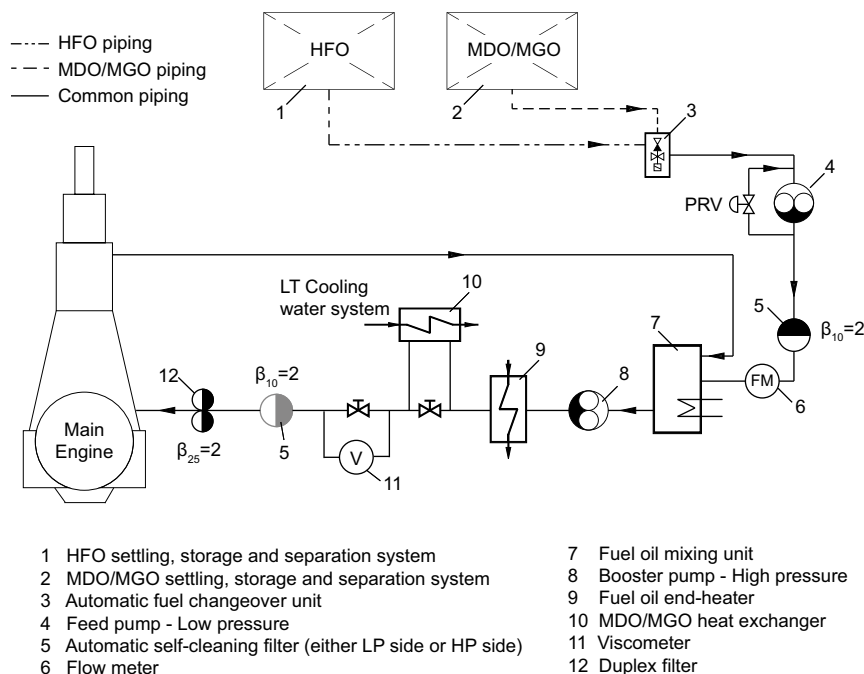

SM-0300

Figure 4-53 Fuel oil system



Further information on MDO/MGO fuels is provided in the document “Fuels”. It considers additional design options for the fuel oil system, as well as optional heat exchangers for better viscosity regulation when changing between HFO¹⁾ and MDO/MGO. The document is available on WinGD web page: [Fuels](#).

Fuel consumption

Data of fuel consumption can be taken from the project-specific [GTD](#) data sheet.

4.7.1 Fuel oil system components

The following components are associated with a fuel oil system of maximum fuel flexibility, i.e. operation on heavy fuel oils and distillates, as shown in [Figure 4-53](#), [4-76](#). Thus, the following section considers a fuel oil viscosity of 700 cSt at 50 °C.

In cases where only distillate fuels are considered, the system can be simplified (as explained in section [4.7.2 Fuel oil system with only MDO/MGO or MGO](#), [4-88](#)), however, the reduction in fuel oil viscosity must be considered.

1) HFO can have maximum 0.5% m/m sulphur content.

Feed pump: Low-pressure fuel oil

Type	Positive displacement screw pump with built-in safety valve
Capacity	According to GTD : The capacity must be within a tolerance of 0% to +20% of the GTD value, plus back-flushing flow of automatic self-cleaning filter, if such filter is installed.
Delivery pressure	The feed pump must provide a required pressure in the downstream mixing unit to prevent water in the system from vaporising into steam. The pump, whilst considering system pressure drop, must provide a minimum of 1 bar above the water vapour pressure and always be above a 3 bar value. The water vapour pressure is a result of the system temperature and pressure for a given fuel type. Heavier oils need more heat and higher temperatures to maintain them at the correct viscosity compared to lighter oils. Refer to the formula and example below.
Electric motor	The electric motor driving the fuel oil feed pump must be sized for maximum pressure head (difference between inlet and outlet pressure), maximum fuel oil viscosity (100 cSt) and maximum required flow.
Working temperature	Below 100 °C
Fuel oil viscosity	Depending on heat control of the fuel oil system, viscosity at working temperature will often differ. It will not be more than 100 cSt, however, can be considerably less (as low as 2 cSt with lower viscosity fuel like MDO/MGO or possibly HFO ^{a)} , see viscosity-temperature diagram – Figure 4-60 , ▮ 4-92). The manufacturer's specification must comply with the fuel viscosity range. For further information on system options with additional temperature regulation, please refer to Fuels .

a) HFO can have maximum 0.5% m/m sulphur content.

Formula for delivery gauge pressure

$$p_v + 1 + Dp_1 + Dp_2 \text{ [bar]}$$

where:

p_v = water vapour gauge pressure at the required system temperature [bar] (see viscosity-temperature diagram in section [4.7.7 Fuel oil viscosity-temperature dependency](#), [▮ 4-92](#))

Dp_1 = max. pressure losses between feed pumps and mixing unit [bar]

Dp_2 = max. pressure change difference across the pressure regulating valve of the feed system between min. and max. flow (see [Pressure regulating valve](#), [▮ 4-78](#)).

Example

HFO of 700 cSt at 50 °C, required system temperature 145 °C:

p_v = 3.2 bar

Dp_1 = 0.5 bar

Dp_2 = 0.6 bar

Delivery gauge pressure = 3.2 + 1 + 0.5 + 0.6 = 5.3 bar

Pressure regulating valve

The pressure regulating valve returns the excess fuel oil that is not required by the main engine, recirculating more when the engine is at lower power. To avoid heating-up of the fuel by recirculation, the return pipe is designed with cooling ribs.

It also works to ensure that the pressure downstream of the low-pressure feed pump remains 1 bar above the evaporation pressure of the water and there prevents entrained water within the fuel oil system from flashing off into steam.

The pressure regulating valve must have a flat steady-state characteristic across the fuel oil recirculation flow range.

Type	Self-operated or pilot-operated, with a manual emergency control. Either direct hydraulically or pneumatically actuated. However, when using a pneumatically actuated valve, use a combined spring type to close the valve in case of air supply failure.
Maximum capacity	According to GTD : Refer to feed pump capacity
Minimum capacity	Approx. 20% of that of the fuel oil feed pump
Service pressure	Max. 10 bar
Pressure setting range	2–6 bar
Inlet pressure change	The inlet pressure can vary by up to 0.8 bar depending on the flow in the range of 20% to 100%.
Working temperature	Below 100 °C
Fuel oil viscosity	Depending on heat control of the fuel oil system, viscosity at working temperature will often differ. It will not be more than 100 cSt, however, can be considerably less (as low as 2 cSt with lower viscosity fuel like MDO/MGO or possibly HFO ^{a)} , see viscosity-temperature diagram – Figure 4-60 , 4-92). The manufacturer's specification must comply with the fuel viscosity range. For further information on system options with additional temperature regulation, please refer to Fuels .

a) HFO can have maximum 0.5% m/m sulphur content.

Mixing unit

The mixing unit equalises the temperature between the hotter fuel oil returning from the engine and the colder fuel oil from the service tank. The temperature difference between these sources is particularly high when changing over from HFO¹⁾ to MDO/MGO and vice versa.


Due to the small amount of fuel consumed, especially in part-load operation, only a small mixing unit is required. It is recommended that the tank contains not more than approximately 100 litres. It is important to avoid the changeover from HFO¹⁾ to MDO/MGO or vice versa taking too long.



For further information on changing over between heavy fuel oil and marine diesel oil (MDO/MGO) and vice versa, as well as for operation on distillate fuel, please refer to the document “Fuels” available on WinGD web page: [Fuels](#).

1) HFO can have maximum 0.5% m/m sulphur content.

Type	Cylindrical steel fabricated pressure vessel as shown in Figure 4-54 , 4-79
Capacity	Refer to GTD
Dimensions	Refer to MIDS
Service pressure	10 bar
Test pressure	According to classification society
Working temperature	Up to 150 °C

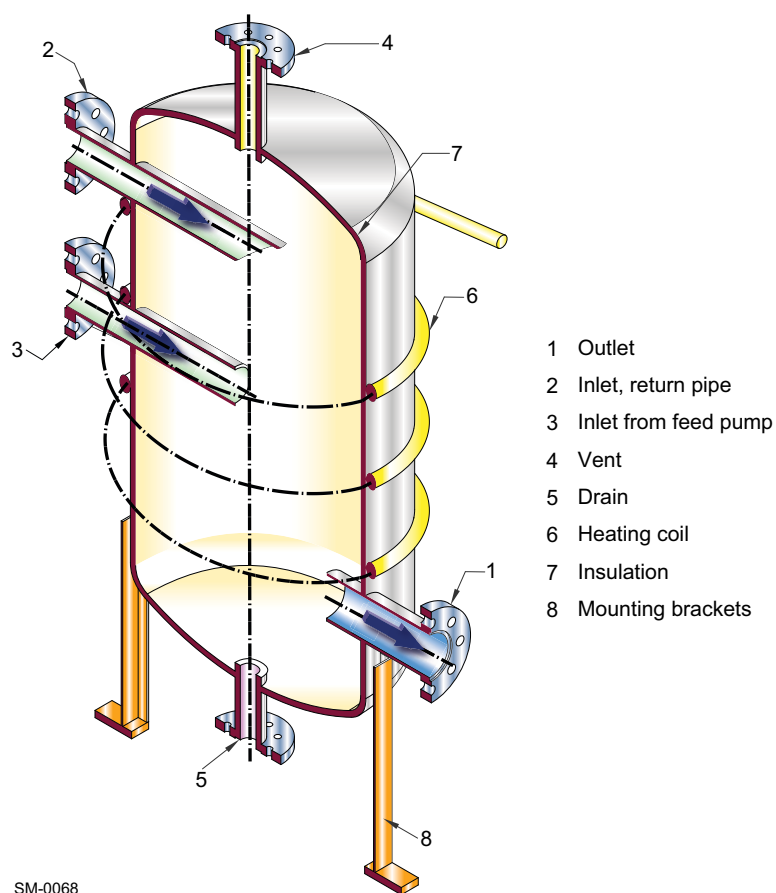

SM-0068

Figure 4-54 Mixing unit

Booster pump: High-pressure fuel oil

The fuel oil booster pump delivers the fuel to the engine via a fuel oil end-heater for HFO¹⁾ operation.

Type	Positive displacement screw pump with built-in safety valve
Capacity	According to <i>GTD</i> : The flow rate must be within a tolerance of 0% to + 20% of the GTD value, plus back-flushing flow of automatic self-cleaning filter, if such filter is installed.
Inlet pressure	Up to 6 bar
Delivery head	Final delivery pressure according to actual piping layout. Refer to <i>GTD</i> .
Electric motor	The electric motor driving the HP booster pump must be sized large enough for the power absorbed by the pump at maximum pressure head (difference between inlet and outlet pressure), maximum fuel oil viscosity (70 cSt) and the required flow.
Working temperature	Up to 150 °C

End-heater

Operation is regulated with either the temperature or the viscosity (default mode) of the fuel oil. The viscosity is measured by the viscometer.

Type	Tubular or plate type heat exchanger, suitable for heavy oils up to 700 cSt at 50 °C (or as project defines)
Heating source	Steam, electricity or thermal oil
Consumption of saturated steam	At 7 bar gauge pressure [kg/h]: $1.32 \cdot 10^{-6} \cdot CMCR \cdot BSFC \cdot (T_1 - T_2)$ where: $BSFC$ = Brake Specific Fuel Consumption at Contracted Maximum Continuous Rating ($CMCR$) T_1 = temperature of fuel oil at viscometer ^{a)} T_2 = temperature of fuel oil from service tank
Heating capacity [kW]	$0.75 \cdot 10^{-6} \cdot CMCR \cdot BSFC \cdot (T_1 - T_2)$
Working pressure	Max. 12 bar, pulsating on fuel oil side
Working temperature	Up to 150 °C, outlet temperature on fuel oil side

a) The viscosity is maintained by regulating the fuel temperature after the end-heater.

1) HFO can have maximum 0.5% m/m sulphur content.

Viscometer


The viscometer regulates the fuel oil end-heater, enabling the fuel oil viscosity to be kept at preferable engine conditions. For HFO¹⁾ the ideal range is from 13 cSt to 17 cSt. The range between 10–20 cSt is acceptable. Although there is no active cooling required to keep the minimum limit of 10 cSt, the absolute minimum viscosity is 2 cSt. When low-viscosity fuels are used, the end-heater must not be active, and the MDO/MGO heat exchangers are required to maintain these limits.

MDO/MGO heat exchanger

For MDO/MGO operation, the fuel might need to be cooled to stay above a minimum viscosity of 2 cSt at engine inlet. This fuel oil heat exchanger (and any optional heat exchanger that is included, as shown in the document [Fuels](#)) uses LT cooling water.

A chiller unit (cooling from refrigeration) is not required if the fuel properties are in line with the latest ISO 8217:2017 specification. Such a unit is only needed for off-spec fuels that are not supported by WinGD.

Type	Tubular or plate type heat exchanger, suitable for diesel oils
Cooling medium	LT cooling water Alternatively: glycol-water mixture delivered from chiller unit
Cooling capacity [kW]	$Q = \frac{0.34 \cdot BSFC \cdot P \cdot (T_1 - T_2 + 25.65)}{10^6}$ where: Q [kW] = cooler heat dissipation at 100% engine load $BSFC$ [g/kWh] = specific fuel consumption at design conditions and 100% engine load P [kW] = engine power at 100% CMCR T_1 [°C] = temperature of distillate fuel supplied to engine T_2 [°C] = temperature of distillate fuel required at engine inlet
Working pressure	Max. 12 bar, pulsating on fuel oil side

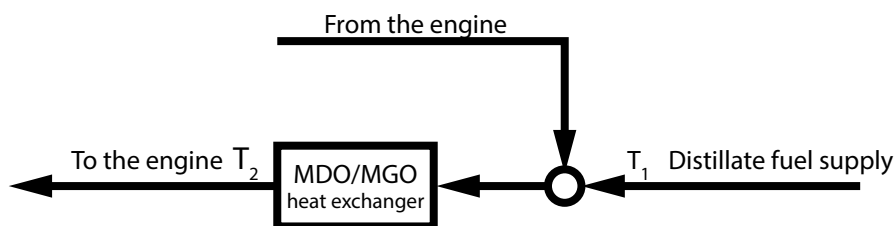

SM-0187


Figure 4-55 MDO/MGO heat exchanger

1) HFO can have maximum 0.5% m/m sulphur content.

*Fuel oil filters: Arrangement 'A'***Filtration grading**

The grade of filter mesh is relative to the size of particles it captures, however, there are different ratings for filtration efficiencies and the rating parameters vary among manufacturers.

For simplicity, it is assumed that particles are spherical, thus, the size is defined by an equivalent diameter. A filter grading size is associated with this equivalent diameter but can vary depending on whether an absolute or nominal grading system is used.

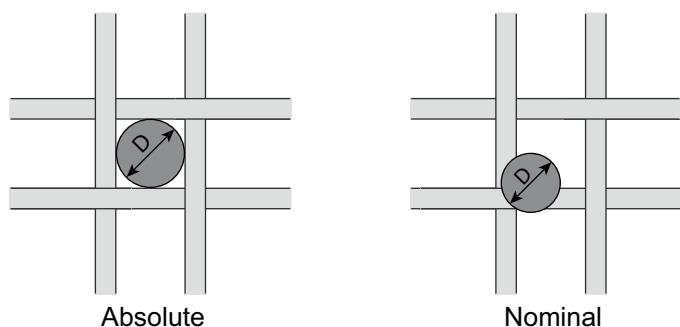

SM-0528

Figure 4-56 Mesh size difference between absolute and nominal**Absolute filtration grade**

This value indicates the largest equivalent diameter capable of passing through the filter. This value equals the size of the mesh coarseness and, thus, can be referred to as the absolute sphere passing mesh size. Approximately all particles larger than the specified size are trapped on or within the filter.

Nominal filtration grade

This value is typically smaller than the absolute value and refers to an equivalent diameter where most particles are trapped. Generally, this is interpreted as a 85% to 90% filtration for particles larger than the nominal value but this can range (from 60% to 90% approximately). As this variation can cause complications, the nominal grade for filtration is not used in this document.

NOTE

WinGD provides all filter mesh sizes in absolute (abs.) values.

Arrangement 'A' of fuel oil filters (see Figure 4-57, 4-83) comprises:

- automatic self-cleaning filter of maximum 10 μm abs., installed either in the 'cold' feed system (see Option 1: Filter installation in feed system, 4-84) or in the 'hot' booster system close to engine inlet (see Option 2: Filter installation in booster circuit, 4-85)
- duplex filter of recommended maximum 25 μm abs., installed downstream of the engine inlet booster system (see Duplex filter, 4-86).

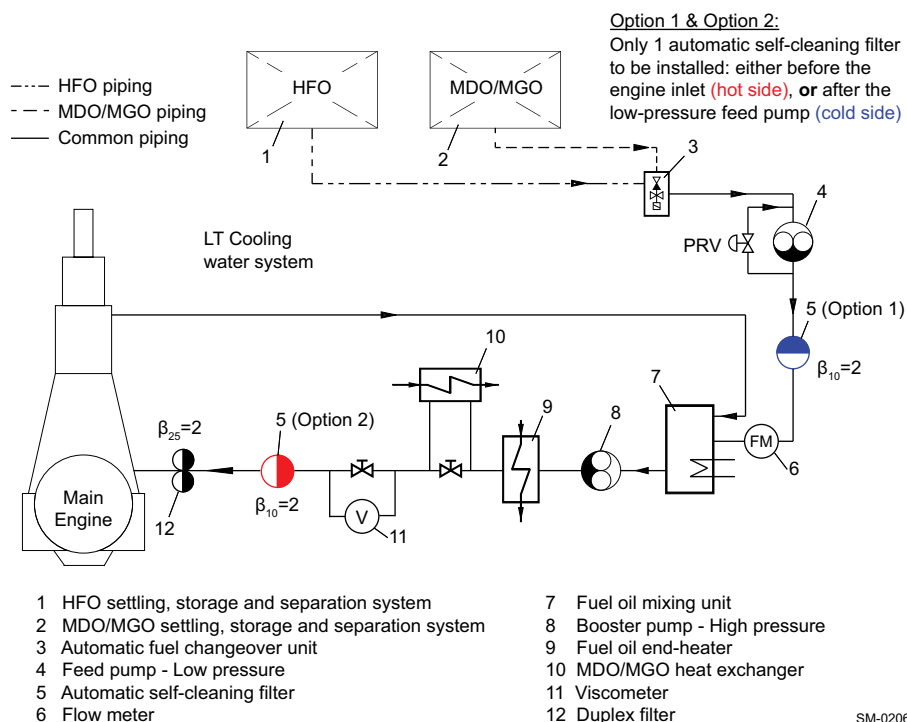


Figure 4-57 Fuel oil filter arrangement 'A'

The automatic self-cleaning filter of maximum 10 μm abs. is used to protect the engine against serious damage. It captures the catalytic fines which were not removed by the fuel oil separator. In addition, the filter provides a good indication of the separator efficiency.

NOTE

The self-cleaning performance must be suitable for the required filter fineness.

The 10 µm abs. filter can be installed in two different locations:

Option 1: Filter installation in feed system

In this position the maximum 10 µm abs. filter can be designed for a lower flow rate compared to the installation in the booster system. However, higher resistance due to higher fuel viscosity needs to be considered.

Advantage and disadvantage of this filter position:

Advantage	Booster pump is protected against abrasive catfines
Disadvantage	Engine is not optimally protected against booster pump wear particles

Table 4-11 Specification of automatic self-cleaning filter in feed system

Working viscosity	100 cSt, for HFO ^{a)} of 700 cSt at 50 °C
Flow rate	According to GTD . The capacities cover the needs of the engine only. The feed pump capacity must be increased by the quantity needed for back-flushing of the filter.
Service pressure after feed pumps	10 bar at filter inlet
Test pressure	Specified by classification society
Permitted differential pressure at 100 cSt	– clean filter: max. 0.2 bar – dirty filter: max. 0.6 bar – alarm setting: max. 0.8 bar Note: Real operational settings can be less according to filter maker's recommendation.
Minimum bursting pressure of filter insert	Max. 3 bar differential across filter
Mesh size	Max. 10 µm abs.
Mesh size bypass filter	Max. 25 µm abs.
Filter insert material	Stainless steel mesh (CrNiMo)

a) HFO can have maximum 0.5% m/m sulphur content.

Option 2: Filter installation in booster circuit

The maximum 10 µm abs. filter is installed in the booster circuit close to engine inlet. The filter needs to be laid out for a maximum working temperature of 150°C.

Advantage and disadvantage of this filter position:

Advantage	Optimum engine protection from fuel oil catfines and other abrasive particles from system wear
Disadvantage	Booster pump is not ideally protected against catfines

Table 4-12 Specification of automatic self-cleaning filter in booster system

Working viscosity	10–20 cSt required for HFO ^{a)} (13–17 cSt recommended)
Flow rate	According to <i>GTD</i> . The capacities cover the needs of the engine only. If a filter of automatic back-flushing type is installed, the feed and booster pump capacities must be increased by the quantity needed for back-flushing of the filter.
Service pressure	Max. 12 bar at filter inlet
Test pressure	Specified by classification society
Permitted differential pressure at 17 cSt and 20 cSt	– clean filter: max. 0.2 bar – dirty filter: max. 0.6 bar – alarm setting: max. 0.8 bar Note: Real operational settings can be less according to filter maker's recommendation.
Minimum bursting pressure of filter insert	Max. 3 bar differential across filter
Mesh size	Max. 10 µm abs.
Mesh size bypass filter	Max. 25 µm abs.
Filter insert material	Stainless steel mesh (CrNiMo)
Working temperature	Up to 150°C

a) HFO can have maximum 0.5% m/m sulphur content.

Duplex filter

The second filter in Arrangement 'A' is a duplex filter of recommended maximum 25 µm abs. A coarser filter is also acceptable. The duplex filter is of manual cleaning type and is installed in the booster system close to engine inlet. This filter type is sufficient as most particles are already removed by the 10 µm filter, as outlined in [Option 1: Filter installation in feed system](#), 4-84 and [Option 2: Filter installation in booster circuit](#), 4-85.

Table 4-13 Specification of duplex filter in booster system

Working viscosity	10–20 cSt required for HFO ^{a)} (13–17 cSt recommended)
Flow rate	According to GTD . The capacities cover the needs of the engine only. If a filter of automatic back-flushing type is installed, the feed and booster pump capacities must be increased by the quantity needed for back-flushing of the filter.
Service pressure	Max. 12 bar at filter inlet
Test pressure	Specified by classification society
Permitted differential pressure at 17 cSt and 20 cSt	– clean filter: max. 0.2 bar – dirty filter: max. 0.6 bar – alarm setting: max. 0.8 bar Note: Real operational settings can be less according to filter maker's recommendation.
Minimum bursting pressure of filter insert	Max. 3 bar differential across filter
Mesh size	Max. 25 µm abs.
Filter insert material	Stainless steel mesh (CrNiMo)
Working temperature	Up to 150 °C

a) HFO can have maximum 0.5% m/m sulphur content.


Fuel oil filter: Arrangement 'B'

A maximum 10 µm abs. filter of automatic self-cleaning type is installed in the 'hot' booster system close to engine inlet. The filter needs to be laid out for a maximum working temperature of 150°C.

NOTE

The self-cleaning performance must be suitable for the required filter fineness.

Same filter specification as shown in Table 4-12, 4-85 is applied.

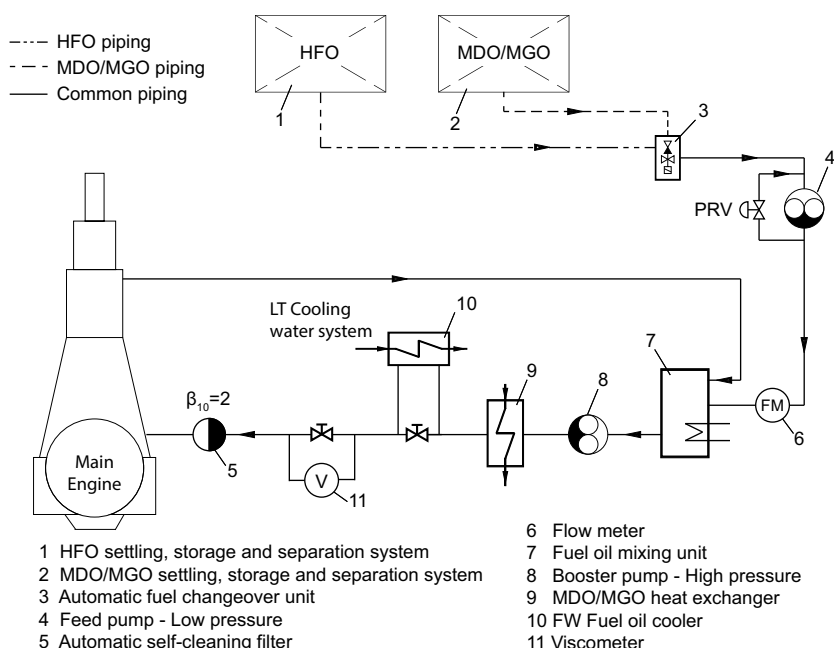

SM-0214

Figure 4-58 Fuel oil filter arrangement 'B'

Arrangement 'B' does not include secondary duplex filtration. It lacks the indication of overall performance of the fuel oil treatment system and gives no indication when the automatic self-cleaning filter fails.

NOTE

WinGD recommends Arrangement 'A' because it is a best practice solution.

4.7.2 Fuel oil system with only MDO/MGO or MGO

If the main engine is designed for only MDO/MGO or MGO fuel oil, the system may be simplified in comparison to the conventional system specified in section 4.7.1 Fuel oil system components, 4-76.

The changes are as follows:

- The fuel oil mixing unit is omitted.
- The fuel oil end-heater is omitted, along with the associated viscometer and control logic.
- The simplified fuel oil filter arrangement like that in arrangement 'B' is applied.

Additional optional changes:

- The feed pump and booster pump can be replaced with a single delivery pump. If this option is selected, the pump must be located in the recirculation piping and must not be too high relative to the fuel oil tanks (see (d)H in Figure 4-59, 4-88). This must be in accordance with the manufacturer's specification.

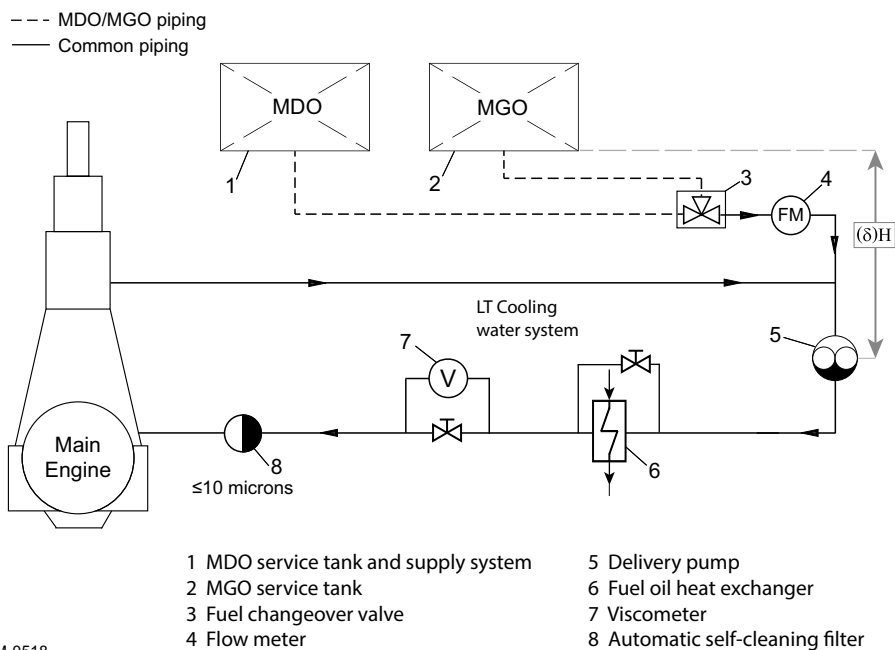


Figure 4-59 Fuel oil system — Arrangement with only MDO/MGO or MGO

Fuel oil feed pump

To correctly deliver the fuel oil to the engine, the fuel oil service tank arrangement must provide the required inlet pressure for the fuel oil feed pump, as defined by the supplier.

Type	Positive displacement screw pump with built-in safety valve
Capacity	According to GTD , with a tolerance of 0% to +20% of the GTD value
Inlet pressure	As defined by the supplier
Delivery head	Ensure an engine inlet pressure of 10 bar(g) at main engine stop condition, with consideration of pressure loss over piping and static height; refer to GTD .
Working temperature	Up to 60 °C

Fuel oil heat exchanger

The standard proposal for MDO and MGO (compliant to ISO 8217:2017) is a heat exchanger without temperature or flow control. The viscosity of the MDO and MGO is kept within the acceptable range for engine operation if the fuels are cooled by freshwater from the central cooling system (with temperatures between 25°C and 36°C). A chiller unit (cooling from refrigeration) can be needed for off-spec fuels that are not supported by WinGD.

Fuel oil filter

An automatic self-cleaning filter with a maximum of 10 µm mesh size must be installed close to engine inlet, as shown in [Figure 4-59](#), [4-88](#). The working temperature is up to 60 °C.

4.7.3 Flushing the fuel oil system

For further information on flushing of the fuel oil system, please refer to the latest version of the relevant instruction (“DG 9723 Fuel Oil System”) available on WinGD web page: [Instruction for flushing – Fuel oil system](#).

4.7.4 Fuel oil treatment

The latest version of the document “Fuel” is available on WinGD web page: [Fuel](#).

Settling tanks

Gravitational settling of water and sediment from modern heavy fuel oils is an extremely slow process due to small difference in densities. The time required for settling depends on the tank depth, as well as on the viscosity, temperature and density difference. Tanks that are shallower with a wider diameter enable better separation than thinner taller tanks.

Further design features consider a level monitoring device and remote closing discharge valves to the separator(s) and engine systems, a connection to an overflow tank, and a self-closing cock just above the bottom of the tank to remove sludge and water.

Service tanks

Most of the service tank design features are similar to the settling tanks, however, there is no direct connection to the overflow tank. Instead a recirculating line, with an inlet just above the bottom of the service tank, leads back to the settling tanks.

Diesel oil service tanks are similar to heavy oil service tanks, with the possible exception of tank heating, although this can be incorporated for vessels constantly trading in cold climates.

Water in fuel

Due to condensation or heating coil leakage, water can be present in the fuel after the separators. This can be manually removed by a self-closing cock. In addition, the recirculation connection close to the bottom of the tank ensures that contaminated fuel is recirculated to the settling tank.

Cleaning of fuel

The fuel is cleaned from the settling tank to the service tank. Ideally, when the main engine is operating at CMC_R, the fuel oil separator(s) is able to maintain a continual overflow from the service tank to the settling tank. The cock, used to remove sludge and water, must be operated at regular intervals to observe the presence of water, a significant indication for the condition of the separator(s) and heating coils.

Centrifugal fuel oil separators

There are two types of oil separators:

- Type 1: Separators with gravity discs
- Type 2: Separators without gravity discs.

NOTE

Separators with gravity discs are an outdated technology and, thus, are not supported by WinGD.

Separators without gravity discs

These separators are self-adjusting to the fuel properties. They are self-cleaning. Separators without gravity discs operate as combined purifiers-clarifiers, thus, water and sediment separation is integrated in one unit. The manufacturers claim extended periods between overhaul. Compared to the outdated separators with gravity discs, the reliability is greatly improved, enabling unattended on-board operation. As it is usual to install a standby separator as a back-up, it is of advantage to use both units in parallel to improve the separation result. For further details and information on the separators, please refer to the manufacturer's instructions.

Separation efficiency

The separation efficiency is a measure of the separator capability to remove specified test particles. The separation efficiency is defined as follows:

$$n = 100 \cdot \left(1 - \frac{C_{out}}{C_{in}} \right)$$

where:

n = separation efficiency [%]

C_{out} = number of test particles in cleaned test oil

C_{in} = number of test particles in test oil before separator.

Certified Flow Rate	To express the performance of separators according to a common standard, the term Certified Flow Rate (CFR) is used and defined as the flow rate in litres/hour, 30 minutes after sludge discharge, at which the separation efficiency is 85% when using defined test oils and test particles. CFR is defined for equivalent fuel oil viscosities of 380 cSt and 700 cSt at 50°C. More information can be found in the CEN document CWA 15375:2005 (E) of the European Committee for Standardization.
Throughput capacity	The required minimum effective throughput capacity (litres/hour) of the separators is determined by the formula $1.2 \cdot CMCR \cdot BSFC \cdot 10^{-3}$ [litres/hour], as shown in the example below. The project-specific BSFC value at 100% CMCR power output must be taken from the <i>GTD</i> . The nominal separator capacity and the installation must comply with the separator manufacturer's recommendations.
Example	The MDO separator capacity can be estimated using the same formula. • 8-cyl. engine • CMCR(R1 selected): 11,920 kW • BSFC: 181.4 g/kWh • Throughput: $1.2 \cdot 11,920 \cdot 181.4 \cdot 10^{-3} = 2,595$ litres/hour
Fuel oil samples	To ensure that representative samples of fuel oil can be taken, dedicated sampling points (cocks) are provided on the engine side. Such cocks need also to be installed on the system side, according to the relevant system proposal drawing in <i>MIDS</i> .

4.7.5 Pressurised fuel oil system

The fuel is supplied from the heated heavy fuel oil service tank or the unheated diesel oil service tank to the low-pressure feed system.

Fuel changeover	For changeover from one fuel type to the other it was common to have a simple, manually operated three-way valve. This arrangement is not recommended any longer, as with the introduction of different Emission Control Areas (ECA), fuel changeover is quite frequently required, even at high engine load. In the past it was needed in rare cases only, e.g. due to maintenance or before stopping the engine, i.e. at relatively low loads.
Automatic changeover unit	A well proven automatic changeover unit is nowadays recommended. It must ensure: • maximum temperature gradient of 2 K/min during changeover • maximum viscosity of 20 cSt • minimum viscosity of 2 cSt; this minimum limit is most challenging during changeover from HFO¹⁾ to distillate fuel. Attention: Not all changeover units guarantee keeping the minimum viscosity limit, as viscosity is not controlled. • best-practice automatic control of diesel oil cooler activation.

1) HFO can have maximum 0.5% m/m sulphur content.

4.7.6 Fuel oil specification



The validated fuel oil qualities are available in the document “Fuels” on WinGD web page: [Fuels](#).

4.7.7 Fuel oil viscosity-temperature dependency

The fuel oil viscosity depends on its temperature. This dependency is shown in Figure 4-60, 4-92.

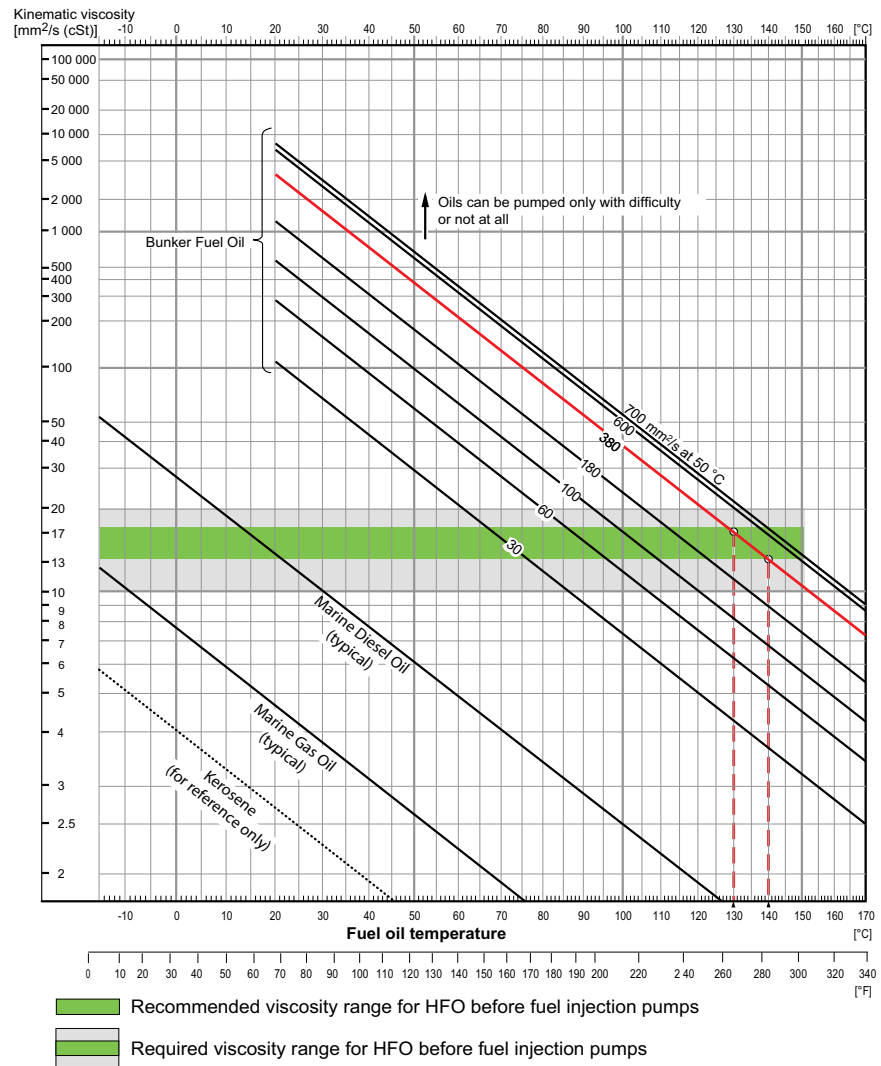


Figure 4-60 Fuel oil viscosity-temperature diagram


4.8 Air supply system



The latest version of the MIDS “DG 9725 Air Supply System” is available on WinGD web page: [MIDS](#).

Compressed air is required for engine starting and control, exhaust valve air springs, washing plant for SAC(s) and general services.

The starting and control air system shown in [Figure 4-61](#), [4-93](#) comprises two air compressors, two air receivers, and systems of pipework and valves connected to the engine starting air manifold.

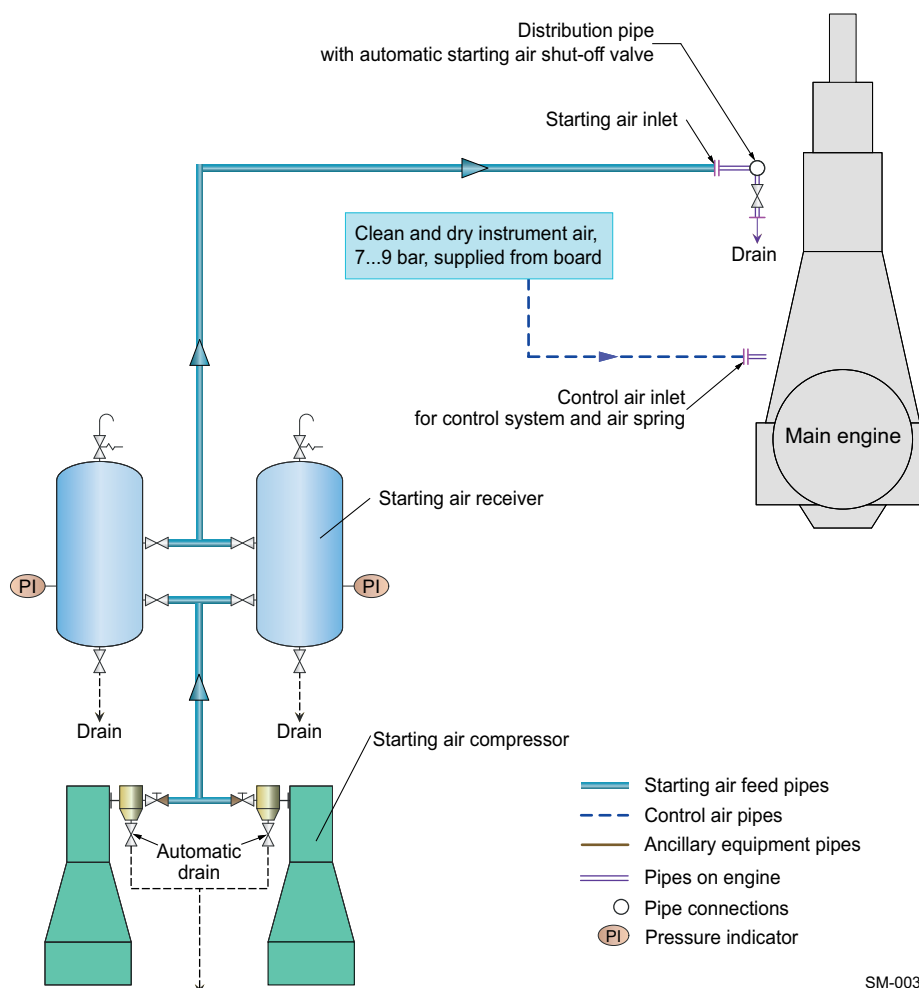

SM-0034

Figure 4-61 Air supply system

4.8.1 Capacities of air compressor and receiver

The capacity of the air compressor and receiver depends on the total inertia (J_{tot}) of the propulsion system rotating parts.

- Total inertia = engine inertia + shafting and propeller inertia¹⁾:

$$J_{tot} = J_{eng} + J_{S+P}$$

- Engine inertia (J_{eng}): refer to *GTD*²⁾

- Relative inertia:

$$J_{rel} = \frac{J_{tot}}{J_{eng}}$$

4.8.2 System specification

Starting air compressors

Capacity	Refer to <i>GTD</i>
Delivery gauge pressure	25 bar or 30 bar

The discharge air temperature must not exceed 90°C. Air supply to the compressors must be as clean as possible without oil vapour.

Starting air receivers

Type	Fabricated steel pressure vessels with domed ends and integrated pipe fittings for isolating valves, automatic drain valves, pressure reading instruments and safety valves
Capacity	Refer to <i>GTD</i>
Working gauge pressure	25 bar or 30 bar

1) Propeller inertia includes the part of entrained water.

2) *GTD* enables the capacities of compressors and air receivers to be optimised for the inertia of the engine and shaft line.

4.8.3 Control air

Control air supply system

Control air is supplied from the board instrument air supply system (see [Figure 4-61](#), [Figure 4-93](#)) providing air at 8 bar gauge pressure (within a range of 7.0–9.0 bar). The air quality must comply with the compressed air purity class **5-4-3** according to ISO 8573-1 (2010-04-15).

Control air consumption

The required control air flow capacities are shown in [Table 4-14](#), [Figure 4-95](#). These data can be used for sizing the relevant engine external piping and facilities.

Table 4-14 Control air flow capacities

No. of cyl.	Control air flow capacity [Nm ³ /h]
5	12.0
6	14.4
7	16.8
8	19.2

4.8.4 Service and working air

Service and working air provided by the board instrument air supply system is used for:

- driving air powered tools
- assisting in cleaning the SAC(s)
- actuating valves in case of iCER off-engine.

4.9 Leakage collection system and washing devices



The latest version of the MIDS “DG 9724 Leakage Collection/Washing System” is available on WinGD web page: [MIDS](#).

4.9.1 Sludge oil trap

General description

A sludge oil trap is used to collect cylinder oil residue, product of combustion, and leaky system oil from the gland box. When the main engine is running, oil residue in the piston underside is collected from the cylinder lubrication as it is scraped down from the cylinder liners. This oil is removed through the drains of each piston underside unit area and collected into the designated sludge oil trap. The sludge oil trap is connected with the scavenge air receiver, thus, the sludge oil trap is classified as a pressure tank, and in principle it requires approval and certification by the classification society. On the main engine side, the maximum scavenge air pressure in the scavenge air receiver is approximately 3.5–4.0 bar(g). Thus, the tank pressure must be designed and produced accordingly.

Installation requirements

It is recommended to install the sludge oil trap as close as possible to the main engine. The drain pipe must have a minimum slope of 15° because the sludge tends to stick which can cause a blocking of the drain pipe. It is recommended to install heat tracing and insulation around the drain pipe to keep the sludge in a liquid state. A heating coil must also be installed in the sludge oil trap. The heating system in the sludge oil trap must be designed to keep the sludge at approximate range of 50°C–60°C. The sludge oil trap design must follow the fire extinguishing requirements in case of fire in the scavenge air receiver. For these reasons, a manual Shut-Off Valve (SOV) must be installed between the piston underside drain and the sludge oil trap.

Constantly-drained sludge oil trap with separate sludge accumulation

The main function of this system is to reduce the pressure of the sludge emulsion from scavenge air pressure to just above atmospheric pressure, as well as to separate the solids from the liquids in the sludge emulsion.

Pressure reduction prevents the sludge oil tank from becoming pressurised. This is accomplished by the orifice being fitted onto the drain outlet pipe. To ensure a continuous drain flow, some scavenge air flows to the sludge oil trap. The scavenge air is mainly released on the top of the sludge oil trap by passing through an orifice to the venting pipe. At the same time, an additional small amount is directed by an overflow pipe and through another orifice to the sludge oil tank. This continuous drain flow ensures that the drain pipe does not block and it results in a scavenge air loss. The scavenge air loss is especially advantageous compared to other possible solutions that are described and does not have any negative impact on the engine performance.

Separating the solids from the liquids significantly reduces the risk of solid particles blocking the orifice. The sludge oil trap collects the solids from the bottom of the piston underside area. These solids settle at the bottom of the sludge oil trap. At the same time, the liquid part is drained by an overflow pipe (which is equipped with an orifice) to the sludge oil tank. As the solids are separated and the overflow pipe is located at the upper part of the sludge oil trap, the risk of blocking the orifice by solid particles is significantly reduced. A sufficiently large opening near the bottom of the sludge oil trap is necessary to enable removal of settled sticky thick sediment. This sediment usually has a consistency closer to that of tar than of oil. Near the bottom of the sludge oil trap, a large manhole cover is located and positioned at the side of the sludge oil trap to enable removal of the sediment. A test valve with a funnel is also provided to check whether the dirty oil freely flows from the engine to the sludge oil trap and to make sure that the sludge oil trap does not become completely filled.

A design proposal for the WinGD sludge oil trap is shown in [Figure 4-62](#), [4-98](#). The specific design dimensions for the sludge oil trap are provided in the sludge oil trap drawings contained in [MIDS](#) relevant for the leakage collection and washing system.

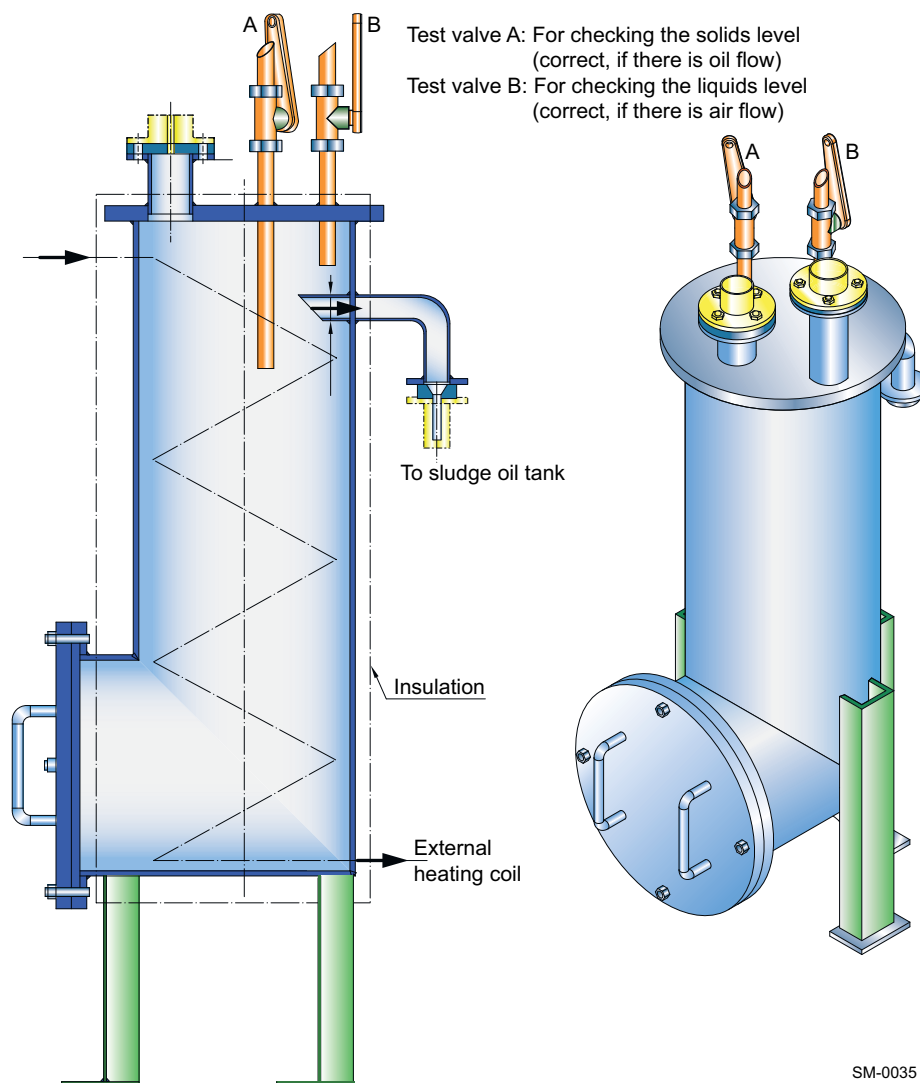


Figure 4-62 Design proposal of the WinGD sludge oil trap

Operation of the sludge oil trap

To monitor operation of the sludge oil trap, WinGD recommends to check the solids level in the sludge oil trap. The solids level can be assessed by opening the 'Test valve A' (see Figure 4-62, 4-98). There must be an oil flow, because otherwise the dirt will accumulate above the maximum level. If there is no oil flow, then immediate sludge removal is required. The liquids level can be checked by opening the 'Test valve B' (see Figure 4-62, 4-98). There must be an air flow, as this indicates that the oil drain works properly. If instead there is an oil flow, this indicates that the orifice of the overflow pipe is blocked and requires manual cleaning.

For manual sludge removal, partially unscrew and lift the cover to first drain the liquid to a tray, and then fully open the cover and manually remove the sludge.

4.9.2 Draining of exhaust uptakes

Engine exhaust uptakes can be drained automatically using a system, as shown in Figure 4-63, 4-99.

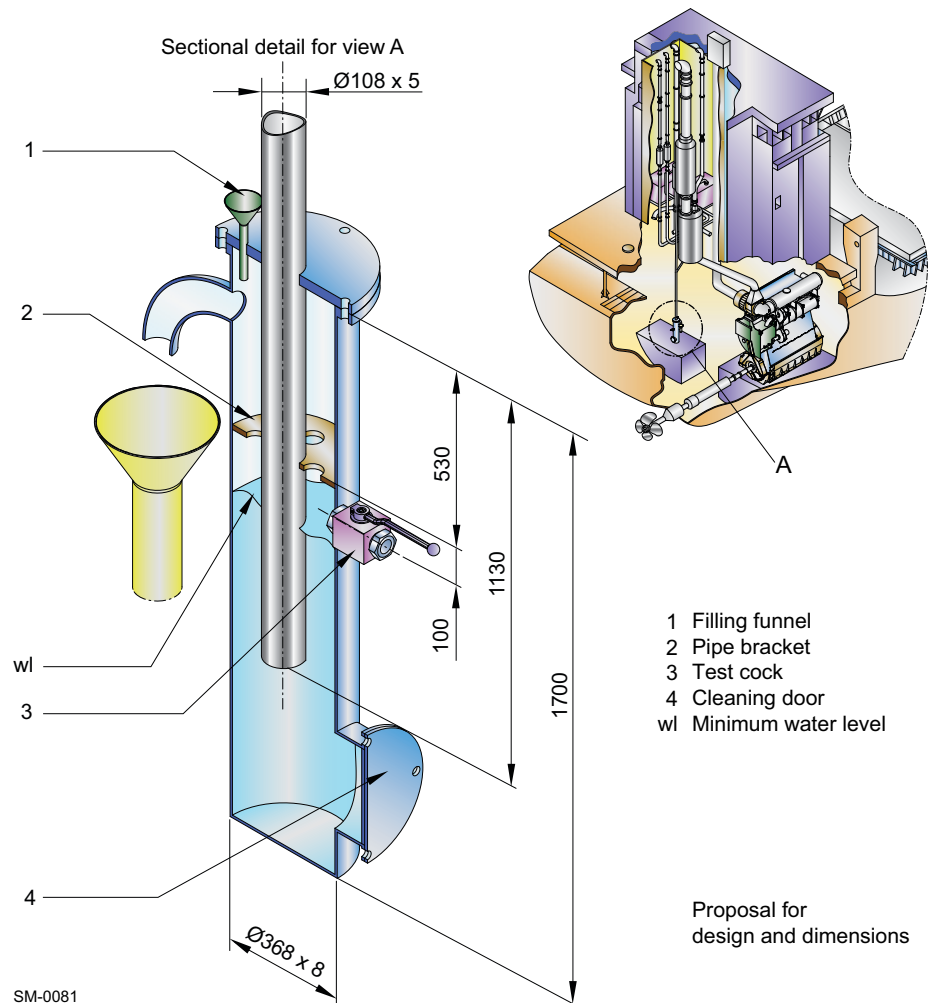


Figure 4-63 Arrangement of automatic water drain

4.9.3 Air vents

The air vent pipes of the ancillary systems must be fully functional at all inclination angles of the ship at which the engine must be operational. This is normally achieved if the vent pipes have an uninterrupted inclination of min. 5°. Such arrangement enables the vapour to separate into its air and fluid components, discharging the air to atmosphere and returning the fluid to its source.

4.9.4 iCER drainage system

The iCER drainage system, including the iCER sludge handling, is part of the iCER system. For further information, see section 4.2.3 The iCER drainage system, 4-9.

4.9.5 SAC washing system

During engine operation, SAC tubes can become fouled with oil, grease, salts, dust and other airborne contaminants. Especially during iCER operation, recirculating exhaust gas is a significant source of contamination. To address this, the X-DF2.0 engines are equipped with an SAC wetting system (see 4.2.4 The SAC wetting system, 4-13). Although this system prevents severe accumulation, an SAC washing system can perform more thorough cleaning at the discretion of the operator.

Offline SAC washing system (external system)

Functional description

The external SAC washing system washes the SAC while the engine is at standstill.

As shown in Figure 4-64, 4-100, wash water is prepared in the chemical washing tank by mixing the chemical agent with freshwater in this tank. The filling amount depends on the type of SAC(s) installed. For the capacity selection, please refer to the latest version of the MIDS.

Wash water is heated to between 50°C and 60°C by a heating coil in the chemical washing tank. A circulation pump delivers the wash water to the spray nozzles located above the SAC. Washing can proceed over several hours, depending on the level of dirt accumulated. The used wash water returns through a strainer to the chemical washing tank.

When cleaning is finished, the wash water must be drained to a dedicated wash water storage tank for on-shore discharge.

The washing procedure must be followed by flushing with freshwater at 50°C–60°C to flush the SAC of washing agent residues. A flushing time of 30–60 minutes is recommended. Finally, the flushing water must also be drained to the dedicated wash water storage tank.

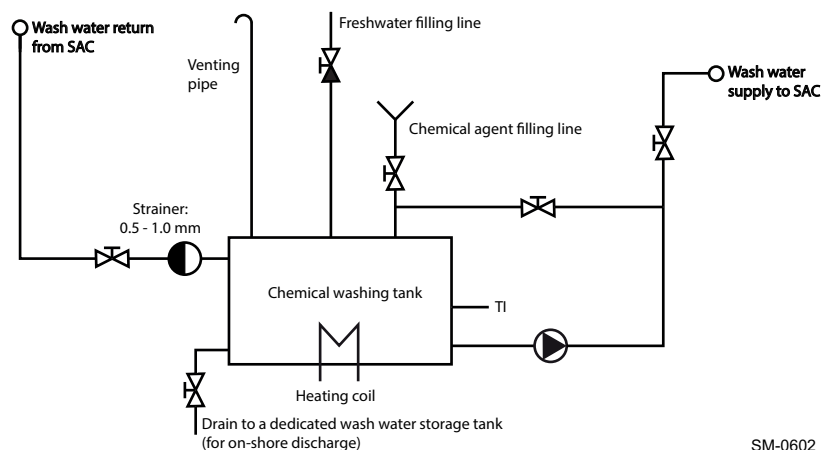


Figure 4-64 Offline SAC washing system (external system)

NOTE

Offline washing must only be performed when the engine is at standstill and secured against starting. The recommended wash time and solution concentration is defined by the washing agent supplier.

4.10 Exhaust gas system



Back pressure

The MIDS “DG 9726 Exhaust System” is available on WinGD web page: [MIDS](#).

The exhaust gas back pressure must be kept in the range as defined in the [MIDS](#) (“DG 9726 Exhaust System”) and as mentioned in section [3.12.3 Ancillary systems design parameters](#), ¶ 3-21. To meet the specified back pressure requirements, the exhaust gas flow velocity must be considered.

Flow velocities

For an optimised exhaust gas system the following velocities are recommended for pipes A, B and C shown in [Figure 4-65](#), ¶ 4-101:


Pipe A = 40 m/s

Pipe B = 25 m/s

Pipe C = 35 m/s



For further information on the pipe diameters, please refer to [GTD](#).

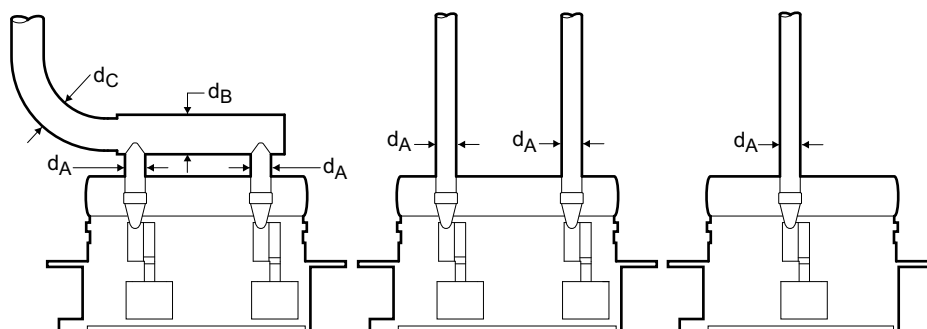

SM-0109

Figure 4-65 Determination of exhaust pipe diameter

4.10.1 The iCER exhaust gas system

The iCER exhaust gas system is part of the iCER system. For further information, see section [4.2.5 The iCER exhaust gas system](#), ¶ 4-14.

4.10.2 Heat recovery (economiser)

A main economiser can be integrated into the exhaust gas system in different ways. An additional economiser can also be installed to recover thermal energy from the hot exhaust gases. The heat recovery system is part of the iCER system. For further information, see section [4.2.6 Heat recovery \(economiser\)](#), ¶ 4-17.

4.11 Engine room ventilation

Proper engine room ventilation is essential to ensure trouble-free operation of all equipment. It is important that the ventilation requirements, ventilation arrangement, air quality and outside ambient air temperature are taken into consideration.

4.11.1 Ventilation requirements

Engine room ventilation must conform to the requirements specified by the legislative council of the vessel's country of registration and the classification society selected by the ship owner.

Calculation methods for combustion air flow requirements and for avoiding excessive heating of the machinery spaces are provided in the international standard ISO 8861 "Shipbuilding – Engine-room ventilation in diesel-engined ships – Design requirements and basis of calculations".

The engine combustion air is considered and typically provided as part of the overall engine room ventilation system. Approximately 50% of the overall engine room ventilation air is for the main engine combustion, while the other half is used for the auxiliary engines, the boilers and to provide sufficient cooling for equipment in the engine room. Thus, it is vitally important that the ventilation system for the engine room has sufficient capacity to supply the necessary air flow for all engine room needs.



The heat emissions, required air flow and estimated power for the layout of engine room ventilation can be obtained from [GTD](#). These values consider the ISO 8861 standard, however, in some circumstances the results are different from the standard calculations. In these cases, WinGD provides the specific engine values and they must be considered before ISO 8861.

It must be noted that the engine requires less combustion air when not running at full load. It provides potential energy savings by reducing the frequency of the ventilation fans when demand is low. This process can be automated, interfacing with the engine, if requested.

4.11.2 Ventilation arrangement

It is important to follow best practice methods of supplying combustion air for the main engine as described in this section. However, the final layout of the engine room ventilation is at the discretion of the shipyard.

Two different ventilation arrangements

Experience shows that the air flow in the engine room, from the ventilation system outlet to the turbocharger inlets, must be as direct as possible. This increases the amount of air directly supplied to the turbocharger, limiting heat transfer to the air flow and, thus, providing the best possible engine performance, especially during tropical conditions.

Alternatively, a ventilation system with a direct air suction layout can be arranged, where the ventilation system connects the outside ambient air directly to the engine.

Two different arrangements are the following:

- **Arrangement 1:** Engine room ventilation system (Figure 4-66, 4-104)
The ventilation system draws air from the outside ambient air into the engine room, where it is sucked into the turbocharger inlet.
- **Arrangement 2:** Direct engine ventilation system (Figure 4-67, 4-105)
The ventilation system outlet is connected to the turbocharger inlet. Thus, the outside ambient air is sucked directly into the turbocharger without passing through the engine room.

NOTE

In both arrangements, the ventilation inlets must be located and designed to ensure that water spray, rain water, dust and exhaust gases cannot enter the system or the engine room.

*Arrangement 1: Engine room ventilation system***Functional principle**

The ventilation system draws air from outside the vessel using ventilation fans at the inlet. Ventilation inlets are typically protected with a weather hood and louvres to minimise the amount of water and other particles entering the system. The air travels to the engine room where it leaves the ventilation outlets and enters the engine.

Layout

The engine room ventilation must be arranged so that the main engine combustion air is delivered directly to the turbocharger inlet, locating the ventilation outlet and turbocharger inlet as close as possible, and directly facing each other, ensuring a smooth and direct flow of air.

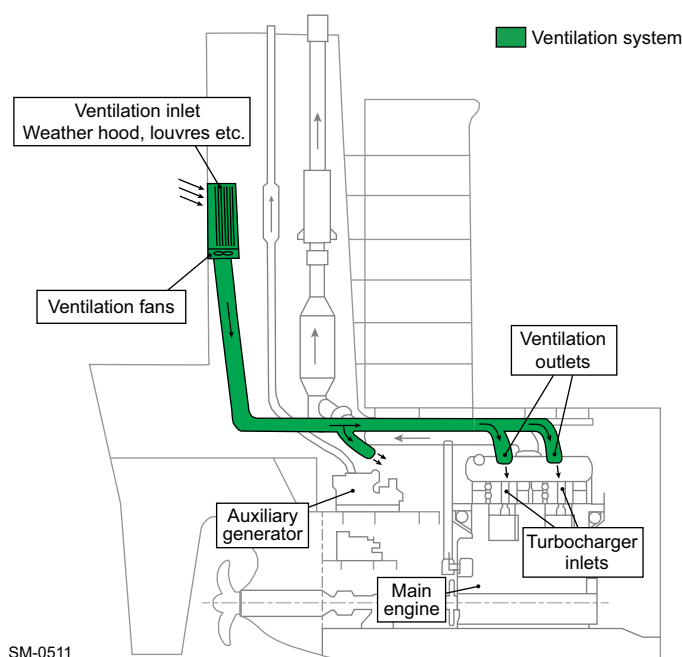


Figure 4-66 Ventilation system arrangement 1: Engine room ventilation system

By ensuring that the air flow from the ventilation outlet to the turbocharger inlet is as direct as possible, the air intake is at its coolest. The ventilation arrangement must limit air from the engine room, mixing with inlet air and entering the turbocharger. Limiting this heating effect keeps the engine specific fuel consumption low.

Turbocharger with filter

The turbocharger is fitted with a filter silencer that reduces noise and prevents large items from entering the turbocharger. Most turbocharger manufacturers supply an optional secondary fibre or mat filter that can further remove particles and oil mist. This can reduce the effort required for SAC cleaning.

NOTE

WinGD recommends the optional secondary filter to further assist with removing fine particles and oil mist that can be in the engine room.

*Arrangement 2: Direct engine ventilation system***Layout**

In this arrangement, the ventilation outlets are coupled with the turbocharger inlets. As the turbochargers directly receive all the outside ambient air drawn via the ventilation system, there is little chance for the temperature to increase. As a result, this arrangement delivers cooler air to the engine than in 'Arrangement 1', reducing the engine Brake Specific Fuel Consumption (BSFC).

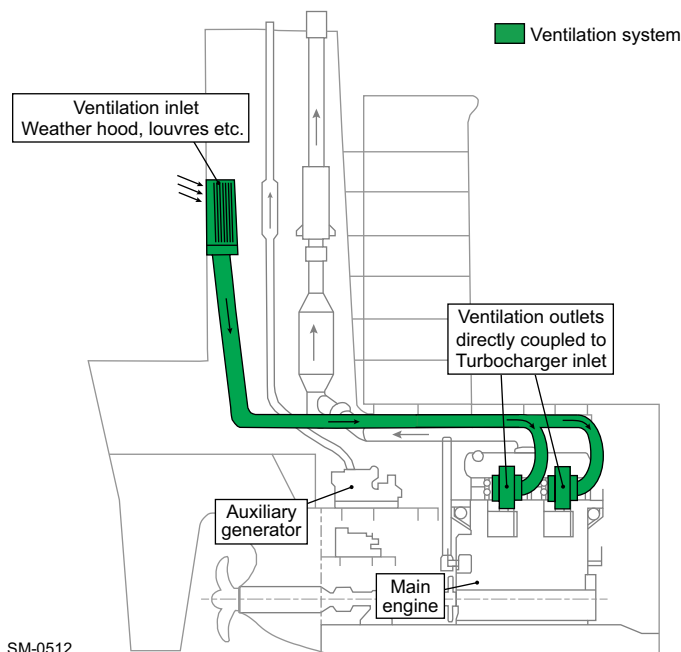


Figure 4-67 Ventilation system arrangement 2: Direct engine ventilation system

The outside ambient air is drawn through the ventilation system by the turbochargers, and, thus, there is no need for ventilation fans in this arrangement. However, it is still essential that the ventilation inlet is protected, typically with a weather hood and louvres. A separate filter unit, if required, can also be fitted here, within the inlet housing.

It must be taken into account that the maximum permissible pressure drop through the suction duct, including filter and silencer, must be limited up to 20 mbar.

Requirements

The engine room ventilation system is provided with separate ventilation fans and ducting. It must be appropriately sized to provide comfortable working conditions in the engine room, supply the necessary combustion air for auxiliary generator(s) and the boiler, and to prevent heat-sensitive apparatus from overheating.

As the main engine combustion air is no longer provided for by the engine room ventilation system, the energy demand of the ventilation fans is reduced compared to 'Arrangement 1'.

4.11.3 Air intake quality

Air intake quality can vary depending on the circumstances of the vessel. For example, suction air is expected to have a dust content of 0.5 mg/m^3 or higher if a vessel carries dusty or dust-creating cargoes, such as iron ore and bauxite, or if it is often in port, trading in coastal waters and desert areas. In these cases, the air must be filtered before it enters the engine (see [Table 4-15](#), [4-106](#)).

Dust filters

The concentration and composition of dust in the suction air dictates the necessity to install a dust filter and the choice of filter type. The normal air filters fitted as standard to the turbochargers are intended mainly as silencers but not to protect the engine against dust. If air supply to machinery spaces has a dust content exceeding 0.5 mg/m^3 , there is a risk of increased wear to the piston rings and cylinder liners.

NOTE

WinGD recommends to install a filtration unit on vessels regularly transporting dust-creating cargoes or trading in areas of atmospheric dust.

Table 4-15 Guidance for air filtration

Dust concentration in ambient air			
Normal	Normal shipboard requirement	Alternatives necessary in very special circumstances	
Most frequent particle sizes	Short period < 5% of running time, < 0.5 mg/m^3	Frequently to permanently $\geq 0.5 \text{ mg/m}^3$	Permanently > 0.5 mg/m^3
> $5 \mu\text{m}$	Standard TC filter sufficient	Oil wetted or roller screen filter	Inertial separator and oil wetted filter
< $5 \mu\text{m}$	Standard TC filter sufficient	Oil wetted or panel filter	Inertial separator and oil wetted filter
---	Normal requirement for the vast majority of installations	These alternatives apply most likely to only very few extreme cases, e.g. ships carrying bauxite or similar dusty cargoes, or ships routinely trading along desert coasts.	

All filter surfaces must be sized correctly to ensure full functionality of the filtration. It depends on maximum power output of the engine, as shown in [Figure 4-68](#), [4-107](#).

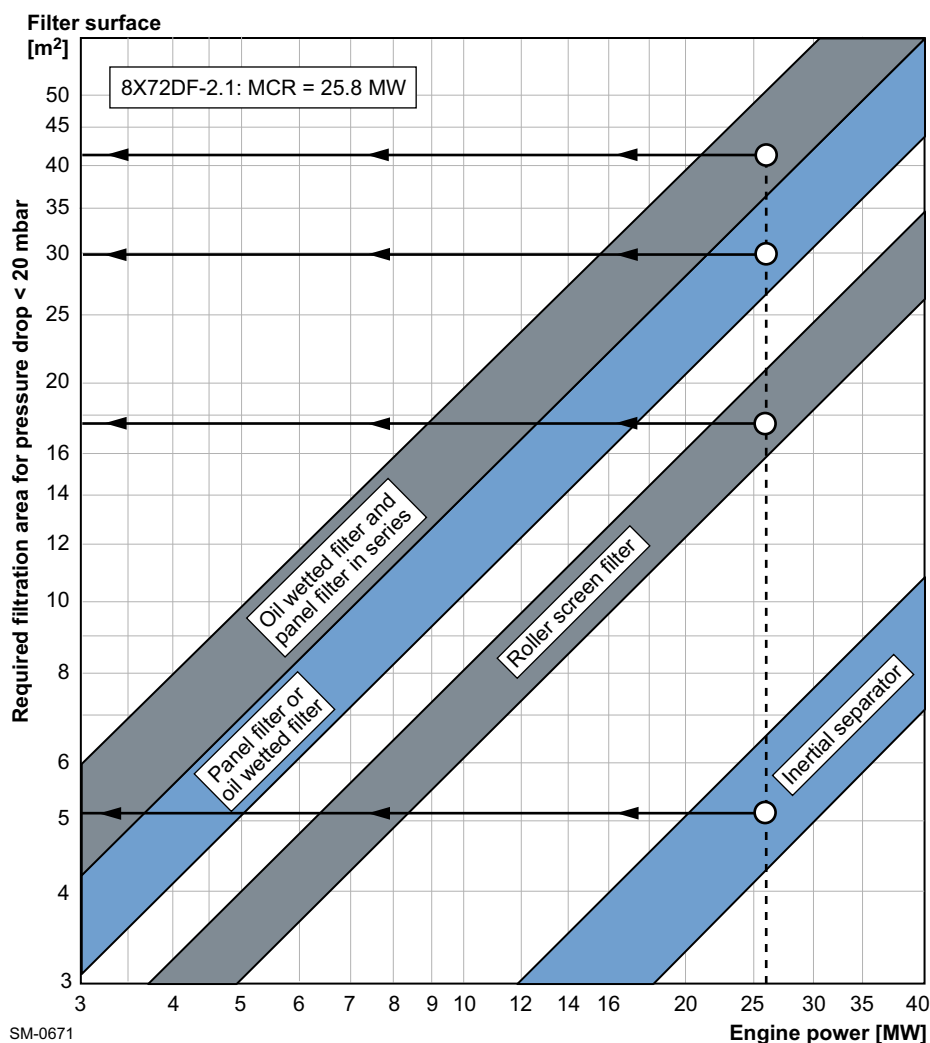


Figure 4-68 Air filter size (example for 8-cylinder engine)

4.11.4 Outside ambient air temperature

The intake air temperature can vary greatly depending on the area of operation, and as the engine can operate over a wide range of ambient air temperatures, hot and cold limits must be considered.

When operating within the normal temperature range of 5°C–45°C (see 3.12.2 [Operating conditions](#), 3-20), the engine does not require any special measures (i.e. no separate scavenge air heater is required). For operation below 5°C or above 45°C, please contact WinGD.

NOTE

No special measures are required for engine operation within the normal temperature range of 5°C–45°C.

4.12 Piping

4.12.1 Pipe connections



The latest version of “DG 8020 Pipe Connection Plan” is available on WinGD web page: [Drawings - Pipe Connection Plan](#).

4.12.2 Fluid velocities and flow rates

For the different media in piping, WinGD provides recommended fluid velocities and flow rates, as stated in the document “DG 9730 Various Installation Items”. The pump delivery head proposals provided by [GTD](#) are based on system layouts which follow these recommended values. However, the values which are provided by this document are only for guidance purposes and the final pump layout must account for the final system layout. The values are based on the optimisation between installation and operating costs (pump energy). National and shipyard standards can also be applied.



The latest version of the document “DG 9730 Various Installation Items – Fluid Velocities and Flow Rates” is available on WinGD web page: [Fluid Velocities and Flow Rates](#).

4.13 PTO, PTI, PTH and primary generator applications

WinGD proposes various Power Take-Off (PTO) and Power Take-In (PTI) arrangements that improve the efficiency and usability of the vessel propulsion chain. Some of the proposals are suitable as Power Take-Home (PTH) devices, which enable the vessel to immobilise the main engine while remaining capable of moving. Furthermore, the primary generator enables the vessel to generate electric power by the main engine without running the propeller.

A PTO/PTI/PTH solution can be applied on the driving end side, while a PTO solution can also be applied on the free end side.

For installation of a PTO/PTI/PTH on the driving end side, a shaft power meter (see subsection [Shaft power meter requirements](#), ¶ 1-10) and an earthing device (see section [3.9.2 Earthing device](#), ¶ 3-15) must be placed between the PTO/PTI/PTH and the main engine flywheel.

NOTE

All other alternatives are subject to a detailed project-specific study and definition. Please consult WinGD via their licensee.

4.13.1 Requirements

After selecting the engine:

- 1) Define the shaft power and the shaft speed.
- 2) Estimate the electric power demand for propulsion purpose.
- 3) Evaluate which of the PTO / PTI systems is most suitable.
- 4) Select suitable electrical components, like frequency converter etc.

NOTE

The type of the PTO/PTI system has an influence on the execution of the main engine. Thus, changing from one system type to another is possible in the project stage but not after having ordered the engine.

4.13.2 Arrangements for PTO, PTI, PTH and primary generator

Figure 4-69, 4-110 illustrates the different arrangements for PTO, PTI, PTH and primary generator.

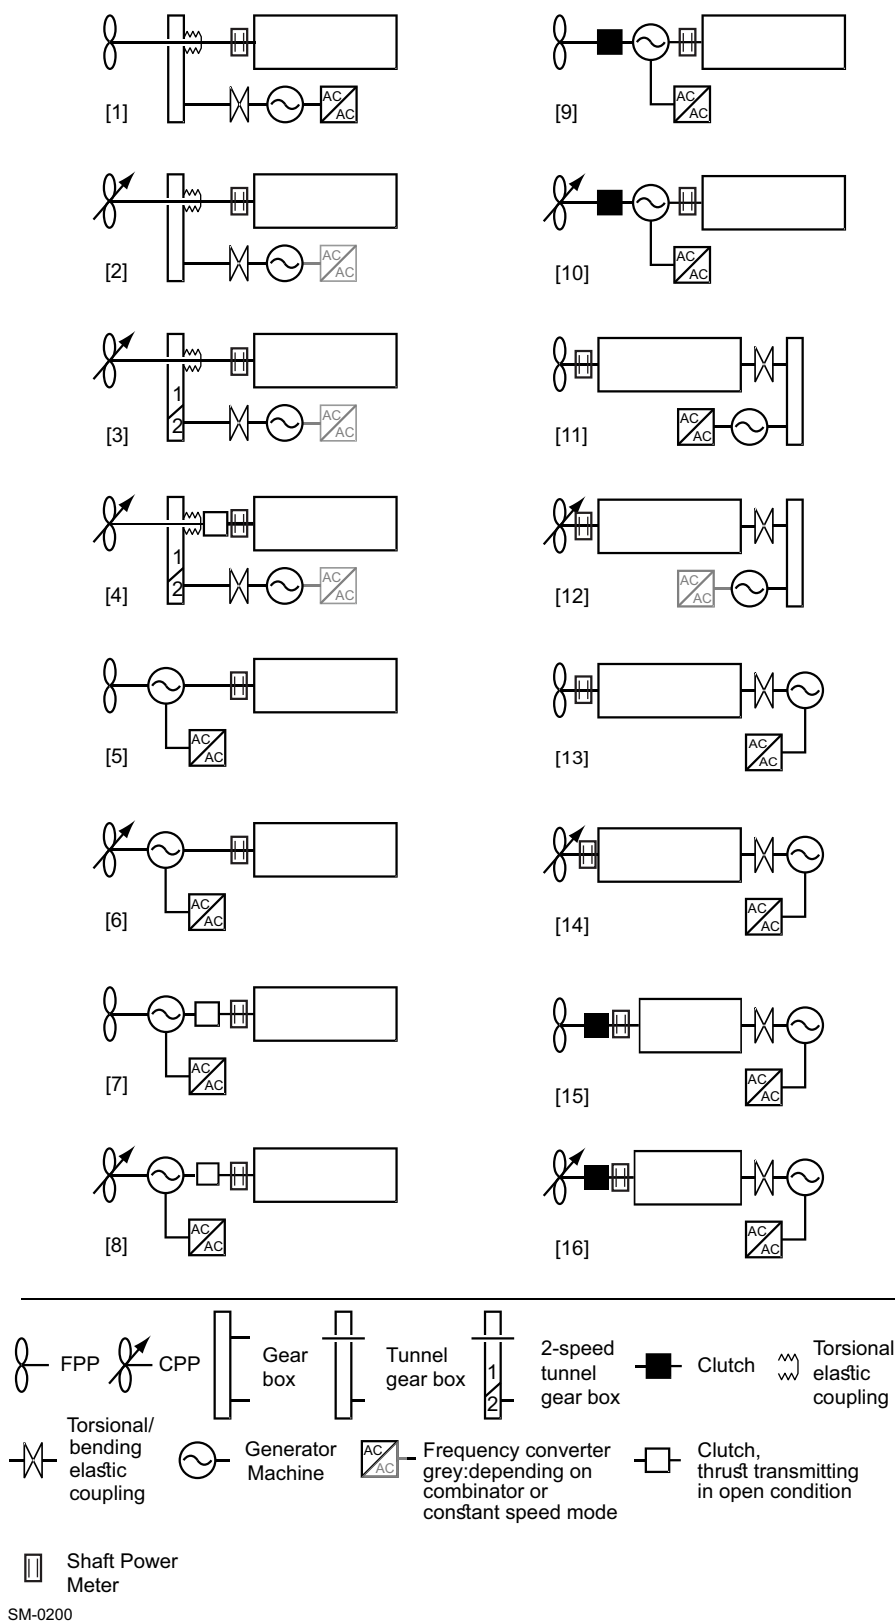


Figure 4-69 Arrangements for PTO, PTI, PTH

The following table itemises the arrangements corresponding to the numbers in Figure 4-69, 4-110.

Table 4-16 PTO/PTI/PTH arrangements

[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]	[10]	[11]	[12]	[13]	[14]	[15]	[16]
X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
'X' means that the arrangement is possible.															

NOTE

Please check the application of arrangements for the selected engine with WinGD via their licensee. Project dependent options can also be considered.

4.13.3 Application constraints

The feasibility of project-specific PTO / PTI / PTH and primary generator needs to be studied in any case. An overview about impacts is given in Table 4-18, 4-112.

Table 4-17 Possible options

	Arrangements (see Figure 4-69, 4-110)															
Option	[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]	[10]	[11]	[12]	[13]	[14]	[15]	[16]
PTO	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
PTI	X	X	X	X	X	X	X	X	X	X	O	O	O	O	O	O
PTH	O	O	O	X	O	O	X	X	O	O	O	O	O	O	O	O
Primary generator	O	O	O	O	O	O	O	O	X	X	O	O	O	O	X	X
Remarks	a)	a) b)	a) b)	a) b)					c)	c)	a)	a) b)			c)	c)
X = the option is possible O = the option is not possible																

- a) If the lowest torsional natural frequency is < 1.5 Hz, special care must be taken regarding possible engine speed fluctuations.
- b) In case the electric generator / motor is operated at variable speed (Controllable Pitch Propeller (CPP) combinator mode), a frequency converter is needed.
- c) With de-clutched propeller and pure generator operation, the minimum engine load requirement must be obeyed.

Permanent Magnet

If 'Permanent Magnet' type generators or electric motors are installed, special attention must be given to the alignment issue. Due to the low rotor mass in relation to magnetic forces, a potential risk of unloaded shaft bearings can exist. Additionally, bearing load measurements can be falsified by the influence of permanent-magnetic pull force.

Table 4-18 Influence of options on engineering

Engineering	Arrangements (see Figure 4-69 , 4-110)															
	[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]	[10]	[11]	[12]	[13]	[14]	[15]	[16]
Extended TVC	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Misfiring detection	(X)	(X)	(X)	(X)	O	O	O	O	O	O	(X)	(X)	(X)	(X)	(X)	(X)
Impact on ECS	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)	(X)
Shaft alignment study	(X)	(X)	(X)	(X)	X	X	X	X	X	X	(X)	(X)	(X)	(X)	X	X
Bearing load due to external load	(X)	(X)	(X)	(X)	X	X	X	X	X	X	(X)	(X)	X	X	X	X
Dynamic condition due to external load	O	O	O	O	O	O	O	O	O	O	X	X	X	X	X	X
X = the arrangement has an influence on this engineering aspect (X) = the arrangement can have an influence on this engineering aspect O = the arrangement has no influence on this engineering aspect																

Extended Torsional Vibration Calculation

The added components have a considerable influence on the related project-specific Torsional Vibration Calculation (TVC). Proper case-dependent counter-measures need to be taken depending on the results of the detailed TVC. For further details, see section [6.4.2 PTO/PTI systems effect on torsional vibration](#), [6-19](#).

Misfiring Detection

Depending on the TVC results, a Misfiring Detection device (MFD) can be needed to protect the elastic coupling and the gear-train (if present) from inadmissible torsional vibrations in case of misfiring.

Impact on ECS

The PTO/PTI/PTH application must be analysed via the licensee with the PCS supplier and with WinGD for the ECS.

Shaft alignment study

The added components can have influence on the alignment layout. The shaft bearing layout must be properly selected and adjusted to comply with the given alignment rules. For further information, see section [3.6 Engine and shaft alignment](#), [3-12](#).

Bearing load due to external load

The added components increase the bending moment and the related bearing loads. The bearing loads must be checked for compliance with the given rules.

Dynamic conditions due to external load

The components attached to the free end must be checked for any influence on axial and radial movements of the extension shaft caused by the engine dynamics.

4.13.4 Service conditions

Service condition depends on the selected PTO/PTI/PTH option. Depending on the engine type, there are one or several cases which are illustrated below.

Operation area and prohibited area

The following illustrations indicate how the engine generator unit can be operated. The prohibited operation area is defined in section [2.7 Prohibited operation area](#), [2-15](#).

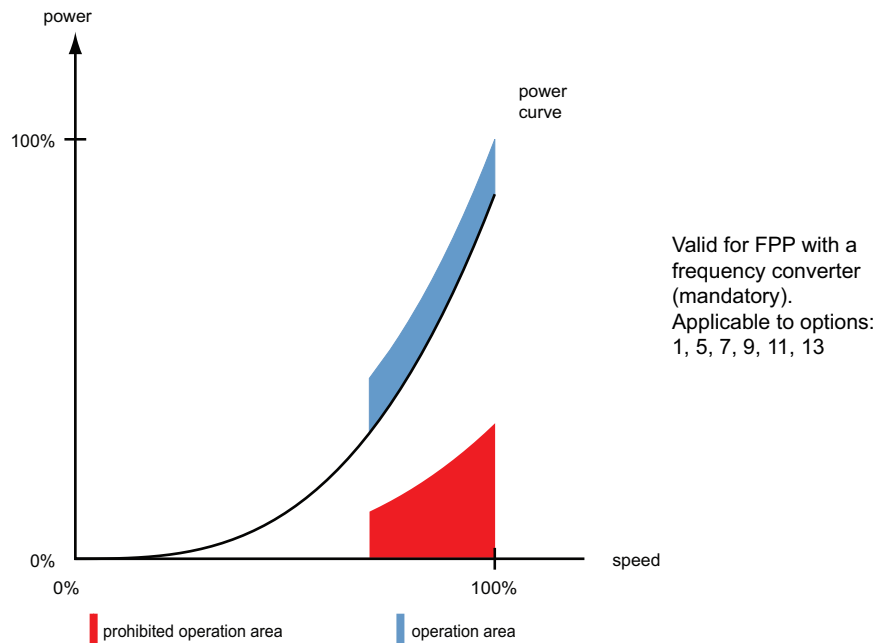


Figure 4-70 FPP with mandatory frequency converter

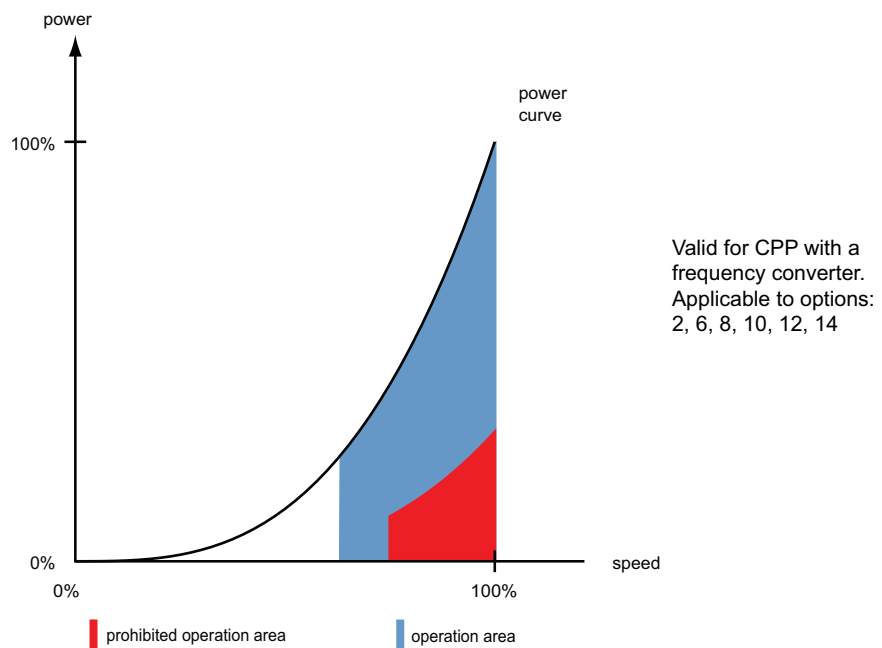


Figure 4-71 CPP in combination with an optional frequency converter

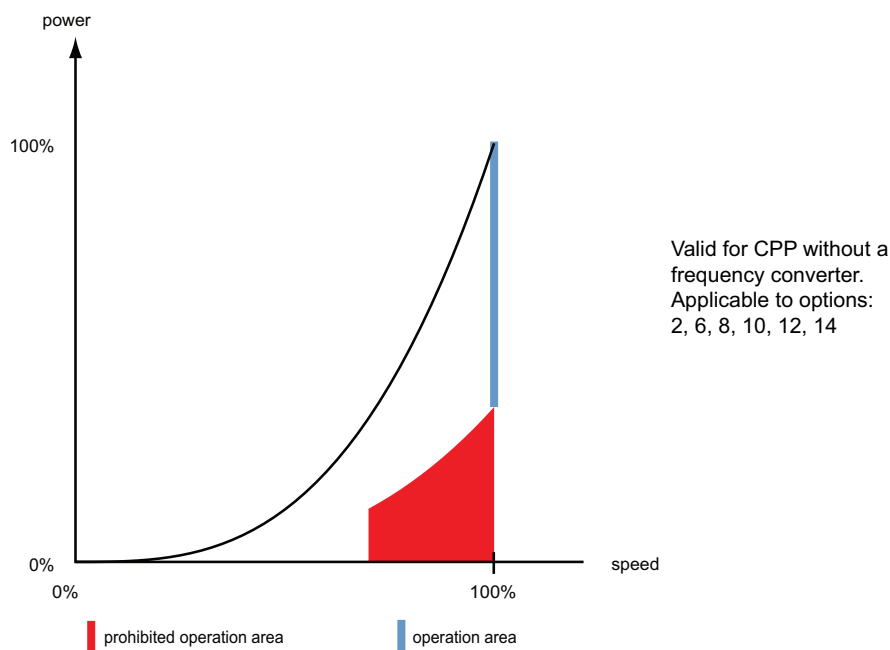


Figure 4-72 CPP in constant speed operation without frequency converter

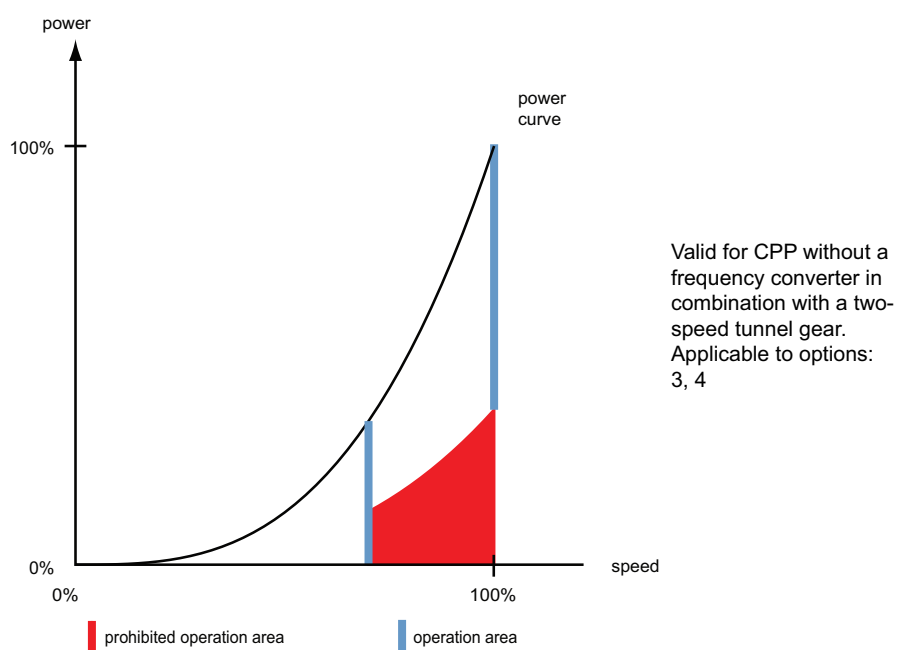


Figure 4-73 CPP with two fixed operation speeds without frequency converter

4.13.5 PTO application

When operating the X-DF engine with a PTO, the operation interaction between the engine and PTO must be evaluated. If one of the following conditions applies, project-specific evaluation is required:

- The ratio between PTO mechanical power and CMCR engine power is larger than 20%
- Operation of PTO is below 50% CMCR engine speed
- Working as a genset with a disconnected propeller
- The design requires special conditions, such as ice operation, ice ramming, dynamic positioning etc.

The above-mentioned engine operating conditions require simulation. Additionally, PTO connection and disconnection must be considered with special care. WinGD offers advisory services to assess feasibility of such configurations.

Experience has shown that engines with ratings close to R1 are more sensitive to power reduction (load down), ratings close to R4 are more sensitive to power increase (load up). The engine behaviour during these operating states can be improved by a lower rate of power change or by engine operation in diesel mode. As a guide, the maximum power increase and decrease rates are shown in [Figure 4-74](#), [Figure 4-115](#) and [Figure 4-75](#), [Figure 4-116](#).

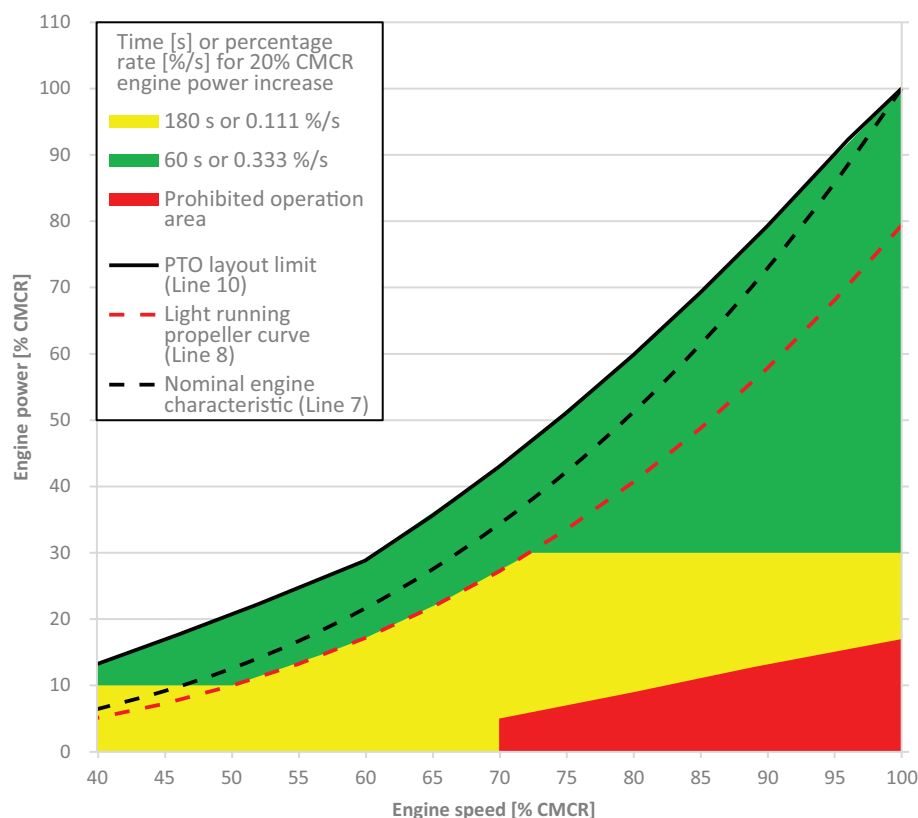


Figure 4-74 Maximum power increase rate for PTO application in gas mode

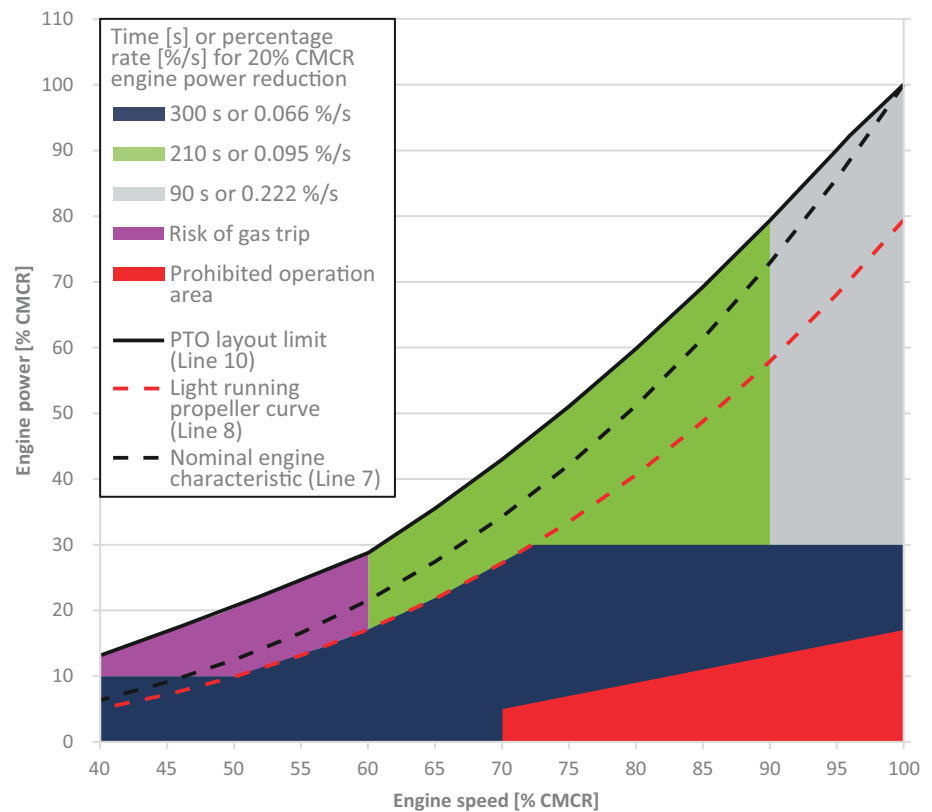


Figure 4-75 Maximum power decrease rate for PTO application in gas mode

Further services for evaluation of engine performance and X-EL advisory services

WinGD provides project-specific support services for safe engine operation (e.g. PTO/PTI applications, disengaged propeller operation etc.), including X-EL systems and integration (e.g. PTO, battery-hybrid systems and energy management control).

Please contact WinGD via the following e-mail address, along with any further questions:

electrification@wingd.com

WinGD Ltd.
Sustainability Solutions
Schützenstrasse 3
8400 Winterthur
Switzerland

4.13.6 PTO testing




For testing purposes, the engine must have a complete TVC performed. If confirmed by the calculation, the engine can be operated at the CMCR speed and low load during a one-time period of 15 minutes on the testbed and 30 minutes during dock trials (e.g. shaft generator adjustment) in the presence of an authorised representative of the engine builder. If required, the test can be repeated. For further information, please refer to the Guideline on WinGD web page: [*Guideline for Shaft Generator Test with Disconnected Propeller during Dock Trial*](#).

5 Engine Automation

The Engine Control System (ECS) provides data bus connection to the Propulsion Control System (PCS) and the Alarm and Monitoring System (AMS). The AMS is usually provided by the shipyard.

The leading suppliers of PCSs approved by WinGD ensure complete compliance with the engine requirements.

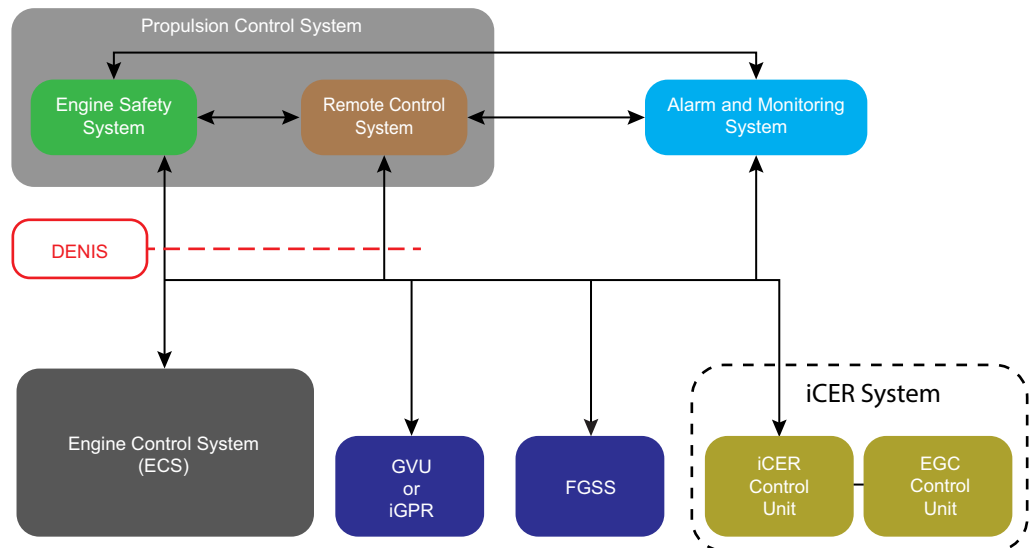

SM-0678

Figure 5-1 Engine automation architecture

5.1 DENIS

The WinGD standard electrical interface **DENIS** is in line with approved PCSs.

DENIS The **D**iesel **E**ngine **C**oNtrol and optImising **S**pecification (DENIS) interface contains specifications for the engine management of all WinGD two-stroke marine diesel engines.

ECS WinGD provides a fully integrated ECS which takes care of all Flex system-specific control functions, e.g. fuel injection, exhaust valve control, cylinder lubrication, crank angle measurement and speed/load control. The system uses modern bus technologies for safe transmission of sensor signals and other signals.

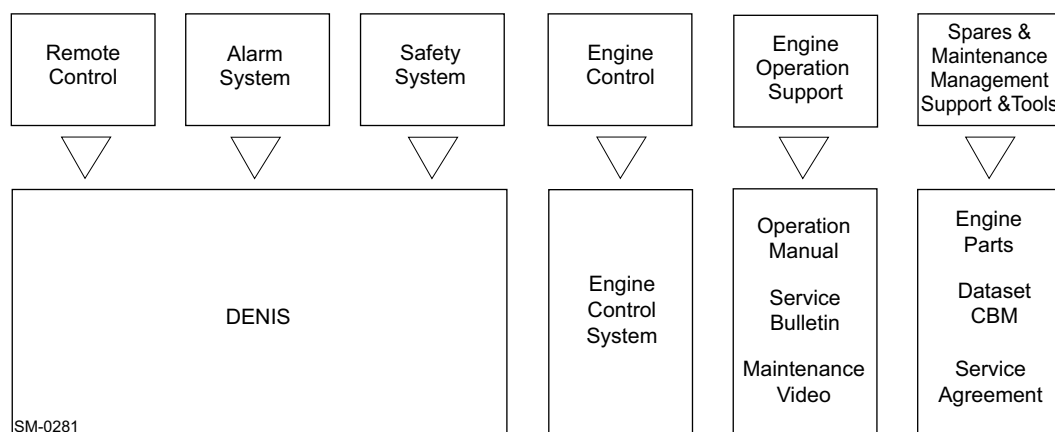


Figure 5-2 Engine management and automation concept

5.2 DENIS concept

The concept of DENIS offers the following features to ship owners, shipyards and engine builders:

5.2.1 Interface definition

The WinGD interface defines the division of responsibilities between the engine builder and the PCS and AMS supplier, enabling the authorised suppliers to adapt their systems to the common rail system engines. The data bus connection provides clear signal exchange.

5.2.2 Approved Propulsion Control Systems

PCSs, including remote control, safety and telegraph systems, are available from suppliers approved by WinGD (see [Table 5-1](#), [5-4](#)). This cooperation ensures that the systems fully comply with the specifications of the engine designer.

5.3 DENIS specification

The DENIS specification describes the signal interface between the ECS and the PCS and AMS. It does not include any hardware, but summarises all exchanged data and defines the control functions required by the engine. The DENIS specification consists of two sets of documents:

5.3.1 DENIS interface specification

This signal interface specification is made available to engine builders and shipyards. Besides the description of engine-built components for control, alarm and indication, the specification contains the following:

- list of alarm and display functions to be realised in the vessel AMS
- control diagram of the engine
- signal list including a minimum of functional requirements
- information related to the electrical wiring on the engine.

5.3.2 DENIS propulsion control specification

This document contains a detailed functional specification of the PCS.

The intellectual property rights of this specification remain with WinGD. Hence the document is licensed only to the partner companies of WinGD developing PCSs. These companies offer systems which are built according to the engine designer's specifications and are finally tested and approved by WinGD.

5.4 Propulsion Control Systems

Approved PCSs comprise the following independent sub-systems:

- Remote Control System (RCS)
- safety system
- telegraph system.

The safety and the telegraph systems work independently and are fully operative even with the RCS out of order.


Approved RCS suppliers

WinGD has an agreement with the marine automation suppliers listed in [Table 5-1](#), [Figure 5-4](#) concerning development, production, sale and servicing of the RCS and the safety system. All approved control systems listed in this table comprise the same functionality specified by WinGD.

Table 5-1 Suppliers of Remote Control Systems

Supplier		RCS
Kongsberg Maritime		
Kongsberg Maritime AS P.O. Box 1009 N-3194 Horten / Norway	km.sales@kongsberg.com Phone +47 81 57 37 00 www.km.kongsberg.com	AutoChief 600
NABTESCO Corporation		
NABTESCO corp., Marine Control Systems Company 1617-1, Fukuyoshi-dai 1-chome Nishi-ku Kobe, 651-22413 / Japan	newbuilding@nabtesco.com Phone +81 78 967 5361 www.nabtesco.com	M-800-V
Wärtsilä Lyngsø Marine A/S		
Wärtsilä SAM Electronics GmbH Behringstrasse 120 D-22763 Hamburg / Germany	www.sam-electronics.de	Wärtsilä NACOS PCS Platinum
Wärtsilä Lyngsø Marine A/S 2, Lyngsø Allé DK-2970 Hørsholm / Denmark	jan.overgaard@wartsila.com Phone +45 45 16 62 00 www.wartsila.com/lyngsoe	
CSSC-SERI		
CSSC Systems Engineering Research Institute 1 Fengxian East Road Haidian District, Beijing / P.R. China	aba11@163.com Phone +86 10 59516730 http://seri.cssc.net.cn/	CSSC-SERI-RCS-B01

Modern RCSs consist of electronic modules and operator panels for display and order input in the Engine Control Room (ECR) and on the bridge (see [Figure 5-3](#), [Figure 5-5](#)). The different items normally communicate via serial bus connections. The engine signals described in the DENIS specification are usually connected via terminal boxes on the engine with the electronic modules placed in the ECR.

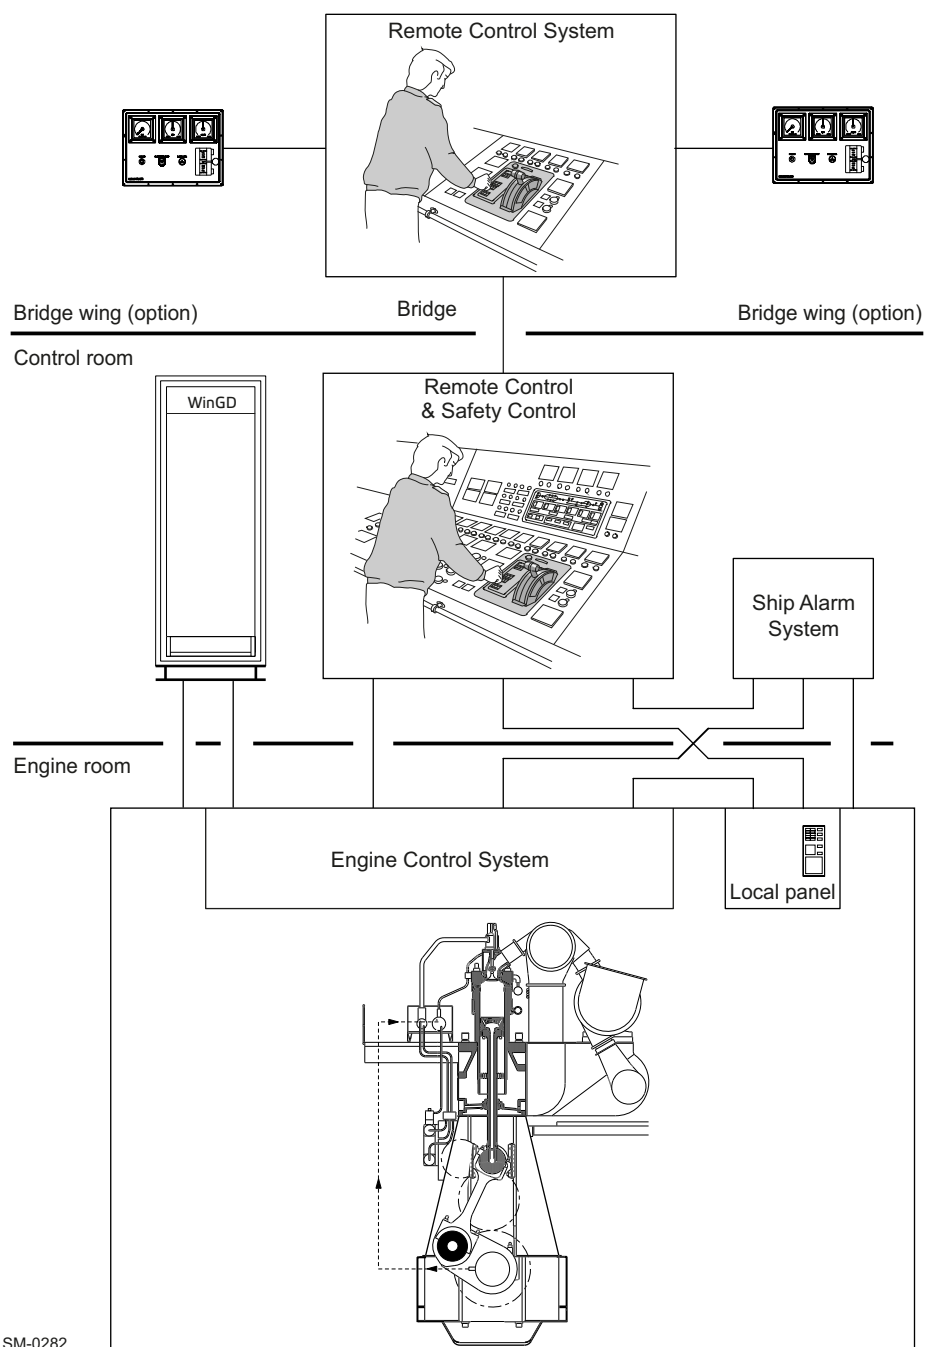

SM-0282

Figure 5-3 Remote Control System

The electronic modules are in most cases built to be placed either inside the ECR console, or in a separate cabinet to be located in the ECR. The operator panels must be inserted in the ECR console surface.

5.4.1 Functions of the Propulsion Control System

Remote Control System (RCS)

- | | |
|-----------------------|---|
| Main functions | <ul style="list-style-type: none"> • start, stop, reversing • speed setting • automatic speed program. |
| Indications | <ul style="list-style-type: none"> • The RCS is delivered with control panels for local, ECR and bridge control, including all necessary order input elements and indications, e.g. push buttons/switches and indication lamps or alternatively a respective display. • The following conditions in the engine are specified by the DENIS to be indicated as a minimum: <ul style="list-style-type: none"> ◦ in the control room: <ul style="list-style-type: none"> - starting air pressure - engine speed - revolutions - operating hours - load - turbocharger speed - scavenge air pressure in air receiver ◦ on the bridge: <ul style="list-style-type: none"> - starting air pressure - engine speed. • In addition to these indications, the RCS applied to the common rail system engine includes displaying the primary values from the ECS, like fuel pressure, servo oil pressure, etc. |

Safety system

- | | |
|-----------------------|---|
| Main functions | <ul style="list-style-type: none"> • emergency stop • overspeed protection • automatic shutdown • automatic slowdown. |
|-----------------------|---|

Telegraph system

- order communication between the different control locations.

Local manual control


- Local manual control of the engine is performed from a control panel on the engine. The panel includes elements for manual order input and indication for the safety system, telegraph system and the ECS.
- The local control box with the local manual control panel is included in the package delivered by approved RCS suppliers.

ECR manual control panel

- A manual control panel delivered together with the PCS and fitted in the ECR console allows operating the engine manually and independently of the RCS.
- The functions of the ECR manual control are identical to the control functions on the engine local control panel.

Options

- bridge wing control
- command recorder.

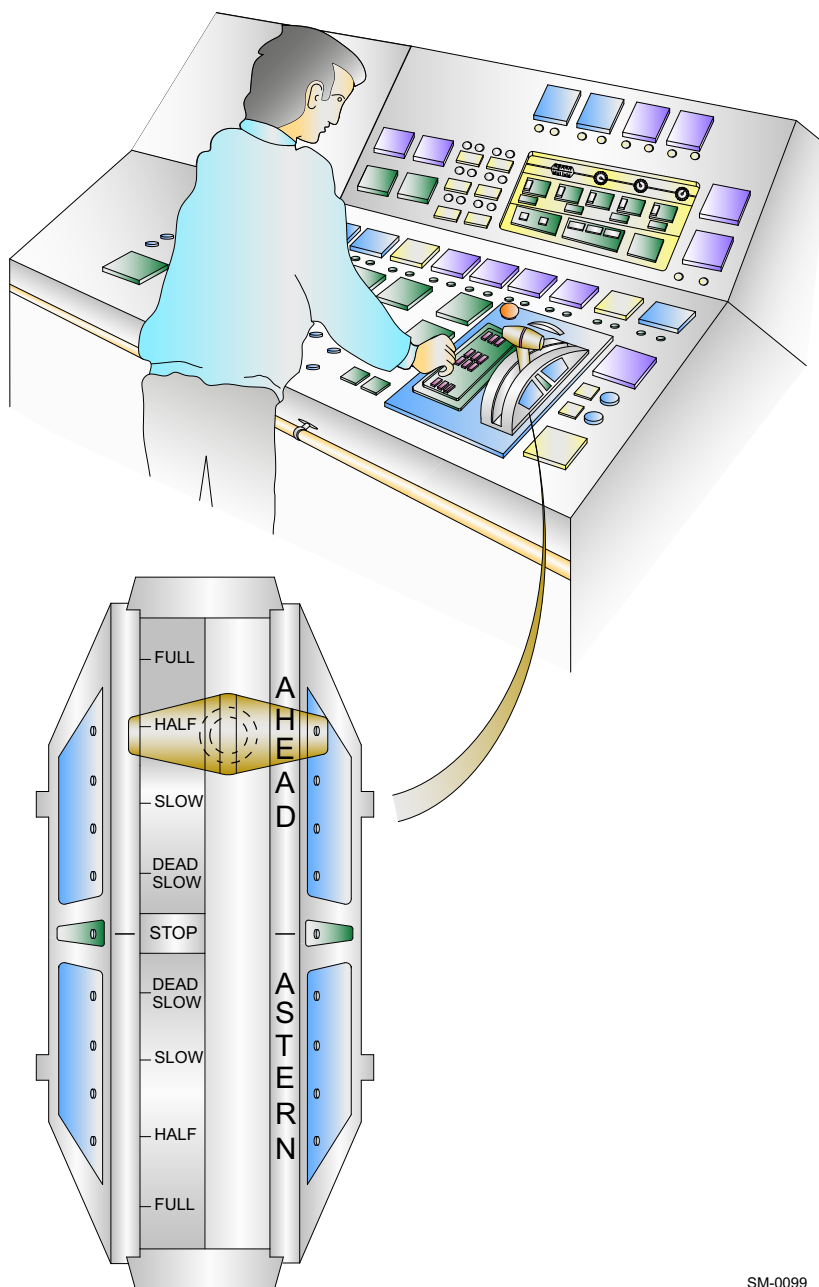

SM-0099

Figure 5-4 Propulsion control

5.4.2 Recommended manoeuvring characteristics

The vessel speed is adjusted by the engine telegraph. Manoeuvring, e.g. for leaving a port, is available from full astern to full ahead. For regular full sea operation, the engine power can be further increased up to 100% Contracted Maximum Continuous Rating (CMCR) power.

To protect the engine, any increase or decrease in power is limited by a rate of change, considering the warm-up respectively cool-down times. Thus, depending on the magnitude of any change in power, it takes time to reach the required engine output (see figures and tables in this section).

For FPP installations: Recommended values for the manoeuvring positions in percentage of CMCR speed			For CPP installations: Recommended values for the manoeuvring positions in percentage of CMCR power		
60 – 70	FULL	AHEAD	22 – 34	FULL	AHEAD
45 – 55	HALF		9 – 17	HALF	
35 – 45	SLOW		4 – 9	SLOW	
25 – 35	DEAD SLOW		1.5 – 4.5	DEAD SLOW	
	STOP			STOP	
25 – 35	DEAD SLOW	ASTERN	1.5 – 4.5	DEAD SLOW	ASTERN
35 – 45	SLOW		4 – 9	SLOW	
45 – 55	HALF		9 – 17	HALF	
60 – 70	FULL		22 – 34	FULL	

SM-0213

Figure 5-5 Manoeuvring speed/power settings for FPP/ CPP installations

For further information on the range of operating modes, see section [1.3 Fuel operating modes](#), [1-7](#).


**FPP manoeuvring steps
and warm-up times**

The recommended manoeuvring steps and warm-up times for engine speed increase are indicated in [Table 5-2](#), [Figure 5-9](#). The engine speed-up/down program is included in the ECS.

Table 5-2 Recommended manoeuvring steps and warm-up times for FPP

Manoeuvring position	Recommended CMCR speed [%]	Corresponding power [%]	Recommended warm-up time per load step [min]	Min. warm-up time per load step [min]
DEAD SLOW	25–35	1.5–4.5	0	0
SLOW	35–45	4–9	0	0
HALF	45–55	9–17	0.1	0.1
FULL	60–70	22–34	0.5	0.5
FULL SEA 1	92	78	15	12
FULL SEA 2	100	100	32	24

Load reduction is possible in half the time of values in [Table 5-2](#), [Figure 5-9](#).

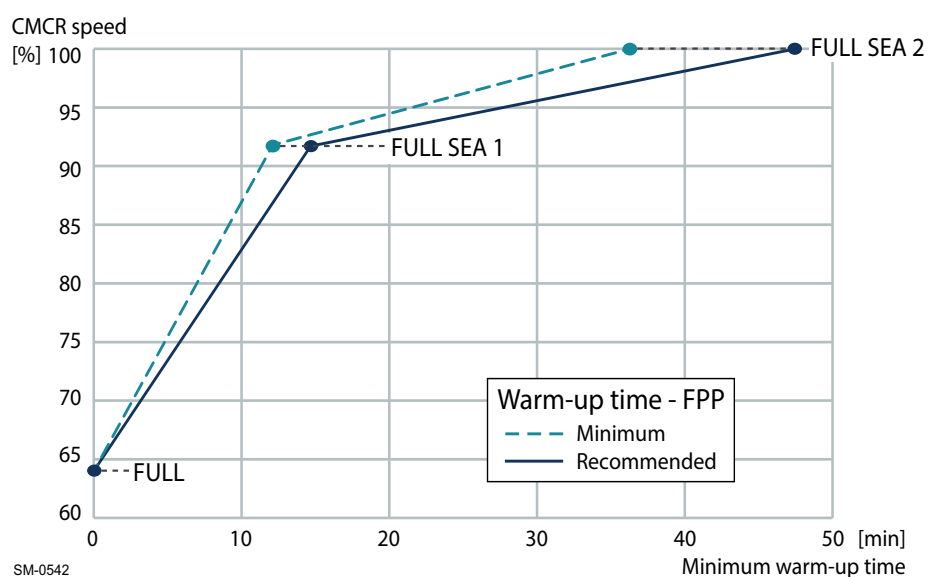**Figure 5-6 Full sea load steps in FPP load-up program****NOTE**

After reaching 100% CMCR speed (FULL SEA 2), the speed can be further increased according to the load-up program. This can be carried out until the engine reaches the maximum speed (see the speed limit lines in [Figure 2-3](#), [Figure 2-7](#)), while taking into account the Light Running Margin (see [Light Running margin](#), [Figure 2-5](#)).

**CPP manoeuvring steps
and warm-up times**

The recommended manoeuvring steps and warm-up times for engine power increase are shown in Table 5-3, 5-10. The shipyard needs to include the engine power-up/down program in the PCS.

Table 5-3 Recommended manoeuvring steps and warm-up times for CPP

Manoeuvring position	Recommended CMCR power [%]	Recommended warm-up time per load step [min]	Min. warm-up time per load step [min]
DEAD SLOW	1.5–4.5	0	0
SLOW	4–9	0	0
HALF	9–17	0.1	0.1
FULL	22–34	0.5	0.5
FULL SEA 1	78	15	12
FULL SEA 2	100	32	24

Load reduction is possible in half the time of values in Table 5-3, 5-10.

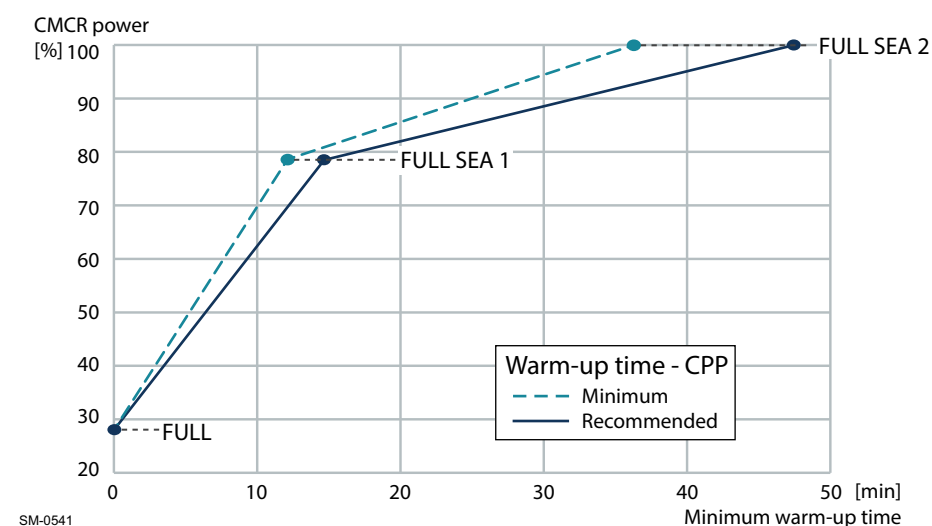


Figure 5-7 Full sea load steps in CPP load-up program

5.5 Alarm and Monitoring System

To monitor common rail system-specific circuits of the engine, sensors with hardwired connections are fitted. In addition to that, the ECS provides alarm values and analogue indications via data bus connection to the ship Alarm and Monitoring System (AMS).

5.5.1 Integrated solution

**PCS and AMS
from same supplier**

- The PCS and AMS are connected to the ECS through one redundant bus line (CANopen or Modbus, depending on an automation maker).
- The integrated solution allows an extended presentation of relevant parameters and easy access to alterable user parameters backed by the graphical user interface functions available in the AMS.
- With the AutoChief 600 AMS by Kongsberg Maritime even the conventional sensors and additional Flex system-specific sensors can be connected via data bus lines, and the data acquisition units can be mounted on the engine in the same boxes used as terminal boxes for any other AMS. These boxes are usually provided by the shipyard and must be delivered to the engine builder for mounting on the engine and connecting to the sensors.
- The integrated solution facilitates commissioning and testing of the alarm signals set on the engine maker's testbed and limits the wiring at the shipyard to a few power cables and bus communication.

5.5.2 Split solution

**PCS and AMS
from different suppliers**

- The PCS is connected to the ECS through two redundant bus lines (CANopen or Modbus, depending on an automation maker).
- For the separate AMS an additional redundant Modbus connection is available.

The requirements for any AMS must be met in a split solution:

- possibility to read values from a redundant Modbus line according to standard Modbus RTU protocol
- ability to display analogue Flex system values (typically 20 values) and to add alarm values provided by the ECS to the standard alarm list (300–800 alarms depending on the engine type and the number of cylinders).

With this solution the human-machine interface is also split:

- The RCS includes the following functions:
 - changing of parameters accessible to the operator
 - displaying the parameters relevant for the engine operation.
- The AMS includes the display of:
 - Flex system parameters, such as fuel pressure, servo oil pressure, etc.
 - Flex system alarms provided by the ECS.
- WinGD provides Modbus lists specifying the display values and alarm conditions as part of the DENIS specification.

5.6 Alarm sensors and safety functions

To ensure safe operation, the engine is provided with alarm sensors and safety functions.

5.6.1 Signal processing

Signal processing must be performed in the AMS. WinGD provides a separate document “Usual values and safeguard settings” which lists the signal indication values. This includes the alarm function and alarm level with corresponding setting and response time.



The document “Usual values and safeguard settings” is available under the following link: [Usual values and safeguard settings](#).

Please note that the signalling time delays given in this document are maximum values. They can be reduced at any time according to operational requirements. When decreasing the values for slowdown times, the delay times for the respective shutdown functions must be adjusted accordingly.

NOTE

The delay values must not be increased without the written consent of WinGD.

5.6.2 Requirements of WinGD and classification societies

The scope of delivery of alarm and safety sensors must meet the requirements of the respective classification society, WinGD, the shipyard and the owner. For the list of classification societies, see section [9.1 Classification societies](#), [9-1](#).

The alarm sensors and safety functions listed in the document [Usual values and safeguard settings](#) are mandatory for an unattended machinery space and reflect the minimum requirements of WinGD. For additional requirements from the classification societies, see [Table 5-4](#), [5-12](#).

NOTE


In case the engine is configured for attended machinery space, please consult the respective classification society.

Table 5-4 Additional class requirements for alarm sensors and safety functions
Table under preparation

5.7 WinGD Integrated Digital Expert (WiDE)

The WinGD Integrated Digital Expert (WiDE) provides full awareness of the ship operating condition and allows operators to take necessary actions to control and optimise ship operations. The shore connection allows the ship operator to manage and optimise fleet operations.

WiDE constantly collects all engine signals together with ship navigation data making them available both on board and onshore. The engine data is collected and analysed by the engine diagnostic algorithms of WiDE to monitor the engine performance, predict component malfunctions and to support the crew with live troubleshooting and a diagnostic advisory service. WiDE also enhances remote troubleshooting support by WinGD experts.

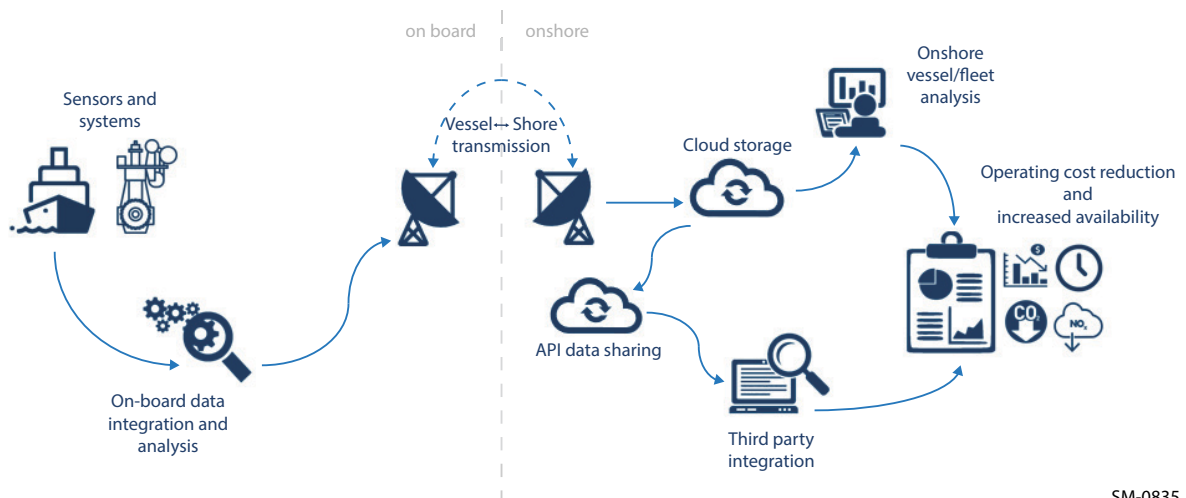

SM-0835

Figure 5-8 WiDE data collection and analysis process

5.7.1 Data collection

WiDE collects engine and other ship data which is stored on board by the WiDE computer, enabling the crew to display and review trends of key engine parameters.

Data collected by WiDE is sent via a secure encrypted communication channel to the WinGD server. The data is made available on two dedicated web portals (eVesselTracker, WiDE online) accessible by a protected user account. WinGD experts review engine data when required, as a first step of remote operation support. The WiDE computer is delivered as standard with the WinGD engines.

5.7.2 Engine diagnostic module

The engine diagnostic module of WiDE analyses the engine data against predefined references in real time, identifying deviations between the measured and reference data. The results are then consolidated and potential issues are highlighted to the crew. Recommendations are provided for corrective actions, allowing operators to improve the engine operation and optimise the engine performance and maintenance planning. Spare parts information is provided to support maintenance.

Analysis

WiDE analyses the engine data to obtain a full diagnostic assessment using several methods:

- The 'digital twin', an engine thermodynamic model which is calibrated at the engine shop test and sea trial, receives and is simulated by real-time engine parameter inputs. This provides an ongoing performance assessment by measuring deviations between the digital twin and the real engine.
- An algorithm rule set, which is based on WinGD expert knowledge, is used to monitor, analyse and diagnose the health of the engine components.
- Data monitoring and collection also enables a progressive performance evaluation and improvement.

Prediction and troubleshooting

The real time engine analysis performed by WiDE provides an early anomaly detection warning. If a potential fault is diagnosed, the operator is notified, enabling them to decide on immediate action. The WiDE troubleshooting process is described in the following sequence:

- Initial proposed actions follow the directions of the engine operation manual.
- If required, WiDE enables connection to WinGD experts for technical support and remote troubleshooting.
- WiDE also creates relevant reports for future reference.

Support

In addition, WiDE maintains a record of events on the main engine and has a module to support planned maintenance. Spare parts required for maintenance tasks can be listed. This checks the available stock level and provides orders accordingly.


Software availability

WinGD provides the WiDE engine diagnostic software on a 'Software-as-a-Service' basis. The software license is provided as part of an annual subscription plan that includes other services, such as troubleshooting support, performance reports and recommendations from WinGD experts.

For more information regarding subscription plans and services offered by WinGD, please contact WinGD representative or visit WinGD web page using the following link: [WiDE](#).

5.7.3 WiDE installation process

Figure 5-9, 5-15 shows the installation steps of WiDE. The WiDE computer is installed before the shop test as the data it collects provides the information required for the engine digital twin. The process ensures that the WiDE system is fully operational by the time of the vessel’s maiden voyage.

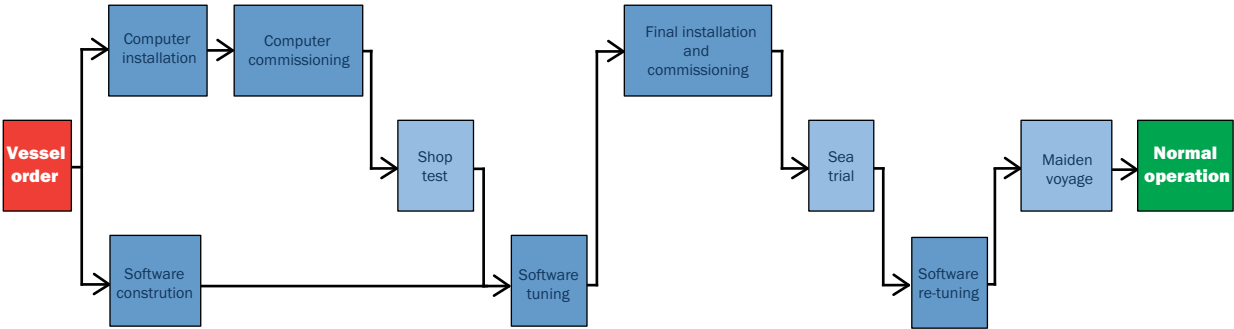

SM-0497

Figure 5-9 WiDE installation process

5.8 Intelligent Combustion Control

The Intelligent Combustion Control (ICC) is a set of automatic cylinder pressure control functions in the ECS, which enables safe and reliable engine operation according to original shop test performance. The ICC functions stabilise and optimise the fuel combustion process for all engine operation modes to achieve the required engine power and fuel consumption within emissions limits.

5.8.1 ICC control functions

The ICC consists of three functions to control cylinder pressure. In all cases, the range by which the system can offset the control parameter is limited to meet emissions requirements and to prevent engine damage.

Compression balancing

The ECS automatically calculates and adjusts the cylinder compression pressure via a unique exhaust valve closing angle offset for each cylinder. This achieves consistent compression pressure across all engine cylinders.

Firing balancing

In diesel mode, the ECS automatically adjusts cylinder firing pressures to be consistent across all cylinders by varying the injection begin angle by a unique offset for each cylinder.

In gas mode, the ECS automatically adjusts cylinder firing pressures to be consistent across all cylinders by varying the gas fuel admission quantity by a unique offset for each cylinder.

Firing control

In diesel mode, the ECS automatically offsets injection begin angles so that firing pressures match testbed values. The offset is the same for all engine cylinders.

In gas mode, the ECS automatically offsets the pilot fuel injection timing to achieve testbed firing pressures. The offset is the same for all engine cylinders and cannot be switched off.

5.8.2 ICC activation modes

During normal operation it is recommended to keep all available control options ON. In some circumstances it can be helpful to turn individual modes OFF, such as:

- problems with a cylinder unit (e.g. fuel injection, exhaust valve or ECS issues)
- loss, damage or drift of two or more cylinder pressure sensors
- extreme weather conditions which can lead to unstable control
- running-in or recovery of the cylinder liner
- during troubleshooting.

In case of a single damaged cylinder sensor, the ICC controls are only deactivated on the unit where the sensor failed.

5.8.3 ICC data

Cylinder pressure sensors installed on each cylinder provide the ICC with real-time measurement data which is used to supply the information enlisted in this section.

Compression pressure	Direct measurement of the compression pressure of each cylinder is not possible. For this reason, the individual compression pressure is calculated based on the measured cylinder pressure during the compression phase of each cylinder. Compression pressure is processed during each cycle and over the full engine power range. An average value of compression pressures for all units is also calculated.
Firing pressure	Peak firing pressure is directly measured for each cylinder. An average value of all firing pressures is also calculated.
Firing pressure angle	The crankshaft angle of the peak firing pressure is measured for each cylinder. An average value for all cylinders is also calculated.
ISO corrected firing pressure	ISO corrected firing pressure is calculated at all engine loads based on the IMO technical file (see Figure 5-10, 5-17). These pressures are dependent on the engine tuning and require additional ISO correction sensors: • two scavenge air temperature sensors after the Scavenge Air Cooler (SAC) which provide actual scavenge air temperatures • two barometric pressure sensors next to the turbocharger (or between the turbochargers in case of multiple turbochargers) which provide the ambient air pressure • two air temperature sensors next to the turbocharger (or between the turbochargers in case of multiple turbochargers) which provide the ambient air temperature.

This ISO correction is only applied in diesel mode with firing control.

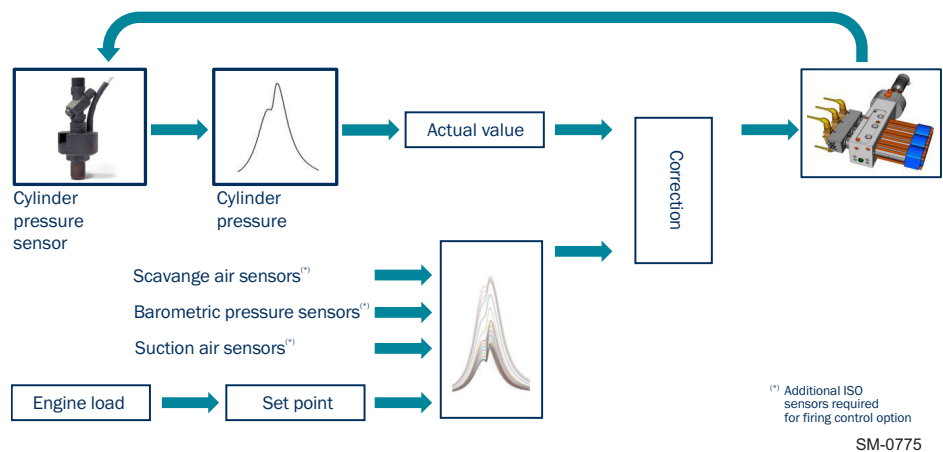


Figure 5-10 ICC system

6 Engine Dynamics

It is critical that vibration is minimised throughout the design and construction stage of any engine installations. The assessment and reduction of vibration are subject to continuous development and research, requiring expert knowledge. For successful design, vibration behaviour calculations are required over the whole operating range of the engine and the propulsion system. Thus, WinGD has developed extensive computer software, analytical procedures and measuring techniques.

NOTE

WinGD provides additional support services to assist with system dynamics and vibration analysis. For further information, see section [6.9 Order forms for vibration calculation and simulation](#), § 6-27.

Forces and moments causing vibrations

Within the engine, various forces and moments are generated by the reciprocating and rotating masses. Often these cyclical forces and moments are neutralised by counterbalancing within the engine. However, if it is not achieved, the engine experiences the sum of these forces and moment as external responses, reacting around its own axis and causing vibrations outside the engine. Vibrations are problematic, especially if a vibration frequency causes a resonance which leads to amplitude passing acceptable limits. This section highlights the importance of dynamic consideration, the causes and relevance.

After considering the external forces and moments types, this section explores the resulting vibration, along with recommended considerations and counter-measures relevant to the engine type and other associated systems and design features.

Types of vibration

The following vibration types are considered in this section:

- external mass forces and moments
- external lateral forces and moments (lateral engine vibration or 'rocking')
- longitudinal engine vibration
- torsional vibration of the shafting
- axial vibration of the shafting
- whirling vibration of the shafting
- hull vibration.

Dynamic characteristics data

The external forces and moments generated by a specific engine defines its dynamic characteristics. These must be considered throughout the vessel design process to avoid adverse impact on the vessel.



The latest version of the document “External forces and moments” with a complete list of the external forces and moments for each engine type is available on WinGD web page: [External forces and moments](#).

The external forces and moments for engines not tuned to an R1 rating are available on request.

6.1 External mass forces and moments

The external mass forces and moments are the resulting forces and moments produced by reciprocating and rotating masses of the running gear (i.e. the engine main oscillating masses) that are transmitted to the surrounding vessel via the foundation. Thus, this does not consider forces and moments that are produced by combustion forces (see section 6.2 External lateral forces and moments, § 6-7). The external mass forces and moments depend on the design of a specific engine and the engine speed. The engine power has no influence on the external mass forces and moments.

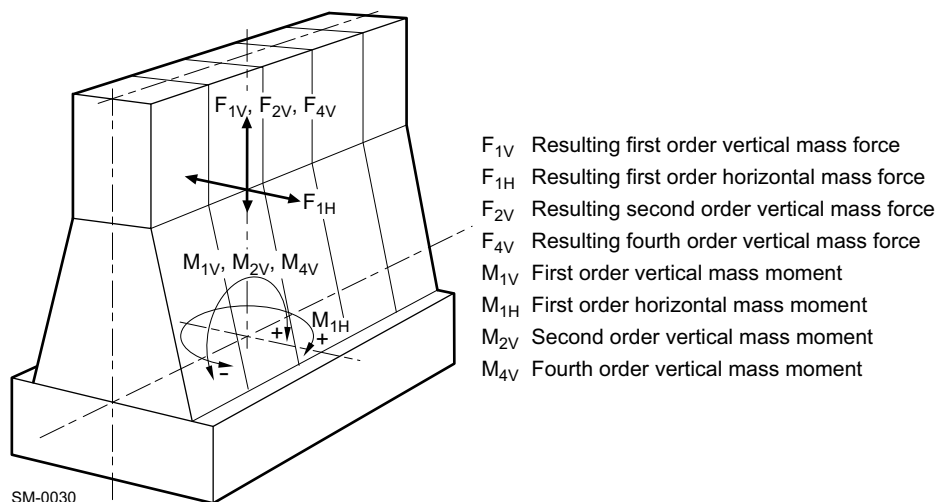


Figure 6-1 External mass forces and moments

Figure 6-1, § 6-2 shows the mass forces and moments generated by the engine. However, where possible they are neutralised. If not, cyclical generation of the external mass forces and moments can lead to unwanted and disturbing vibrations throughout the vessel. This highlights the importance of using counter-measures that balance out the generated mass forces and moments where possible.

6.1.1 Balancing of mass forces and moments

Forces

With a regular firing order of evenly distributed crank angles, an engine inherently balances the summation of all vertical (F_V) and horizontal (F_H) free forces. Sometimes the firing order is designed to be irregular, i.e. unevenly distributed crank angles, to optimise the overall vibration characteristic of a specific engine type. Regardless, the resulting mass forces are considered to be negligible.

First order moments

First order mass moments (M_{1V} and M_{1H}) can be reduced to acceptable levels by introducing standard counterweights, fitted to the ends of the crankshaft. In special cases non-standard counterweights can be used to reduce either vertical (M_{1V}) or horizontal (M_{1H}) first order mass moments as required.

Standard counterweights fitted to the ends of the crankshaft reduce the first order mass moments to acceptable limits. However, in special cases non-standard counterweights can be used to reduce either M_{1V} or M_{1H} .

**Second and
fourth order moments**

Second (M_{2V}) and fourth (M_{4V}) order vertical mass moments are also generated, although these magnitudes vary depending on engine type and number of cylinders. Unless a problematic vessel design leads to unfavourable vibration, there is normally no cause for concern for engines with 7 cylinders or more. However, 5- and 6-cylinder engines are known to generate high magnitudes of unbalanced second order vertical mass moments (M_{2V}) and, thus, must be carefully considered. Consequently, for 5- and 6-cylinder engines WinGD strongly recommends that the impact of the second order vertical mass moment on the vessel is carefully checked. In case a possible problem is revealed, WinGD recommends to consider the installation of one of the following countermeasures designed to reduce the effects of second order vertical mass moments to acceptable values.

6.1.2 Countermeasures for 2nd order vertical mass moments

Especially for 5- and 6-cylinder engines the application of countermeasures for 2nd order mass forces may be required. The necessity must be checked by Finite Element (FE) calculation or by testing on the first ship of a ship series. The following countermeasures are available:

- engine-fitted ELectric BAncer(s) (iELBA)
- electrically-driven compensator fitted to the ship structure.

These countermeasures should also be considered for other cylinder number engines if the second order vertical mass moments (M_{2V}) surpass the necessary limits. However, suitability varies for different engines and vessel design, as well as the status of the project, i.e. still in design phase or retrofitting.

Second-order excitations of the engine are not harmful to the engine but can cause problems if they excite ship hull girder vibrations. Hull vibration analyses must be done to judge whether second order balancing (iELBA or external) is required. The shipyard is responsible for these analyses. The installation of iELBAs by default, without proper vibration analyses, is a safe solution only if two iELBAs are installed on the engine. The installation of a single free end iELBA must be made on the basis of a detailed shipyard analysis.

NOTE

While the installation of two iELBAs is a safe solution, the lack of appropriate analyses can lead to adverse effects if a single iELBA is installed. The shipyard is responsible for these analyses during the vessel design phase.



For additional details on second order moment balancing, please refer to the *2nd-order ship hull vibrations and balancing*.

Integrated ELectrical Balancer (iELBA)

The iELBA is structurally integrated into the engine and is installed on the free end and/or the driving end. The iELBA is comprised of two shafts with counterweights connected with gear wheels and driven by one electric motor. A frequency converter controls the speed of the electric motor. This frequency converter and the control system are installed in an electrical cabinet in the control room. Alternatively, these items can be installed in the engine room.

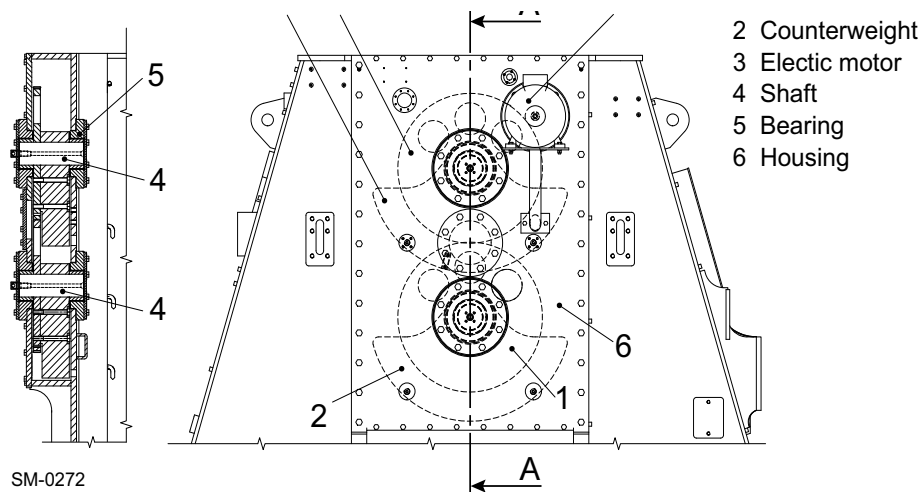


Figure 6-2 Major components and details of the iELBA

For the use of only a single iELBA, the mode shapes of the vertical hull girder vibrations must be considered. If the mode shapes of the vertical hull girder vibrations are known, it can be possible to install only one iELBA on one of the engine sides. The shipyard is responsible for the calculation of the vertical hull girder frequencies and the corresponding mode shapes, and, consequently, for the decision on the number of iELBA systems to be installed.

NOTE

The iELBA system cannot be retrofitted to the engine. The iELBA must be ordered, designed and implemented on the engine before manufacturing commences.

Electrically-driven compensator (external compensator)

Alternatively, or if the ship vibration pattern is not known at an early stage, an electrically-driven compensator can be installed or retrofitted if disturbing second order vibrations occur. As shown in Figure 6-3, 6-5, such a compensator is usually installed in the steering gear compartment. It is tuned to the engine operating speed and controlled accordingly.

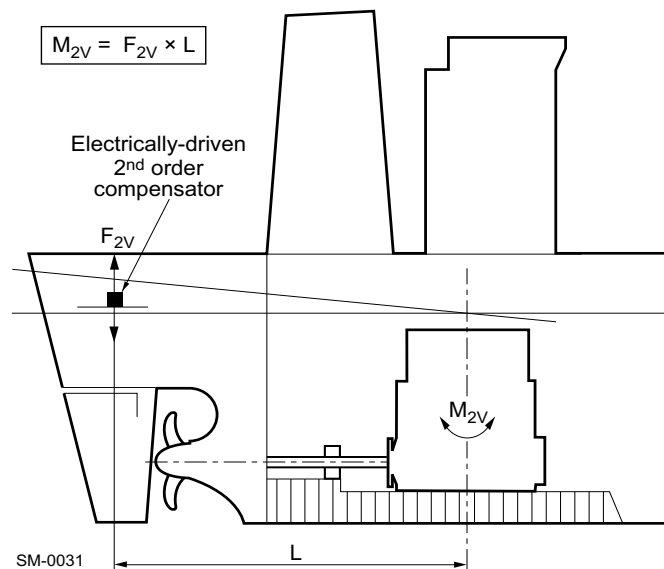


Figure 6-3 Location of an electrically-driven compensator

Power Related Unbalance

The Power Related Unbalance (PRU) values can be used to estimate the risk of unacceptable levels of hull vibrations caused by external mass moments of first and second order. The PRU is calculated with the following formula:

$$PRU = \frac{M_x (Nm)}{Engine\ Power (kW)}$$

Formula 6-1 Power related unbalance calculation

where:

PRU = power related unbalance

M_x = M_{2V} (typically), M_{1H} & M_{1V} (considered as well).

The M_x and the resulting PRU values of an engine are dependent on the number of cylinders.



For further information on the resulting PRU values and likelihood of needing a compensator, please refer to the following document: [External forces and moments](#).

The link provides dynamic characteristics data for engines tuned at R1 rating. For other engine speeds, the corresponding external mass moments are calculated with the following formula:

$$M_{x(CMCR)} = M_{x(R1)} \cdot \left(\frac{n_{CMCR}}{n_{R1}} \right)^2$$

Formula 6-2 External mass moments calculation for R_x rating

where:

$M_{x(CMCR)}$ = resulting moments for a specific engine CMCR


$M_{x(R1)}$ = moments for engine at R1 rating

n_{CMCR} = speed of engine for a specific engine CMCR

n_{R1} = speed of engine at R1 rating.

6.2 External lateral forces and moments

The external lateral forces and moments (lateral engine vibrations resulting in 'rocking') are generated by the combustion process and, to a small extent, by the reciprocating masses of the running gear. The lateral forces depend on the Contracted Maximum Continuous Rating (CMCR) and the engine speed.

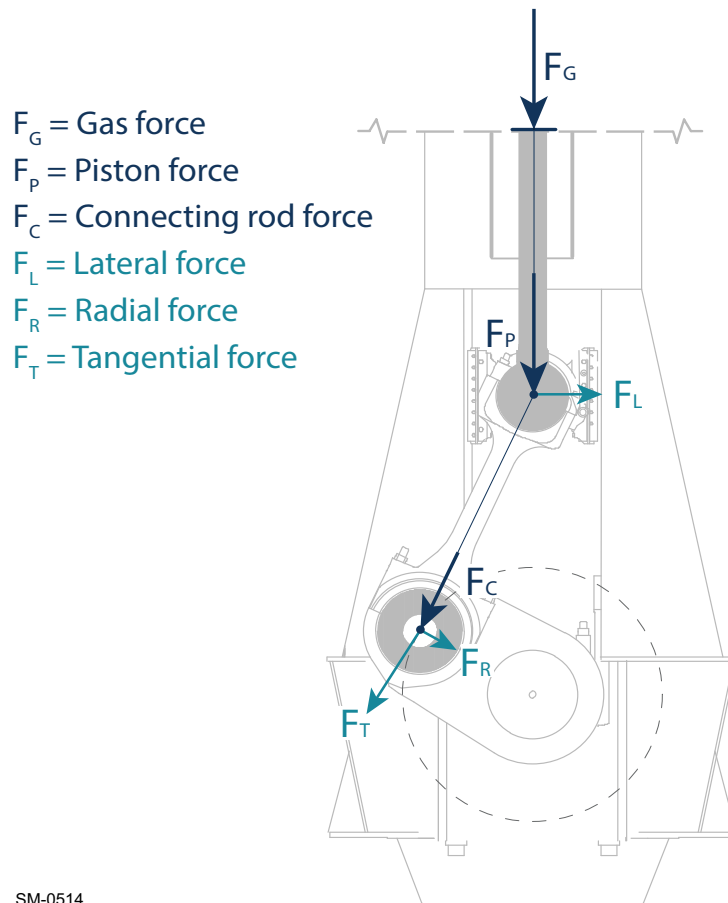

SM-0514

Figure 6-4 Forces through the engine

The forces between the piston and the connecting rod reaction cause a lateral force to act on the crosshead guide rails. The lateral forces at the guide rails are transmitted to the engine block and to the foundation.

The resulting lateral forces and moments can excite resonances of the combined engine and foundation system. In addition, hull resonances or local vibrations in the engine room can be generated.

6.2.1 Lateral vibration types


The resulting lateral forces and moments generate two different modes of lateral engine vibration, the H-type and X-type vibration, as shown in Figure 6-5, 6-8.



The table of H-type and X-type vibration values is also provided under the following link: [External forces and moments](#).

M_{LH} = Resulting lateral H-type moment

M_{LX} = Resulting lateral X-type moment

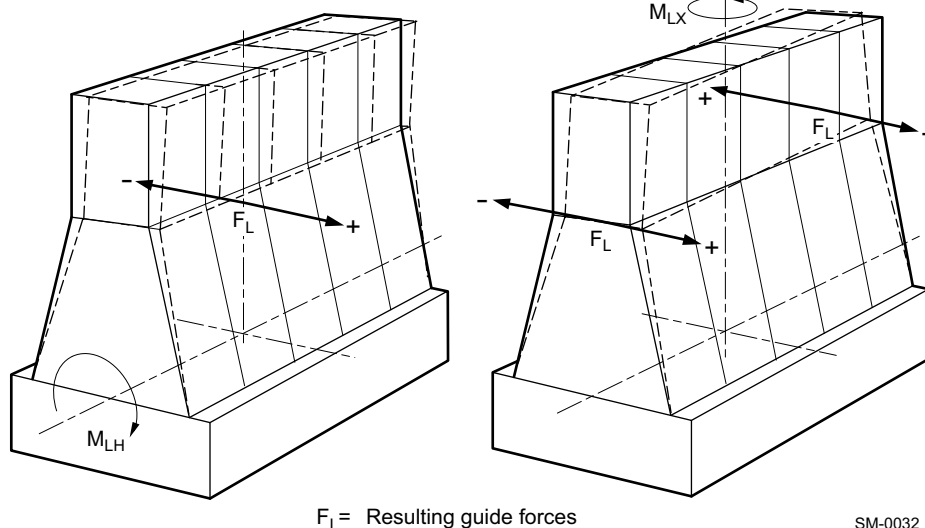

F_L = Resulting guide forces

SM-0032

Figure 6-5 Lateral vibration: X-type and H-type

H-type vibration

H-type lateral vibrations are characterised by a mode shape where both sides of the top of the engine, the driving and free ends, vibrate together, in phase. The lateral guide forces (F_L) result in a lateral moment, expressed as resulting lateral H-type moment (M_{LH}).

X-type vibration

X-type lateral vibrations are characterised by a mode shape where at the top of the engine, the driving and free ends vibrate in counter-phase to each other. As these resulting lateral guide forces create opposing axial moments at the two ends of the engine, the X-type lateral vibrations are expressed as a moment around the vertical axis, the resulting lateral X-type moment (M_{LX}).

6.2.2 Reduction of lateral vibration


The amplitudes of the vibrations transmitted to the hull depend on the design of the engine seating, frame stiffness and exhaust pipe connections. As the amplitude of the vibrations cannot be predicted with absolute accuracy, the support to the ship structure and the space required to install the stays must be considered in the early design stages of the engine room structure. This is true for both lateral and longitudinal vibrations, which are further discussed along with relative reduction methods in the following subsections.

NOTE

WinGD recommends a stiff engine foundation design in the longitudinal and lateral directions, as this is always best practice in minimising hull vibrations.

Lateral stays

If required, lateral stays (i.e. stays in the lateral direction) must be fitted between the upper engine platform and the ship hull to prevent harmful resonance conditions. The main function of lateral stays is to shift the resonance frequency sufficiently above nominal speed, as shown in Figure 6-6, 6-9.

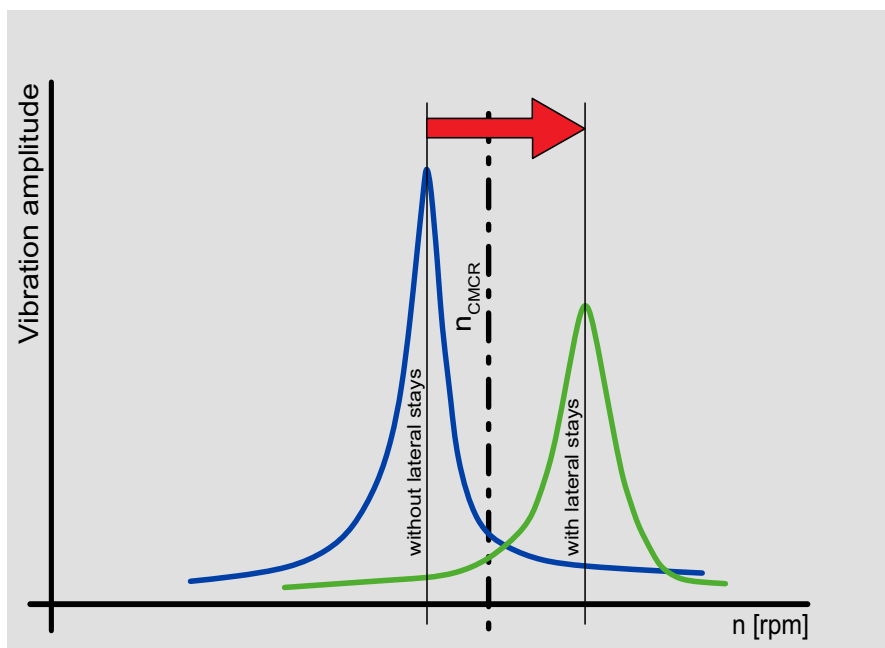

SM-0794

Figure 6-6 Lateral stays shifting the resonance frequency above nominal speed

NOTE

If lateral stays are required, WinGD requests installation of hydraulic type stays. These are available from third-party suppliers.

In addition, if hydraulic type stays are installed, as requested by WinGD, then a damping effect is provided by these stays.

Such hydraulic type stays can be either for both-side or one-side installation:

- Hydraulic type stays for one-side installation have two oil chambers (one on each side of the piston) and provide a 'damping effect' in both directions.
- Hydraulic type stays for both-side installation have an oil chamber on one side of the piston and an air chamber on the other side. The air chamber provides little to no damping effect.

The two general arrangements for both stay types are shown below in [Figure 6-7](#), [Figure 6-8](#), and [Figure 6-10](#).

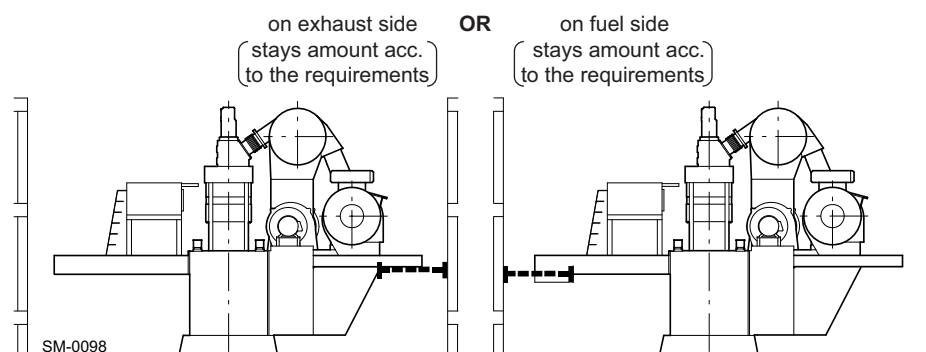


Figure 6-7 General arrangement of hydraulic type stays for one-side installation

NOTE

The selected hydraulic type stays must be suitable for one-side installation on the engine. The suitability of one-side installation must be confirmed by the hydraulic type stay supplier.

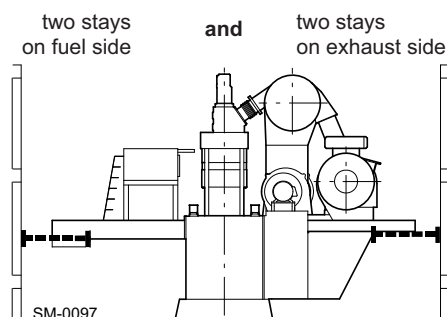


Figure 6-8 General arrangement of hydraulic type stays for both-side installation

Determining the minimum number of required lateral stays

On a scientific basis, the only way to determine the minimum number of required lateral stays (i.e. stays in the lateral direction) is by finite element calculation. This calculation takes into account the exact mass and stiffness properties of the foundation, as well as the aft section of the ship. This dynamic finite element investigation must be executed by the shipyard or a design institute. WinGD does not have these ship hull properties available to perform this extensive investigation.


However, based on broad experience with different bore sizes, cylinder numbers, and engine ratings, WinGD provides an alternative approach to determining the minimum number of required lateral stays. WinGD provides the magnitude of the lateral forces and moments resulting from the engine operation at R1 (as shown in *External forces and moments*). Project-specific values are available upon request. The magnitude of the lateral forces and moments is key for determining the minimum number of required lateral stays. Based on individual experience, engine builders and shipyards are free to select a different number of lateral stays.

From project-specific external forces and moments, the values to consider are the lateral H-type moment (M_{LH}) and the lateral X-type moment (M_{LX}) which, without stays, have a resonance with inadmissible amplitude in the speed range of 70%–110% of CMCR speed (n_{CMCR}).

Although there can be engines with high lateral excitations displayed on paper, these high values can be not relevant due to a missing resonance condition, and thus, no stays are required. For example, most of 7-cylinder engines do not require any lateral stays. This is mainly due to the strong M_{LX} Ord.4 resonance which is located sufficiently above the CMCR speed (n_{CMCR}), and the strong M_{LH} Ord.7 resonance which is located at low speed.

On the other hand, based on experience, most 8-cylinder engines are known to have a very strong M_{LX} Ord.5 resonance which is located close to the CMCR speed (n_{CMCR}), and, thus, lateral stays are mandatory. The same is applicable for 9-cylinder engines that also have a very strong M_{LX} Ord.6 resonance which is located slightly above the CMCR speed (n_{CMCR}).


On twin-engine installations, the lateral stays must be attached on the outboard side of the engines towards the ship hull. Depending on whether the engine is a standard or a left engine (see [Figure 6-9](#), [Figure 6-12](#) and [Figure 6-10](#), [Figure 6-12](#)), the outboard side can be on the fuel side or the exhaust side.

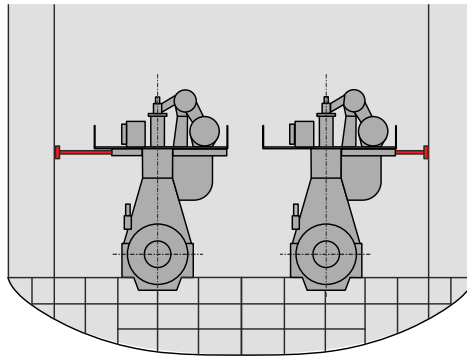

Installation of lateral stays on the fuel and exhaust side with:
Two STANDARD engines


SM-0795

Figure 6-9 Twin-engine installations with two standard engines

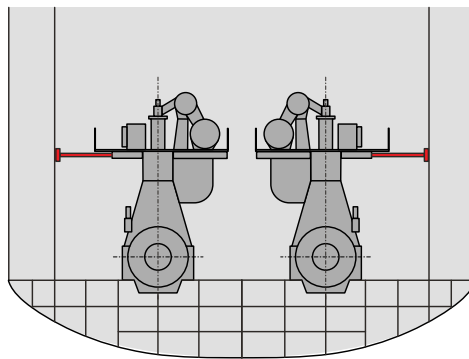

Installation of lateral stays on the fuel side with:
A STANDARD engine on the port side and
a LEFT engine on the starboard side

SM-0796

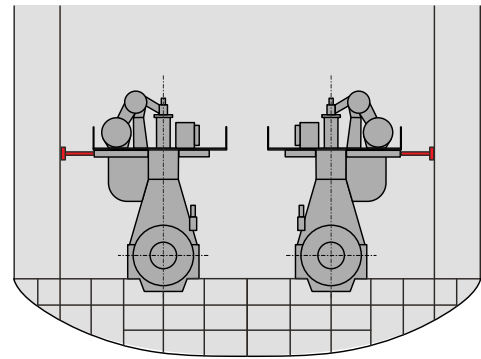

Installation of lateral stays on the exhaust side with:
A LEFT engine on the port side and
a STANDARD engine on the starboard side

Figure 6-10 Variants of twin-engine installations with a standard and a left engine





As shown in [Figure 6-11](#), [6-13](#), [Figure 6-12](#), [6-13](#) and [Figure 6-13](#), [6-14](#), WinGD recommends a specific number of lateral hydraulic type stays for installation on:

- engine exhaust side
- engine fuel side
- both engine sides.

NOTE





It must be ensured that the iCER return pipes do not conflict with the installation of the lateral stays on the exhaust side. The iCER return pipes must not conflict with any of the engine pipe connections on the exhaust side. Alternatively, lateral stays must be installed on the fuel side.

As the project-specific design of the ship hull and the engine foundation can vary in some cases, a different number of hydraulic type stays can be required. The final number of required lateral stays must be specified by the shipyard (e.g. based on experience or on sea trial test results).

No. of cyl.	Available attachment points on the platform of the engine exhaust side	Recommended no. of stays
5		Recommended: 2 Optional: +2
6		Recommended: 2 Optional: +2
7		Recommended: 2* Optional: +2 * Usually no stays are required for 7 cyl.
8		Recommended: 4 Optional: -





SM-0785

Figure 6-11 Engine stays arrangement on the exhaust side

No. of cyl.	Available attachment points on the platform of the engine fuel side	Recommended no. of stays
5		Recommended: 2 Optional: +2
6		Recommended: 2 Optional: +2
7		Recommended: 2* Optional: +2 * Usually no stays are required for 7 cyl.
8		Recommended: 4 Optional: -

SM-0786

Figure 6-12 Engine stays arrangement on the engine fuel side

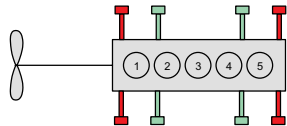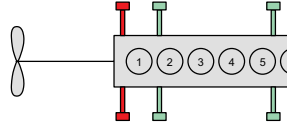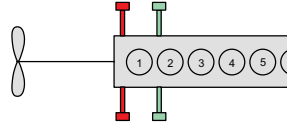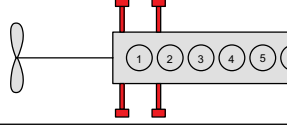No. of cyl.	Available attachment points on the platform of the engine fuel and exhaust sides	Recommended no. of stays
5		■ Recommended: 4 ■ Optional: +4
6		■ Recommended: 4 ■ Optional: +4
7		■ Recommended: 4* ■ Optional: +4 * Usually no stays are required for 7 cyl.
8		■ Recommended: 8 ■ Optional: -

SM-0787

Figure 6-13 Engine stays arrangement on both engine sides

Electrically-driven compensator(s)

If lateral stays cannot be installed, electrically-driven compensators are available to reduce lateral engine vibrations:

- H-type vibration:
 - One electrically-driven compensator can be installed in the longitudinal centre point of the engine.
 - Two phase-synchronised electrically-driven compensators can be applied, one at each end of the engine.
- X-type vibration:
 - Two counterphase-synchronised electrically-driven compensators are necessary, one at each end of the engine.

NOTE

Project-specific engine reinforcements must be approved by WinGD prior to installation.

NOTE

Electrically-driven compensators can only compensate one harmonic excitation frequency at a time.

6.3 Longitudinal vibration (pitching)

Strong axial vibrations in the shafting, transmitted from the thrust bearing to the engine structure and foundation, can excite inadmissible longitudinal vibrations at the engine top and, consequently, in the superstructure (see section 6.5 Axial vibration, ¶ 6-20). In any case, to prevent such vibrations, the double-bottom structure must be as stiff as possible in the longitudinal direction.

Reduction of longitudinal vibration (5-cylinder engines)

In general, longitudinal stays are only especially needed on 5-cylinder engines when a shafting layout has a main torsional critical speed above the nominal speed, resulting in strong longitudinal engine vibrations at the top of the engine block. This tends to occur only when intermediate shafts with oversized diameters are used, which is no longer common today.

Longitudinal stays to prevent vibration in superstructure

There can be installations where it might be beneficial to install longitudinal stays. This is not because of inadmissible longitudinal vibrations at the engine top, but because of possible disturbing longitudinal vibrations in the superstructure, close to nominal speed. By fitting longitudinal stays the disturbing resonance can be shifted above nominal speed.

The decision of whether longitudinal stays are required or not must be made by the shipyard based on a global ship vibration investigation, or on vibration measurements taken at the top of the engine block and in the superstructure (on the first vessel of a series). They are arranged as shown in Figure 6-14, ¶ 6-15.

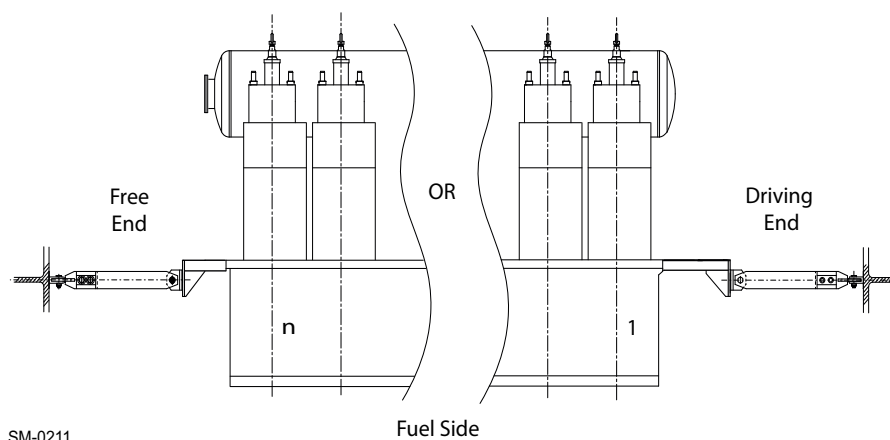


Figure 6-14 Arrangement of longitudinal stays

NOTE

If longitudinal stays are required, WinGD recommends to install friction type stays according to the WinGD design or, alternatively, hydraulic type stays from third-party suppliers.

Friction type stays

Friction type stays can be installed according to the WinGD design, on either the engine free end or driving end side. The layout of the WinGD friction type stays (please refer to the drawing “DG 9715 Engine Stays” in the [MIDS](#) for the application of longitudinal stays) must conform with the specifications. Deviations are not acceptable, especially the friction coefficient of the shim and the disc spring properties which must follow exact specifications.



For the assembly of friction type stays, please refer to the latest version of “DG9715 Engine Stays – Assembly Instructions” for the WinGD friction type stays on WinGD web page: [Assembly instruction – Friction type stays](#).



The layout of friction type stays are shown in the drawing “DG 9715 Engine Stays” in the [MIDS](#).

Hydraulic type stays

Hydraulic type stays can be installed on either the engine free end or driving end side according to third-party suppliers.

6.4 Torsional vibration

Torsional vibrations are generated by gas and inertia forces as well as by the irregularity of the propeller torque. It does not cause hull vibration (except in very rare cases) and is not perceptible in service, but produces additional dynamic stresses in the shafting system.

The shafting system comprises of the crankshaft, propulsion shafting, propeller, engine running gear, flexible couplings and Power Take-Off (PTO). The complete assembly of the shafting system must be considered when determining the torsional loads in the system components.

Torsional Vibration Calculation

The torsional loads in the system components are determined by performing a Torsional Vibration Calculation (TVC). The TVC must be done in the early stage for every project.

Across the engine speed range, all system components must remain within their corresponding torsional vibration load limits. If in a component the torsional loads exceed the corresponding limit, appropriate countermeasures must be applied.

The calculation normally requires approval by the relevant classification society and can require verification by measurement on board ship during sea trials. All data required for TVCs should be made available to the engine supplier in an early design stage (see section [6.9 Order forms for vibration calculation and simulation](#), [6-27](#)).

Barred Speed Range

At a certain speed range the torsional vibration stresses in the shafting can exceed the limits for continuous operation. If this occurs, a Barred Speed Range (BSR) must be defined. The width of the BSR is defined by the classification society. The BSR must be passed through rapidly and some classification societies have defined rules about the maximum permissible passage time through the BSR. In general, the target is to have a maximum passage time of 30 seconds.

In order to guarantee a rapid passage of the BSR, a minimum power margin of 10% at the upper boundary of the BSR must be present. The power margin is defined as the margin between the bollard pull curve and the engine torque limit. In any case, within the BSR the torsional shaft stress must not exceed the transient limit. Otherwise, other appropriate countermeasures must be taken.

6.4.1 Reduction of torsional vibration

Excessive torsional vibration can be reduced by optimising the shaft diameters, selecting a different (heavier) flywheel, adding a front disc (tuning wheel) to the free end of the crankshaft or adding a torsional vibration damper to the free end of the crankshaft. A torsional vibration damper reduces the torsional stresses by absorbing part of the vibration energy.

Low-energy vibrations

Viscous damper

Where low-energy torsional vibrations must be reduced, a viscous damper can be installed (see [Figure 6-15](#), [6-19](#)). In some cases, the TVC shows that an additional oil-spray cooling for the viscous damper is needed. In such cases the layout must be in accordance with the recommendations of the damper manufacturer and WinGD design department. The viscosity of the silicone oil in the viscous damper must be checked periodically. The interval is specified by the damper manufacturer. For more information, refer to the Operation Manual.

High-energy vibrations

For high-energy torsional vibrations that can occur, e.g. on 5- and 6-cylinder engines, a spring type damper with its damping effect can be considered (see [Figure 6-15](#), [6-19](#)).

Spring damper

The spring damper must be supplied with oil from the engine Lubricating Oil (LO) system. Depending on the torsional vibration energy to be absorbed, the damper can dissipate up to 100kW of energy (based on the number of cylinders).

Depending on the installed spring damper, the initial estimated oil flow to the spring damper is approximately 15 m³/h. However, project-specific oil flow must be provided by the spring damper designer. This project-specific oil flow must be based on the final TVC results.

NOTE

For Geislinger spring dampers, the initial estimated oil flow to the spring damper as well as the project-specific oil flow are provided with a tolerance of ±50%.

In case of uncertainty with regards to the oil flow, WinGD recommends installing the main LO pumps with a higher flow capacity margin. The arrangement of the LO system (see [Figure 4-24](#), [4-37](#)) enables return of excessive oil supply to the LO drain tank. This is achieved through a pressure retaining valve.

NOTE

For spring damper installation, the application of a damper monitoring system is mandatory.

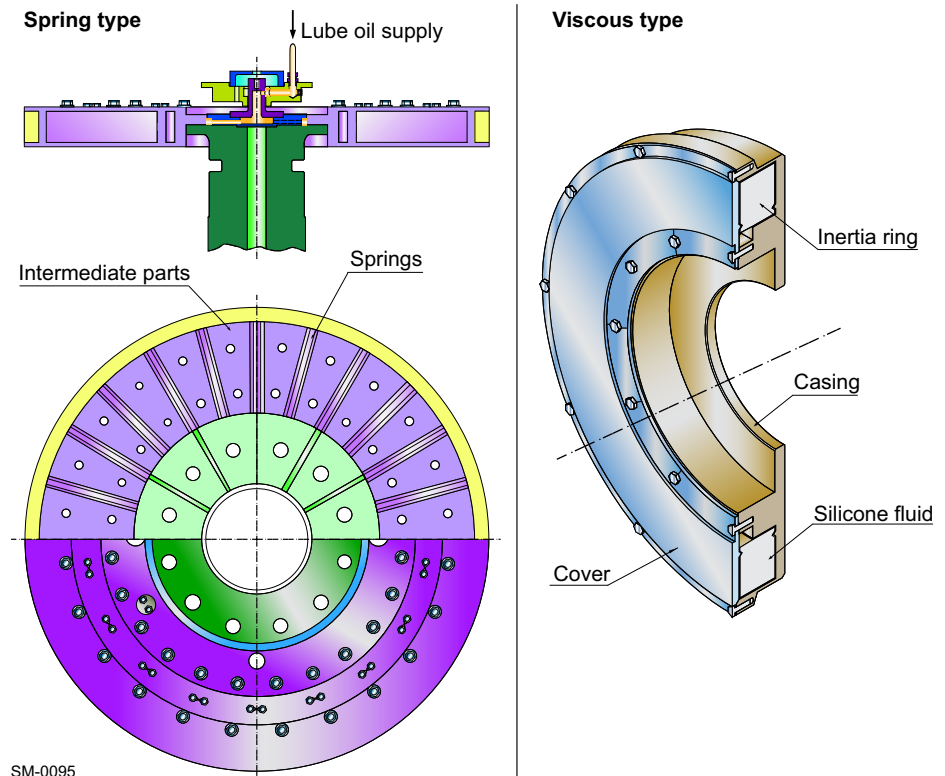


Figure 6-15 Vibration dampers (spring type and viscous type)

6.4.2 PTO/PTI systems effect on torsional vibration

A propulsion plant can include a main-engine driven generator (Power Take-Off (PTO)), a shaft-line connected electric motor (Power Take-In (PTI)), or both. These elements are connected to the engine or shafting by clutches, gears, shafts and/or elastic couplings (see Figure 4-69, 4-110 for different arrangements).

Installations with PTO or PTI require special attention in the early stages of a project. These systems can cause torsional vibrations and alignment challenges.

Risk of unstable engine speed

For many PTO / PTI systems that use elastic couplings, the lowest torsional natural frequency can be problematic, if it is below approximately 1.5 Hz. In such a case there is a risk of engine speed instability where the engine constantly adjusts its speed to compensate the rotating vibration. This must be considered and compensated for in the engine speed control system.

Installation of Misfiring Detection device

Such PTO / PTI systems are very sensitive to misfiring because varying firing loads can cause inadmissible torsional vibrations. To protect the elastic couplings and gears from any misfiring, a Misfiring Detection device (MFD) must be installed. This indicates either partial or total misfiring, allowing for appropriate countermeasures (e.g. speed reduction, de-clutching of PTO / PTI branch) to be applied automatically, protecting the PTO / PTI components.

For additional information on PTO / PTI application, see section 4.13 PTO, PTI, PTH and primary generator applications, 4-109. For support regarding the system layout, please contact WinGD.

6.5 Axial vibration

The axial vibrations mainly depend on the dynamical axial system of the crankshaft, the mass of the torsional vibration damper, and any free-end installations or flywheel fitted to the crankshaft. Additionally, axial vibrations can be considerably influenced by torsional vibrations. This influence is called *coupling effect*.

It is recommended to carry out axial vibration calculations at the same time as TVCs. To consider the coupling effect of torsional vibrations on axial vibrations, it is necessary to apply a suitable coupled axial vibration calculation method.

As the shafting system is made up of masses and elastic connections, it is capable of vibrating and resonating at several frequencies. This would result in excessive stress in the crankshaft and in some cases can lead to excessive vibration of the upper part of the engine.

Reduction of axial vibration

Axial vibration damper

To limit the influence of axial excitations and reduce the level of vibration, all present WinGD engines are equipped with an integrated axial vibration damper. In most cases this lowers the axial vibrations in the crankshaft to acceptable values, thus, no further countermeasures are required. No excessive axial vibrations occur, either in the crankshaft, or in the upper part of the engine.

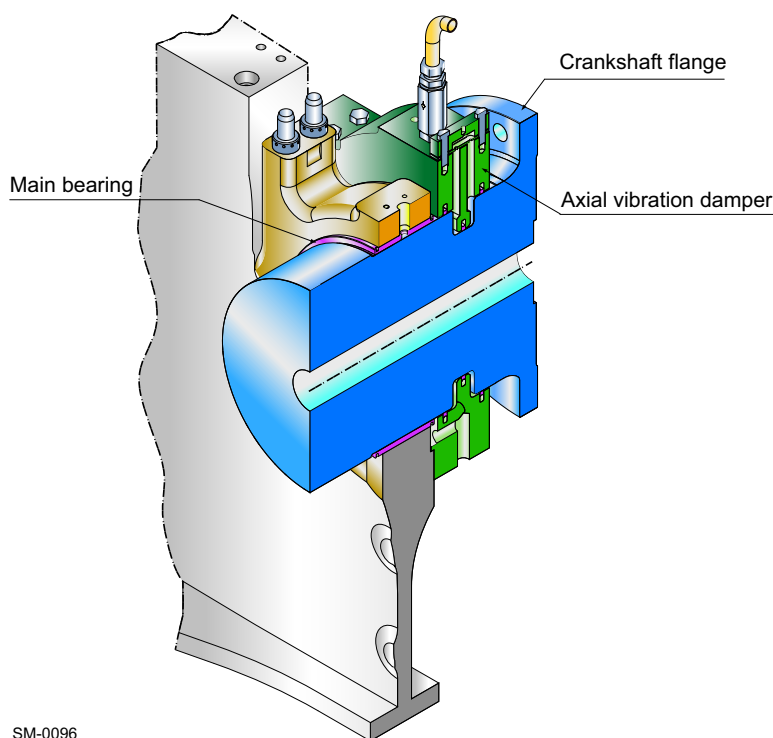


Figure 6-16 Example of axial vibration damper

The integrated axial vibration damper is mounted at the free end of the crankshaft. It is connected to the main LO circuit. An integrated oil pressure monitoring system continuously checks the correct operation of the axial vibration damper.

6.6 Whirling vibration

Whirling vibrations are generated when the shaft rotates and goes into transverse oscillations. If the shaft is out of balance, the resulting centrifugal forces induces the shaft to vibrate. This vibration is commonly known as *whirling vibration*, *bending vibration* or *lateral shaft vibration*.

Whirling vibrations are in most cases not relevant in propulsion shafting with directly coupled low-speed 2-stroke engines. Typically, whirling vibrations are only relevant in 2-stroke installations having a very long shaft line (longer than 60 m).

Many classification societies do not require whirling vibration calculations for installations with low-speed 2-stroke engines. In general, only the natural whirling frequencies are calculated. The number and position of the shaft bearings have a significant influence on the natural frequencies. As such, the whirling vibration calculation must be performed after or together with the alignment calculation.



For further information on the alignment calculation, please refer to the Alignment Guidelines available on WinGD web page: [Alignment Guidelines for Layout Calculation](#).

6.7 Hull vibration

The hull and accommodation area are susceptible to vibration caused by the propeller, machinery and sea conditions. Controlling hull vibration from engine excitation is achieved by a number of different means and can require the fitting of second order mass moment compensators, lateral/longitudinal stays, electrical H-type or X-type compensators and/or torsional vibration dampers.

Avoiding problematic hull vibrations cannot be achieved in isolation and requires consideration and cooperation from the propeller manufacturer, the naval architect, the shipyard and the engine builder.

If requested, WinGD can provide a simplified FE engine model to enable the shipyard or the design institute to predict influence of the engine forces and moments on the ship hull.

6.8 Countermeasures for dynamic effects

6.8.1 External mass moments and vibrations

The following tables indicate where special attention is needed to dynamic effects and the countermeasures required to reduce them.

Where installations incorporate PTO arrangements (see Figure 4-69, 4-110), further investigation is required and WinGD must be contacted.

Table 6-1 Countermeasures for external mass moments

No. of cyl.	Second order compensator
5	Balancing countermeasure is likely needed
6	Balancing countermeasure is unlikely needed
7-8	Balancing countermeasure is not relevant

Table 6-2 Countermeasures for lateral and longitudinal vibrations

No. of cyl.	Lateral stays	Longitudinal stays
5	A	C / A ^{a)}
6	B	C
7	C ^{b)} / B ^{c)}	C
8	A	C
A = The countermeasure indicated is needed. B = The countermeasure indicated can be needed and provision for the corresponding countermeasure is recommended. C = The countermeasure indicated is usually not needed.		

- a) 'A' for installations having the main torsional critical above nominal speed (installations with increased shaft diameters)
 b) 'C' for $n_{cmcr} \leq 98 \text{ rpm}$
 c) 'B' for $n_{cmcr} > 98 \text{ rpm}$

Table 6-3 Countermeasures for torsional and axial vibrations of the shafting

No. of cyl.	Torsional vibration	Axial vibration
5-8	Detailed calculations must be carried out for every installation; countermeasures to be selected accordingly (shaft diameters, critical or BSR, flywheel, tuning wheel, torsional vibration damper).	An integrated axial vibration damper is fitted as standard to reduce the axial vibration in the crankshaft. However, the effect of the coupled axial vibration on the propulsion shafting components must be checked by calculation.

6.8.2 Synchro-Phasing System in twin engines

An available countermeasure for vibration reduction in twin engine vessels is the WinGD Synchro-Phasing System¹⁾ (SPS). By changing the relative phase difference of the two engines operating with the same speed, it is possible to neutralise vibrations of a selected frequency and the resulting resonance on the ship hull or structure.

Synchro-Phasing¹⁾ can be an effective way of reducing vibrations without modifications to the ship structure and with limited cost.


Concept

As discussed previously in this section, it is important that vibrations of the engine or propeller are minimised. Some specific vibrations are problematic if they cause resonance in the surrounding vessel structure.

Alteration of phase angles

With twin-engine vessels the resulting vibration amplitude is equal to the sum of both engines. Thus, it is dependent on the phase difference of the engines. The phase difference of any two vibrations is the relative difference (of angle or time) between any matching points of their vibrational cycles.

It is shown in Figure 6-17, 6-24 that if the vibrations are in phase (0° phase difference) the resultant amplitude can reach double that of a single vibration. However, towards a phase difference of 180° the amplitude is reduced from the vibrations neutralising each other.

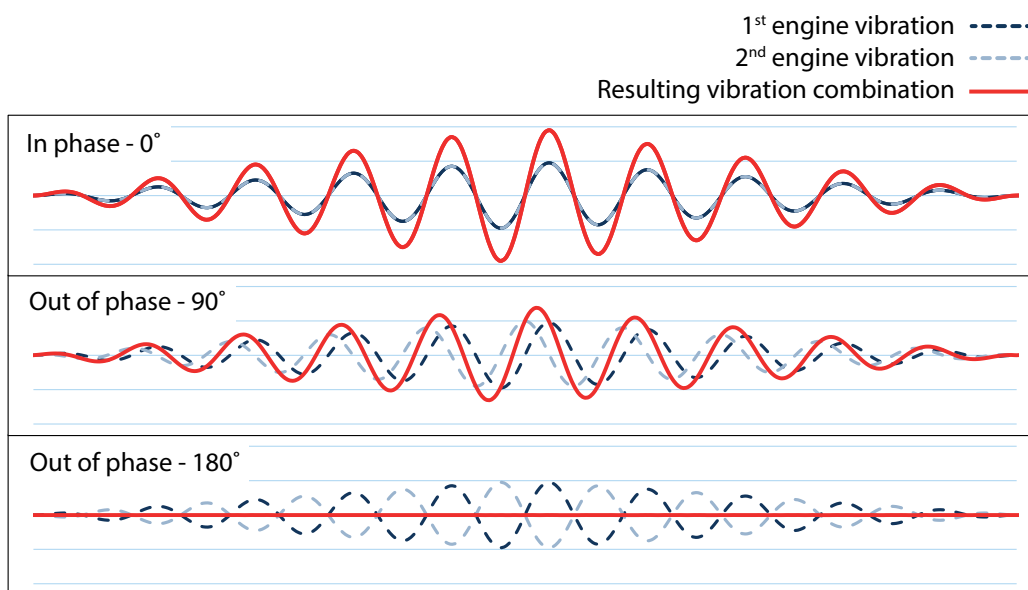

SM-0515

Figure 6-17 Resulting vibration from SPS combinations

By correctly altering the phase angles between two crankshafts, a vibration can be reduced and possibly eliminated, limiting vibrations distribution in the ship hull and superstructure.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

SPS¹⁾ is used to compensate one of the following:


- second order vertical mass moments (M_{2V}) (see section 6.1 External mass forces and moments, 6-2)
- lateral H-type guide moments (see section 6.2 External lateral forces and moments, 6-7)
- excitations generated by the blade frequency of the propellers.

NOTE

The compensation is only capable of neutralising one selected frequency at a time.

Components and control

The speed and the crank angle of both engines are measured by control units which are installed on the engines. These signals are continuously transmitted to the Synchro-Phasing¹⁾ main controller, where the relative position and speed between the two engines is measured.

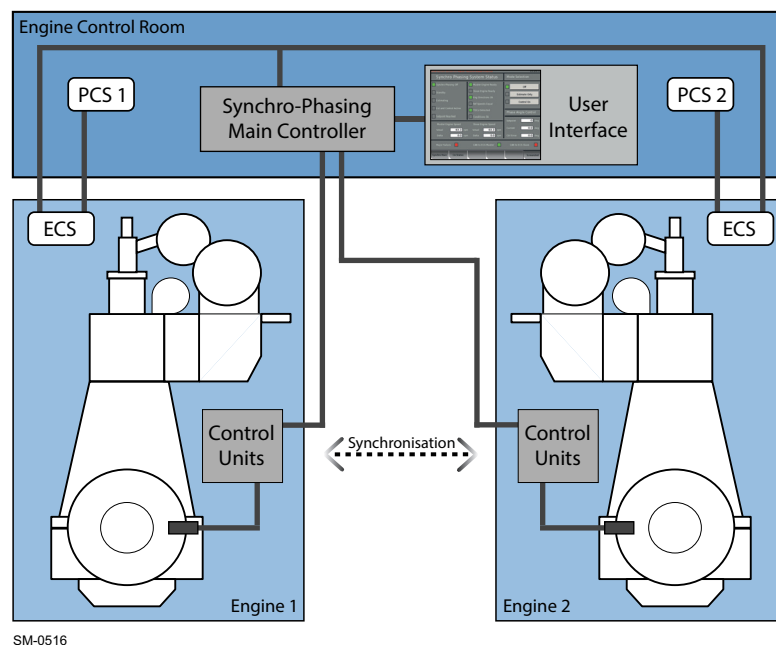

SM-0516
Figure 6-18 Synchro-Phasing System

Main controller and user interface in the Engine Control Room

The main controller is installed in the Engine Control Room (ECR) along with the user interface, where the relative phase difference angle (provided by WinGD vibration experts) can be entered. This enables the system to implement a closed loop control of the set-points, which are a function of the difference between the reference phase angle and current phase angle. To adjust the phase angle between the two engines, the speed of only one (slave) engine is adapted.

The following additional components are required:

- control unit (x2)
- Synchro-Phasing¹⁾ main controller (x1)
- user interface (x1).

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

NOTE

Any phase angle value entered into the user interface must be previously approved by WinGD Dynamics experts, because incorrect settings can lead to excessive vibrations.

Operating modes and restrictions

There are three operating modes:

- **Control On**
Fully operational. This can be selected when the release conditions are fulfilled (described further in this section).
- **Estimate Only**
The speed of each engine and the relative phase angle between them is indicated and continuously updated, but not controlled. This can be selected when the release conditions are fulfilled (described further in this section).
- **Off**
All control parameters of Synchro-Phasing¹⁾ control are reduced and reset to initial value (zero). This can be selected at any time.

Release conditions

The following conditions must be fulfilled to activate the **Control On** and **Estimate Only** modes:

- Both engines are running in ahead direction in normal operational condition and unrestricted operation conditions (no protective actions of the engine or major failures).
- Both engines are operated within the speed conditions of the SPS¹⁾.
- Heavy Sea Mode is not active on either engine.
- No major failure of phase angle control system is active.
- Both engines have the same speed set-point and have completed the load up / down programs to reach this speed set-point.

Deactivation of the **Control On** and **Estimate Only** modes occurs if required. Synchro-Phasing¹⁾ is also overruled and reset, if engine limitations are reached. After deactivation, **Off** is automatically active.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

6.9 Order forms for vibration calculation and simulation



WinGD provides additional support services to assist with system dynamics and vibration analysis. All questionnaires and forms can be downloaded from WinGD web page: [Questionnaires for shaft calculations](#).

Forms should be filled in and submitted via e-mail to the following e-mail address, along with any further questions:

dynamics.ch@wingd.com

WinGD Ltd.
Engine Dynamics
Schützenstrasse 3
8400 Winterthur
Switzerland

7 Engine Emissions

In 1973, an agreement on the International Convention for the Prevention of Pollution from Ships (ICPPS) was reached. It was modified in 1978 and is now known as MARPOL 73/78.

MARPOL 73/78 Annex VI (also known as MARPOL Annex VI) came into effect in 2005 and contains regulations limiting or prohibiting certain types of emissions from ships, including limitations with respect to air pollution. MARPOL Annex VI is continuously amended. The most recently revised and updated version was published as IMO resolution MEPC.328(76) and came into effect in November 2022.

7.1 Exhaust gas emissions

Major exhaust gas emissions include oxides of carbon (CO and CO₂), oxides of nitrogen (NO and NO₂), oxides of sulphur (SO₂ and SO₃) and Particulate Matter (PM). Exhaust gas emissions are a critical topic of interest in the shipping industry.

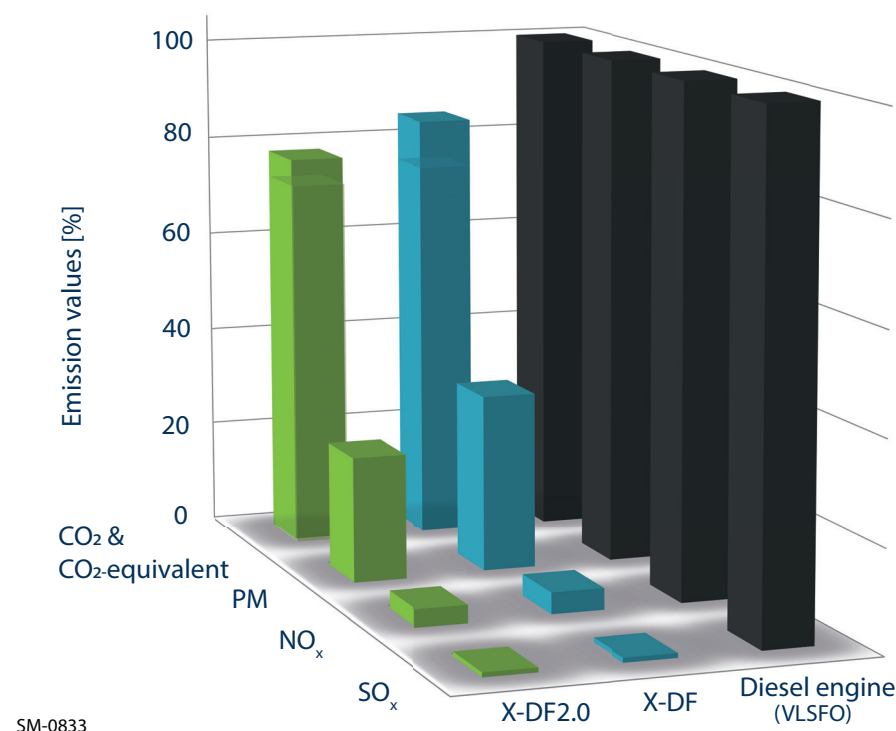


Figure 7-1 Emissions comparison between the X-DF2.0, X-DF and diesel engines

As shown in [Figure 7-1](#), [7-1](#), the X-DF engine emissions are significantly reduced compared to diesel engines. These reductions are mainly related to the engine technologies and different fuels. The X-DF engines operate according to the Otto cycle combustion process which contributes to the NO_x reduction. In addition, the X-DF engines use LNG as the main fuel and this leads to a reduction of CO₂, CO₂-equivalent, PM and SO_x. Further reduction in emissions is observed in the X-DF and the X-DF2.0 engines, which introduce the iCER technology.

7.1.1 Regulation and calculation criteria for NO_x emissions

Regulation 13 of MARPOL Annex VI specifies a limit for the nitrogen oxides (NO_x) emissions for engines installed on ships. This has a direct implication on the propulsion engines design.

NO_x Technical Code

The rules and procedures to demonstrate and verify compliance with Regulation 13 of MARPOL Annex VI are provided in the NO_x Technical Code, which is part of Annex VI and is largely based on the latest revision of ISO 8178.

NO_x calculation criteria

Depending on the rated speed of the engine and the date of vessel keel-laying, the weighted average NO_x emission of the engine must not exceed the maximum allowable value, as indicated by the respective curves in Figure 7-2, 7-2.

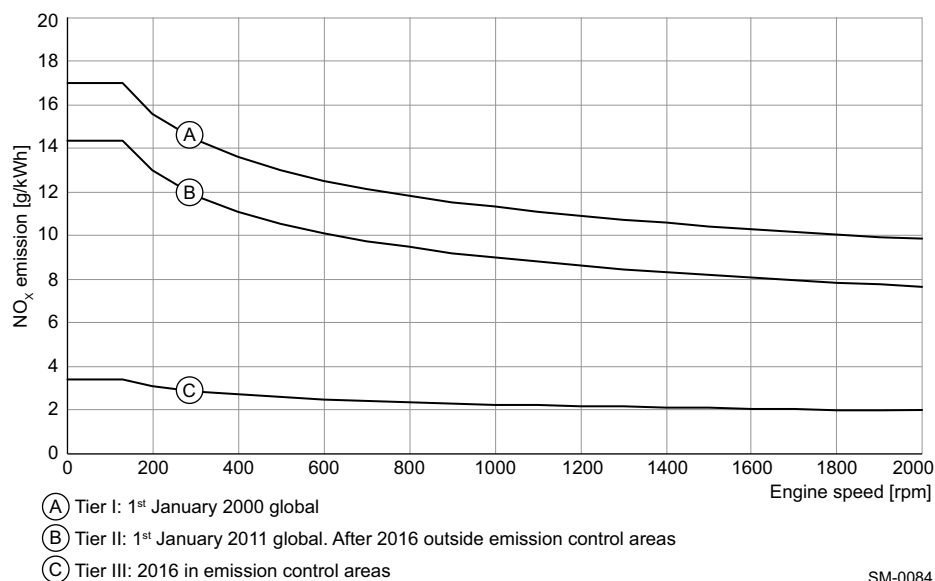


Figure 7-2 Speed dependent maximum allowable average of NO_x emissions

NO_x emissions can be calculated with the following conversion formula:

$$m_{NO_x} = NO_x \cdot \frac{P_{ME}}{1000}$$

Formula 7-1

where:

m_{NO_x} = nitrogen oxides emissions [kg/h]


NO_x = nitrogen oxides emissions [g/kWh]

P_{ME} = engine power [kW].

The NO_x in Formula 7-1, 7-2 is a project-specific value and it is a function of the engine type and power. The engine-specific values are available in the GTD.

7.1.2 Regulation and calculation criteria for SO_x emissions

Regulation 14 of MARPOL Annex VI specifies the limits for SO_x. Such limits are specifically defined for designated Emission Control Areas (ECA), as well as globally. As shown in Figure 7-3, the ECA limit has been gradually reduced from its initial value of 1.5% to 1.0% (2010) and finally to 0.1% (2015). The global limit has also been gradually reduced from its initial value of 3.5% (2012) to 0.5% (2020).

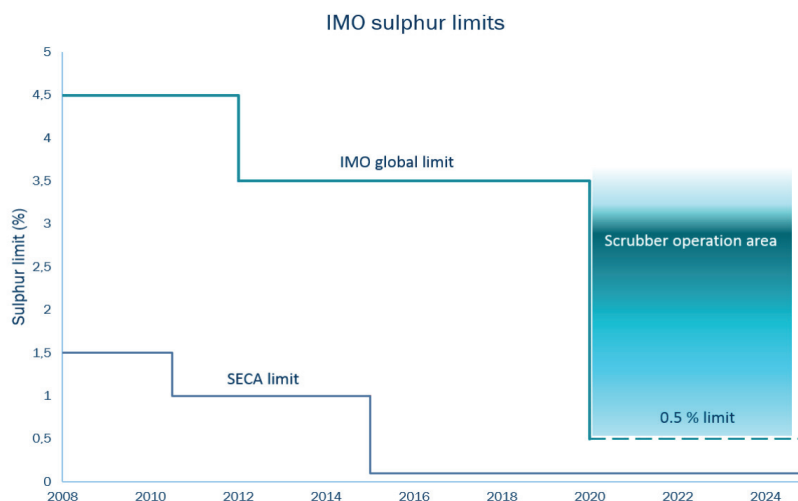

SM-0836

Figure 7-3 Sulphur limits introduced by IMO according to MARPOL Annex VI

SO_x calculation criteria

Total SO_x emissions are linked mainly to two factors. The first factor is the Sulphur Content (SC) of the fuel which must meet the requirements under Regulation 18 of MARPOL Annex VI. The second factor is the fuel consumption.

SO_x emissions (as SO₂) can be calculated with the following formula:

$$m_{SO_x} = BSFC \cdot 2.0 \cdot \frac{SC}{100} \cdot \frac{P_{ME}}{1000}$$

Formula 7-2

where:

- m_{SO_x} = oxides of sulphur emissions [kg/h]
- BSFC = Brake Specific Fuel Consumption [g/kWh]
- 2.0 = molar mass ratio of sulphur to sulphur dioxide
- SC = Sulphur Content [%]
- P_{ME} = power (main engine) [kW].

BSFC is a function of the engine type and power. Project-specific values are available in the [GTD](#).

The actual SC of the fuel is a value stated by the fuel oil supplier on the bunker delivery note.

The value for the molar mass ratio of sulphur to sulphur dioxide is assumed to be equal to 2.0 as the majority of SO_x emissions are SO₂. Assuming that 5% of SO_x emissions are SO₃, this factor would change to 2.03. This illustrates that the equation is a good approximation for the real exhaust gas emissions composition.

7.1.3 Regulation and calculation criteria for CO₂ emissions

The IMO strategy is to reduce CO₂ emissions for shipping by at least 40% by 2030 and a further reduction of up to 70% by 2050 (compared to the 2008 values). New amendments to MARPOL Annex VI came into effect on 1 November 2022. The new measures require all ships to calculate their Energy Efficiency Existing Ship Index (EEXI) and to establish their annual operational Carbon Intensity Indicator (CII) and CII rating.

CO₂ calculation criteria

Currently, only CO₂ is considered in EEXI and CII. In the future, it is possible that CO₂-equivalent is included in the CII. However, WinGD already provides CO₂ and CO₂-equivalent emission data. The total amount of CO₂ emissions (known as CO₂-equivalent) is the sum of fuel combustion and methane slip emissions.

For engines operating in gas mode the CO₂-equivalent can be calculated with the following formula:

$$m_{CO_2eq} = ((BSGC - CH_4) \cdot CF_{LNG} + BSPC \cdot CF_{MDO} + CH_4 \cdot GWP_{CH_4}) \cdot \frac{P_{ME}}{1000}$$

Formula 7-3

For calculation of the annual operational CII, only the CO₂ emissions based on the fuel consumption must be considered:

$$m_{CO_2} = (BSGC \cdot CF_{LNG} + BSPC \cdot CF_{MDO}) \cdot \frac{P_{ME}}{1000}$$

Formula 7-4

where:

m_{CO_2eq} = CO₂-equivalent emissions [kg/h]

m_{CO_2} = CO₂ emissions [kg/h]

CH_4 = methane slip [g/kWh]

$BSGC$ = Brake Specific Gas Consumption [g/kWh]

CF_x = Conversion Factor

$BSPC$ = Brake Specific Pilot Fuel Consumption [g/kWh]

P_{ME} = engine power [kW]

GWP_{CH_4} = Global Warming Potential value for methane.

$BSGC$ and $BSPC$ depend on the engine type and rating. The project-specific values are available in the [GTD](#).

CF is a non-dimensional conversion factor between fuel consumption and CO₂ emissions. CF values depend on the fuel type. The values can be found in resolution [MEPC.308\(73\)](#).

The methane slip is a project-specific value and is a function of the engine type and power. The engine-specific values are available in the [GTD](#).

The GWP for the CH₄ is a value estimated over a period of 20 over 100 years. For the CO₂ emissions calculation, WinGD suggests using a value of 28 which is the reference value for 100 years. The GWP factor is not yet implemented in the official regulations but may be considered for more accurate emissions calculations.

For engine operation in diesel mode, CH₄ values are irrelevant and CO₂-equivalent can be calculated with the following formula:

$$m_{CO_2eq} = (BSFC \cdot CF_{MDO} + BSPC \cdot CF_{MDO}) \cdot \frac{P_{ME}}{1000}$$

Formula 7-5

where:

m_{CO₂eq} = CO₂-equivalent emissions [kg/h]

BSFC = Brake Specific Fuel Consumption [g/kWh]

CF_x = Conversion Factor

BSPC = Brake Specific Pilot Fuel Consumption [g/kWh]

P_{ME} = engine power [kW].

7.1.4 PM emissions

Regulation 14 of MARPOL Annex VI specifies the limits for PM emissions, which are mainly related to unburned combustion residuals and fuel quality. An approximate reduction of 65% in PM emissions is achieved by the X-DF engines compared to diesel engines, as LNG is considered a clean fuel and the combustion follows the lean burn Otto cycle. A further reduction of about 10% is achieved by the X-DF2.0 engines compared to the X-DF. The iCER system with internal exhaust gas recirculation contributes to further reduction in PM emissions (as shown in [Figure 7-1](#), [Fig 7-1](#)).

7.1.5 iCER diesel Tier III mode

This X-DF2.0 engine is available with the option¹⁾ of Tier III compliant operation by use of the iCER system (see [iCER operating mode options](#), [Fig 1-1](#)). This engine operation mode uses MGO fuel (with maximum 0.10% m/m sulphur). To achieve Tier III compliance in diesel mode, exhaust gas recirculation is used to reduce the NO_x emissions.

1) It is an available option in addition to the chosen engine configuration, and not included in the standard configuration. It needs to be contracted.

7.2 Engine noise

As the ship crew/passengers must be protected from the effects of machinery space noise, the maximum acceptable noise levels are defined by rules. For new building projects the latest IMO Resolution MSC.337 “Code of Noise Levels on Board Ships” is applied.

The main change introduced by the new IMO MSC.337 compared to the previous Resolution A468(XII) is that in large rooms with many measurement positions the individual positions must be compared to the maximum admissible limit.

NOTE

The noise level graphs in [Figure 7-4](#), [Figure 7-7](#), [Figure 7-6](#), [Figure 7-9](#) and [Figure 7-7](#), [Figure 7-10](#) show typical values for Maximum Continuous Rating (MCR). As the rating dependency is marginal, the values can be used for all ratings.

7.2.1 Air-borne noise

[Figure 7-4](#), [Figure 7-7](#) shows the average surface sound pressure level. The data in the graph are related to:

- distance of 1 m from engine
- average values L_p in dB, in comparison with ISO NR-Curves
- overall average values L_{pA} in dB(A) and expected maximal overall single point values
- free field conditions.

Near the turbocharger (air intake) the maximum measured noise level is normally 3–5 dB(A) higher than the average noise level of the engine.

Standard and additional noise reduction

The present document includes the expected maximum overall value for a single point. [Figure 7-4](#), [Figure 7-7](#) distinguishes between standard noise reduction and additional noise reduction on turbocharger air side. The turbocharger suppliers are currently developing different silencer solutions to comply with the new noise limit regulation of 110 dB(A) for single point.

NOTE

The single point noise limit of 110 dB(A) for machinery spaces may be exceeded if standard silencers are applied.

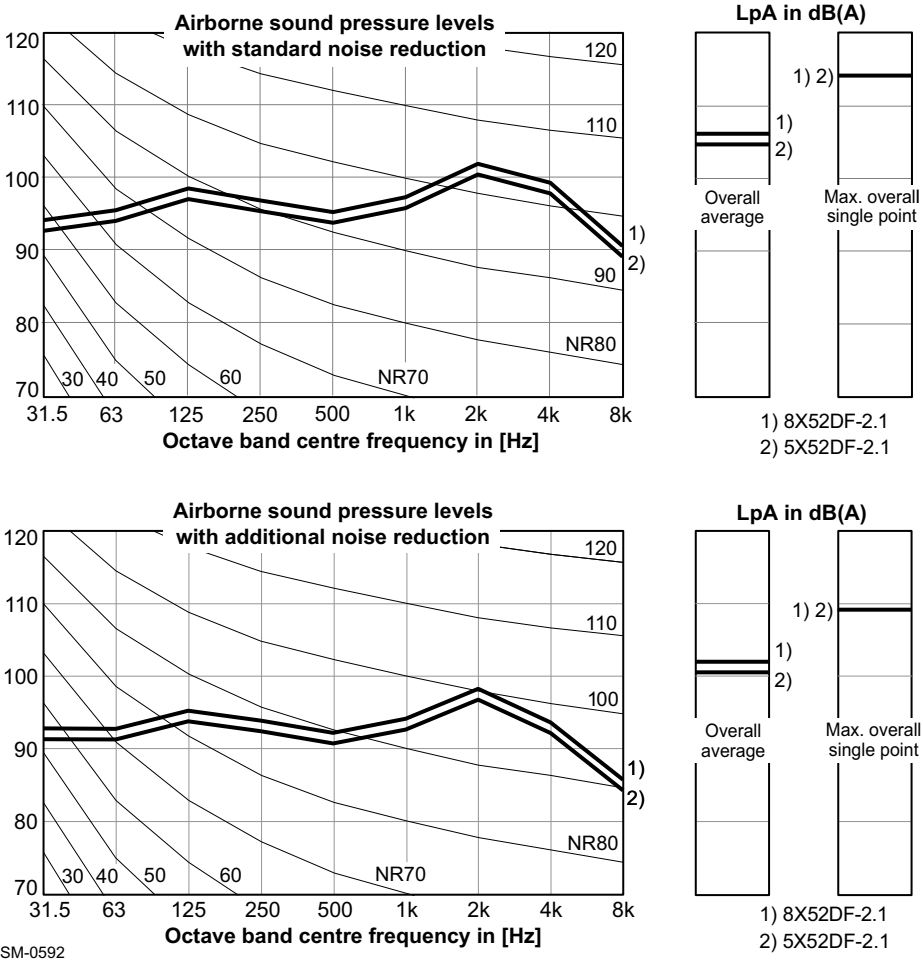


Figure 7-4 Sound pressure level at 1 m distance from the engine

7.2.2 Exhaust noise

In the engine exhaust gas system the sound pressure level at funnel top (see Figure 7-6, 7-9) is related to:

- distance of 1 m from the edge of exhaust gas pipe opening (uptake)
- angle of 30° to gas flow direction (see Figure 7-5, 7-8)
- average values L_p in dB, in comparison with ISO NR-Curves
- overall average values L_{pA} in dB(A)
- without economiser, silencer, exhaust gas bypass.

Each doubling of the distances from the centre of the duct reduces the noise level by about 6 dB.

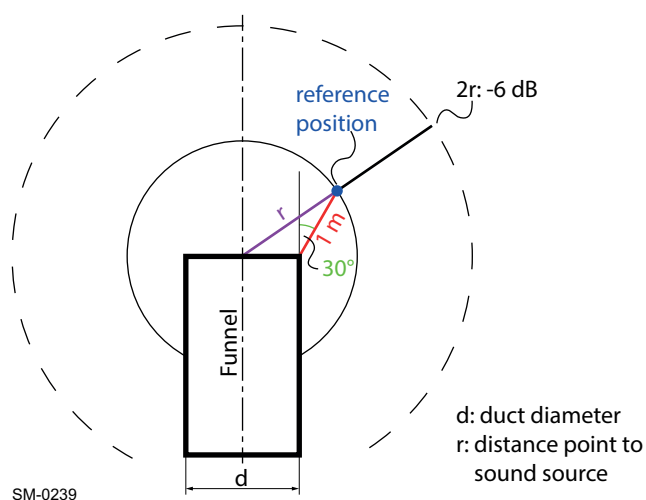


Figure 7-5 Exhaust noise reference point

Silencer after economiser

Depending on the actual noise level allowed on the bridge wing, which is normally 60–70 dB(A), a simple flow silencer of the absorption type may be placed after the economiser, if the noise reduction of the economiser is not sufficient.

Silencer in exhaust line

A silencer in the main engine exhaust line may be considered, as on the X-DF engines an exhaust gas bypass is installed by default.

Dimensioning

The silencers must be dimensioned for a gas velocity of approximately 35 m/s with a pressure loss of approximately 2 mbar at specified Contracted Maximum Continuous Rating (CMCR).

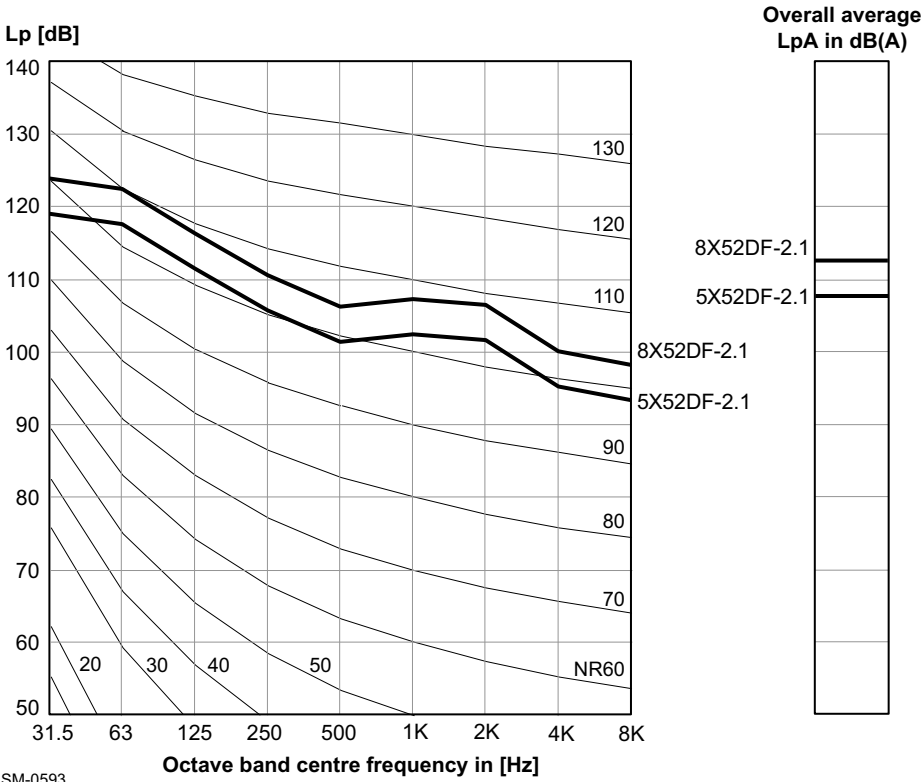


Figure 7-6 Sound pressure level at funnel top of exhaust gas system

7.2.3 Structure-borne noise

The vibrational energy is propagated via engine structure, bedplate flanges and engine foundation to the ship structure which starts to vibrate and, thus, emits noise.

The sound pressure levels in the accommodations can be estimated with standard empirical formulas and the vibration velocity levels.

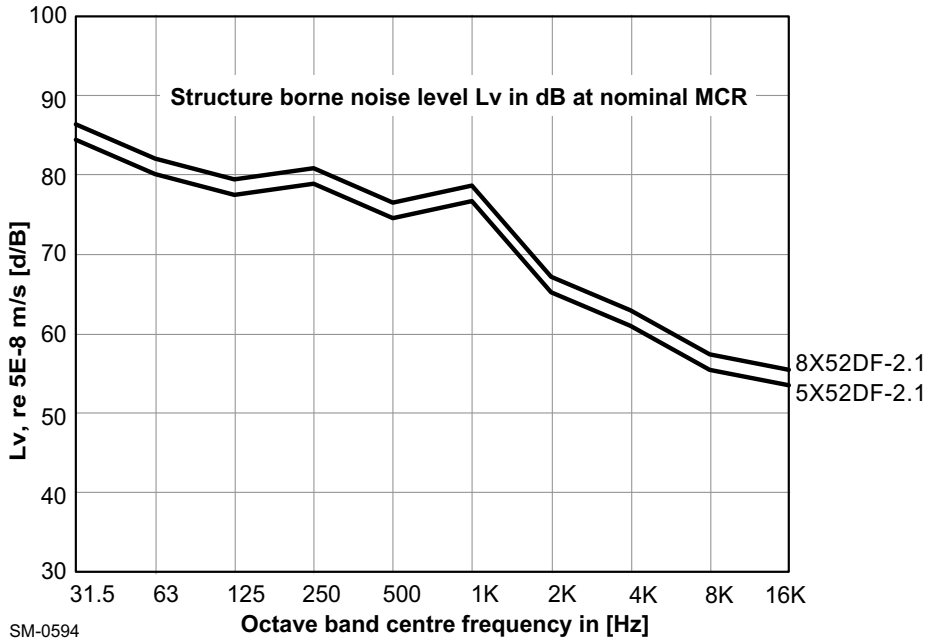


Figure 7-7 Structure-borne noise level at engine feet vertical

8 Engine Dispatch

This chapter describes the necessary measures for transporting the engine from the engine builder to the shipyard or final destination.

Engines are transported complete or as part assemblies, depending on the contract terms.

8.1 Transportation of engines as part assemblies

- Engines transported as part assemblies must be systematically disassembled and cleaned using dry cloths. Each item must be clearly identified with 'paint ball' pen, similar indelible marker, or figure and letter stamps.
- Bearings and running gear must be clearly marked cylinder by cylinder to ensure correct reassembly and to eliminate the risk of parts from one cylinder unit being fitted to another one by mistake.

8.2 Protection of disassembled engines

All parts must be protected against damage by careful crating and against corrosion by applying rust preventing oils or paper.



For further details, please refer to the latest version of "DG 0345 Guideline for Engine Protection – Guideline" available on WinGD web page: [Guideline for engine protection](#).

8.3 Removal of rust preventing oils after transportation

8.3.1 Internal parts

The rust preventing oils applied to the internal parts of an assembled engine have properties similar to Lubricating Oils (LOs). Because they do not contain thickening agents of wax type, the rust preventing oils wash off easily and mix without causing harm to the engine or its systems.

8.3.2 External parts

The wax-type rust preventing oils applied to exposed surfaces of the engine components contain thickening agents of wax. When applied, they form an anti-corrosion coating. This coating must be washed off with gas oil, kerosene or white spirit.

9 Appendix

The Appendix gives an overview of the relevant classification societies and lists abbreviations mentioned throughout this document in alphabetical order. Tables of SI dimensions and conversion factors can also be found here.

9.1 Classification societies

Table 9-1 List of classification societies

IACS	International Association of Classification Societies		
ABS	American Bureau of Shipping	KR	Korean Register
BV	Bureau Veritas	LR	Lloyd's Register
CCS	Chinese Classification Society	NK	Nippon Kaiji Kyokai
CRS	Croatian Register of Shipping	PRS	Polski Rejestr Statkow
DNV	Det Norske Veritas	RINA	Registro Italiano Navale
IRS	Indian Register of Shipping	RS	Russian Maritime Register of Shipping

9.2 List of abbreviations

Table 9-2 List of abbreviations

AMS	Alarm and Monitoring System	EM	Engine Margin
BN	Base Number	EMA	Engine Management and Automation
BOG	Boil-Off Gas	FBOG	Forced Boil-Off Gas
BOR	Boil-Off Rate	FGSS	Fuel Gas Supply System
BPV	Back Pressure Valve	FPP	Fixed Pitch Propeller
BSEC	Brake Specific Energy Consumption	FRV	Flow Regulating Valve
BSEF	Brake Specific Exhaust gas Flow	FSM	Fuel Sharing Mode
BSFC	Brake Specific Fuel Consumption	FW	Freshwater
BSGC	Brake Specific Gas Consumption	GAV	Gas Admission Valve
BSPC	Brake Specific Pilot fuel Consumption	GCU	Gas Combustion Unit
BSR	Barred Speed Range	GTD	General Technical Data (application)
CCW	Cylinder Cooling Water	GVU	Gas Valve Unit
CCWC	Cylinder Cooling Water Cooler	HFO	Heavy Fuel Oil
CEN	European Committee for Standardization	HP	High Pressure
CFR	Certified Flow Rate	HT	High Temperature
CMCR	Contracted Maximum Continuous Rating (Rx)	IACS	International Association of Classification Societies
CPP	Controllable Pitch Propeller	iCAT	Integrated Cylinder lubricant Auto Transfer
CSM	Combustion Stability Mode	ICC	Intelligent Combustion Control
CSR	Continuous Service Rating	iCER	Intelligent Control by Exhaust Recycling
DBT	Delta Bypass Tuning	iELBA	Integrated ELectrical BALancer
DCC	Dynamic Combustion Control	IGC (Code)	International Code of the Construction and Equipment of Ships Carrying Liquefied Gases in Bulk (International Gas Carrier (Code))
DENIS	Diesel Engine coNtrol and optImising Specifi-cation	IGF (Code)	International Code of Safety for Ships using Gases or other Low-Flashpoint Fuels
DF	Dual-Fuel	iGPR	Integrated Gas Pressure Regulation (unit)
DG	Design Group	IMO	International Maritime Organization
DMB, DFB/ DMA, DFA, DMZ, DFZ	Diesel oil quality grades as per ISO 8217	iSCR	Integrated Selective Catalytic Reduction
ECA	Emission Control Area	ISO	International Organization for Standardization
ECR	Engine Control Room	LAH	Level Alarm, High
ECS	Engine Control System	LAL	Level Alarm, Low
EGC	Exhaust Gas Cooler	LCV	Lower Calorific Value

LFO	Light Fuel Oil	PI	Proportional plus Integral
LHV	Lower Heating Value	PRU	Power Related Unbalance
LNG	Liquefied Natural Gas	PSV	Purging and Sealing Valve
LO	Lubricating Oil	PTH	Power Take-Home
LOC	Lubricating Oil Cooler	PTI	Power Take-In
LowTV	Low Torsional Vibration	PTO	Power Take-Off
LP	Low Pressure	RCS	Remote Control System
LR	Light Running margin	SAC	Scavenge Air Cooler
LSH	Level Switch, High	SAE	Society of Automotive Engineers
LSL	Level Switch, Low	SCR	Selective Catalytic Reduction
LLT	Low-load Tuning	SM	Sea Margin
LT	Low Temperature	SOLAS	International Convention for the Safety of Life at Sea
MARPOL	International Convention for the Prevention of Pollution from Ships	SOV	Shut-Off Valve
MCR	Maximum Continuous Rating (R1)	SPC	Steam Production Control
MDO	Marine Diesel Oil (DMB, DFB)	SPS	Synchro-Phasing System
ME	Main Engine	SW	Seawater
MEP	Mean Effective Pressure	TBO	Time between Overhauls
MEPC	Marine Environment Protection Committee	TC	Turbocharger
MFD	Misfiring Detection (device)	tEaT	Temperature Exhaust gas after Turbocharger
MGO	Marine Gas Oil (DMA, DFA, DMZ, DFZ)	tEbE	Temperature Exhaust gas before Economiser
MIDS	Marine Installation Drawing Set	TVC	Torsional Vibration Calculation
MIM	Marine Installation Manual	WECS	WinGD Engine Control System
MN	Methane Number	WHR	Waste Heat Recovery
NBOG	Natural Boil-Off Gas	WiCE	WinGD Integrated Control Electronics
NO _x	Nitrogen Oxides	WiDE	WinGD Integrated Digital Expert
NR (Curve)	ISO Noise Rating (Curve)	WMC	Water Mist Catcher
PCS	Propulsion Control System	X-EL	WinGD Electrification Solutions

9.3 SI dimensions for internal combustion engines

Table 9-3 SI dimensions

Symbol	Definition	SI-Units	Other units
a	Acceleration	m/s ²	
A	Area	m ² , cm ² , mm ²	
BSFC	Brake specific fuel consumption	kg/J, kg/(kWh), g/(kWh)	
c	Specific heat capacity	J/(kgK)	
C, S	Heat capacity, entropy	J/K	
e	Net calorific value	J/kg, J/m ³	
E	Modulus of elasticity	N/m ² , N/mm ²	
F	Force	N, MN, kN	
f, v	Frequency	Hz, 1/s	
I	Current	A	
I, J	Moment of inertia (radius)	kgm ²	
l, L	Length	m, cm, mm	
I _a , I _p	Second moment of area	m ⁴	
K	Coefficient of heat transfer	W/(m ² K)	
L	Angular momentum	Nsm	
L _{(A)TOT}	Total A noise pressure level	dB	
L _{(LIN)TOT}	Total LIN noise pressure level	dB	
L _{OKT}	Average spatial noise level over octave band	dB	
m	Mass	t, kg, g	
M, T	Torque moment of force	Nm	
N, n	Rotational frequency	1/min, 1/s	rpm
p	Momentum	Nm	
p	Pressure	N/m ² , bar, mbar, kPa	1 bar = 100kPa 100mmWG = 1 kPa
P	Power	W, kW, MW	
q _m	Mass flow rate	kg/s	
q _v	Volume flow rate	m ³ /s	
t	Time	s, min, h, d	
T, Θ, t, θ	Temperature	K, °C	
U	Voltage	V	
V	Volume	m ³ , dm ³ , l, cm ³	
v, c, w, u	Velocity	m/s, km/h	Kn

Symbol	Definition	SI-Units	Other units
W, E, A, Q	Energy, work, quantity of heat	J, kJ, MJ, kWh	
Z, W	Section modulus	m ³	
$\Delta T, \Delta \Theta, \dots$	Temperature interval	K, °C	
α	Angular acceleration	rad/s ²	
α	Linear expansion coefficient	1/K	
$\alpha, \beta, \gamma, \delta, \varphi$	Angle	rad, °	
γ, σ	Surface tension	N/m	
η	Dynamic viscosity	Ns/m ²	
λ	Thermal conductivity	W/(mK)	
ν	Kinematic viscosity	m ² /s	cSt, RW1
ρ	Density	kg/m ³ , kg/dm ³ , g/cm ³	
σ, τ	Stress	N/m ² , N/mm ²	
ω	Angular velocity	rad/s	

9.4 Approximate conversion factors

Table 9-4 Conversion factors

Length	1 in	=	25.4 mm
	1 ft	= 12 in	= 304.8 mm
	1 yd	= 3 feet	= 914.4 mm
	1 statute mile	= 1760 yds	= 1609.3 m
	1 nautical mile	= 6080 feet	= 1853 m
Mass	1 oz	=	0.0283 kg
	1 lb	= 16 oz	= 0.4536 kg
	1 long ton	=	1016.1 kg
	1 short ton	=	907.2 kg
	1 tonne	=	1000 kg
Volume (fluids)	1 Imp. pint	=	0.568 l
	1 U.S. pint	=	0.473 l
	1 Imp. quart	=	1.136 l
	1 U.S. quart	=	0.946 l
	1 Imp. gal	=	4.546 l
	1 U.S. gal	=	3.785 l
	1 Imp. barrel	= 36 Imp. gal	= 163.66 l
	1 barrel petroleum	= 42 U.S. gal	= 158.98 l
Force	1 lbf (pound force)	=	4.45 N
Pressure	1 psi (lb/sq in)	=	6.899 kPa (0.0689 bar)
Velocity	1 mph	=	1.609 km/h
	1 knot	=	1.853 km/h
Acceleration	1 mphps	=	0.447 m/s ²
Temperature	1 °C	=	0.55 x (°F -32)
Energy	1 BTU	=	1.06 kJ
	1 kcal	=	4.186 kJ
Power	1 kW	=	1.36 bhp
	1 kW	=	860 kcal/h
Volume	1 in ³	=	16.4 cm ³
	1 ft ³	=	0.0283 m ³
	1 yd ³	=	0.7645 m ³

Area	1 in ²	=	6.45 cm ²
	1 ft ²	=	929 cm ²
	1 yd ²	=	0.836 m ²
	1 acre	=	4047 m ²
	1 sq mile (of land)	= 640 acres =	2.59 km ²

WinGD Ltd. in brief

WinGD Ltd. is a leading developer of low-speed gas and diesel engines used for propulsion power in merchant shipping. WinGD sets the industry standard for environmental sustainability, reliability, efficiency and safety. WinGD provides designs, training and technical support to engine manufacturers, shipbuilders and ship operators worldwide. Headquartered in Winterthur, Switzerland, since its inception as the Sulzer Diesel Engine business in 1893, it carries on the legacy of excellence in design.

www.wingd.com

WIN GD